

BOXER BM 150



BOXER BM 150

Spare Parts Catalogue



Notice

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO.: XXXXXXXX

REV. Feb.19

Foreword

We have pleasure in presenting the Spare Parts Catalogue for 'BOXER 150' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Export Service Department
Akurdi, Pune 411 035 India
Phone : 020-27406557
Fax : 020-27407385

Instructions

1. How to Read the Catalogue : Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

2. How to Order Spare Parts : The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

3. Part Number System : We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

4. Abbreviations : The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

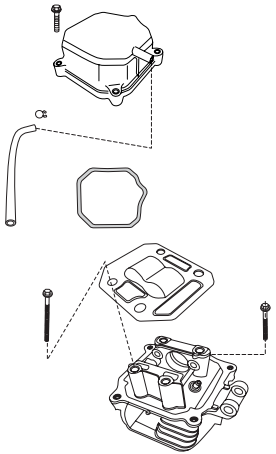
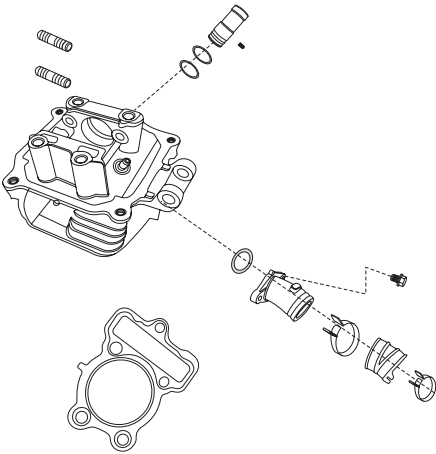
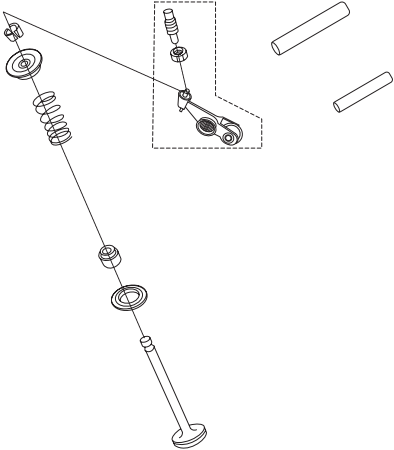
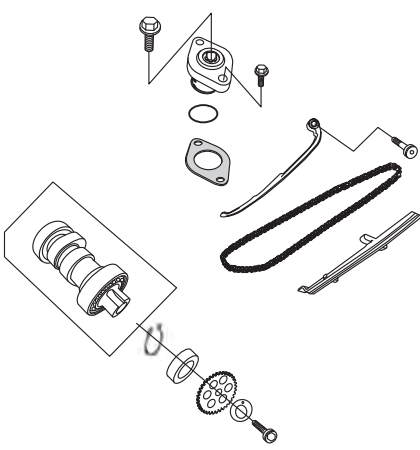
Index

Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	Cylinder Head	4
3	Valve	6
4	Camshaft / Tensioner	8
5	Cylinder & Piston	10
6	Crankshaft	12
7	Transmission	14
8	Change Drum / Shift Fork	16
9	Gear Change Mechanism	18
10	Engine Assly & Crankcase RH	20
11	Crankcase LH	22
12	Cover RH	24
13	Cover Magneto	26
14	Clutch	28
15	Kick Starter Mechanism	30
16	Carburettor	32
17	Air Cleaner Complete	34
18	Silencer Assly	36
19	Oil Pump	38
20	Starter Assly	40
21	Magneto / C.D.I. / H.T. Coil	42
22	Seat Assly / Grip Frame	44
23	Engine Mountings	46

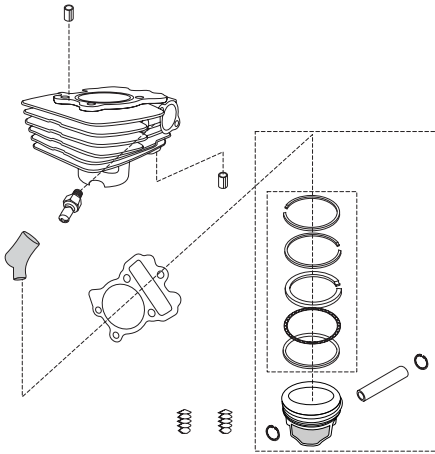
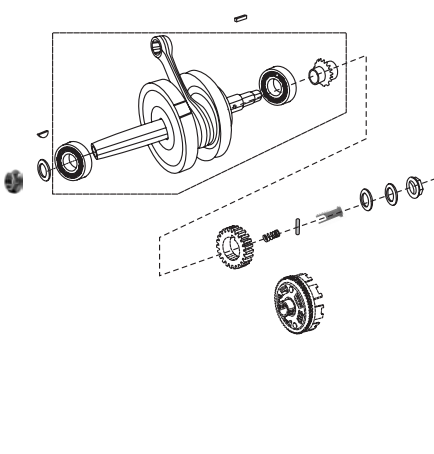
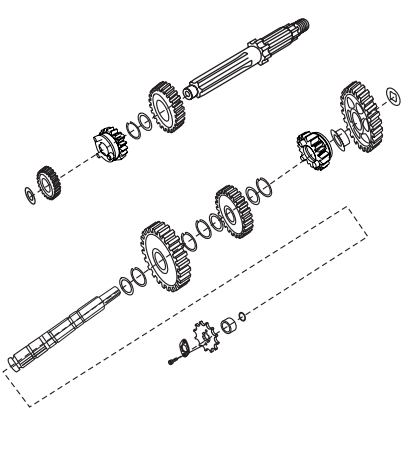
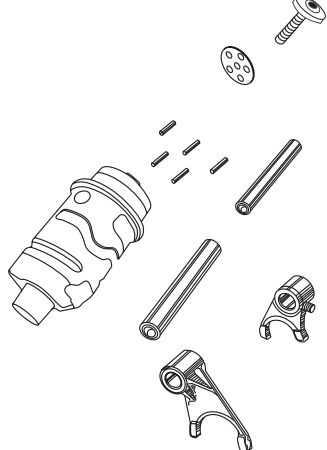
Index

Plate No.	Description	Page No.
27	Mudguard Front & Rear	54
28	Stand Assembly	56
29	Tyre / Tube / Rim	58, 60
30	Front Hub	62, 64
31	Rear Hub	66, 68
32	Rear Brake Pedal	70
33	Handle Bar	72, 74
34	Front Fork	76, 78
35	Painted Parts & Decals	80
36	Petrol Tank, Cap Tank & Gauge Fuel	82
37	Fittings - Petrol Tank, Side Cover & Cover Seat	84
38	Meter Assembly	86
39	Control Cables	88
40	Chain Case	90
41	Head Lamp & Fairing	92, 94
42	Indicator Light Assembly	96
43	Tail Lamp Assembly / Front Number Plate	98
44	Electrical Equipments	100
45	Tool Kit	102
46	Accessories / Grab Handle	104
	Kits List	105 to 108
	Amendment Sheet (Parts Added & Deleted)	109, 110
	Part Index	111 to 124

Pictorial Index

PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 2	PLATE NO. : 2 CYLINDER HEAD	PAGE NO. 4
			
PLATE NO. : 3 VALVE	PAGE NO. 6	PLATE NO. : 4 CAMSHAFT / TENSIONER	PAGE NO. 8
			

Pictorial Index

PLATE NO. : 5 CYLINDER & PISTON	PAGE NO. 10	PLATE NO. : 6 CRANKSHAFT	PAGE NO. 12
			
PLATE NO. : 7 TRANSMISSION	PAGE NO. 14	PLATE NO. : 8 CHANGE DRUM / SHIFT FORK	PAGE NO. 16
			

Pictorial Index

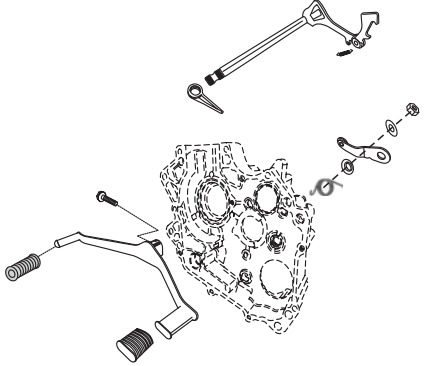
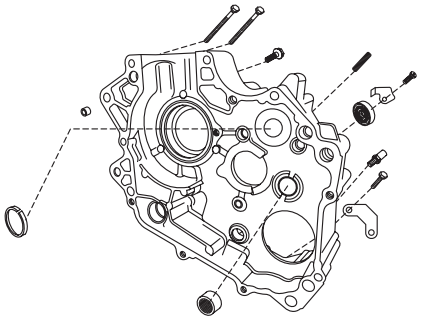
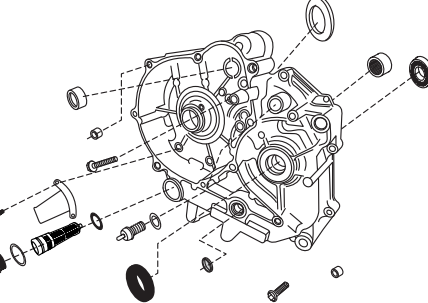
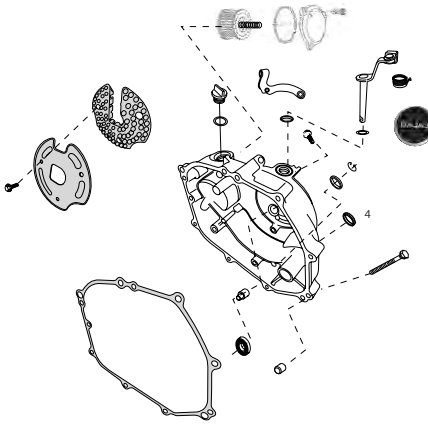
PLATE NO. : 9 GEAR CHANGE MECHANISM	PAGE NO. 18	PLATE NO. : 10 ENGINE ASSLY / CRANKCASE RH	PAGE NO. 20
			

PLATE NO. : 11 CRANKCASE LH	PAGE NO. 22	PLATE NO. : 12 COVER RH	PAGE NO. 24
			

Pictorial Index

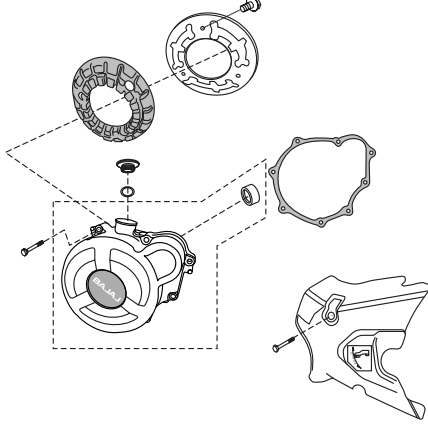
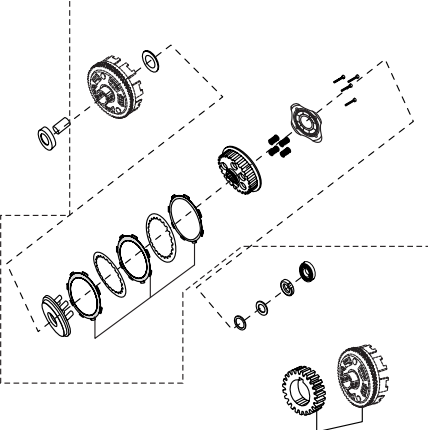
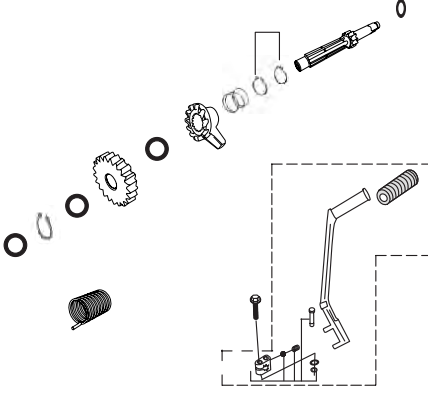
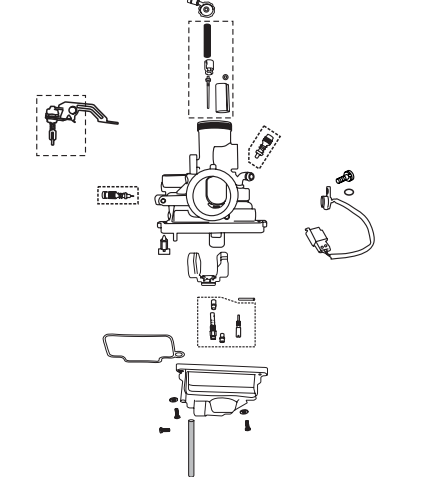
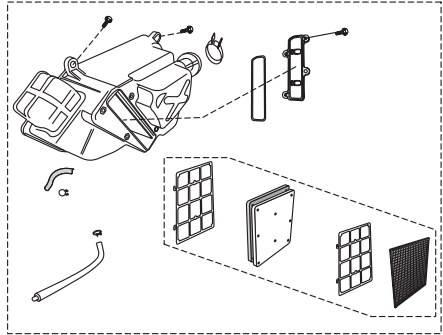
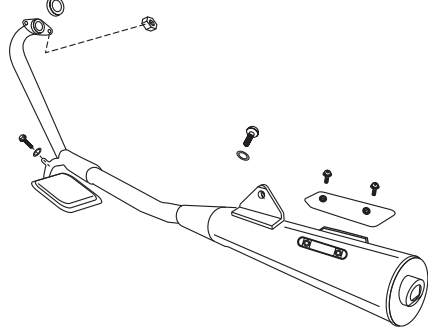
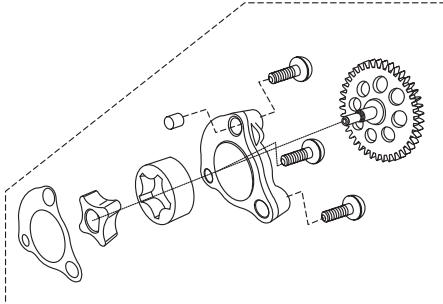
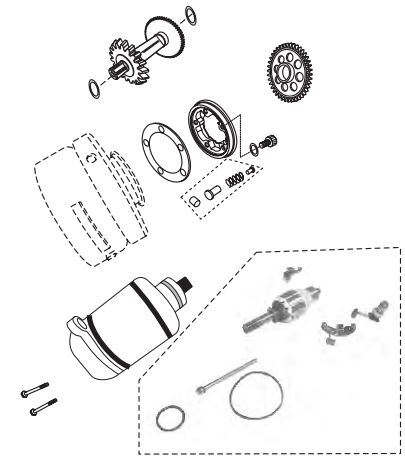
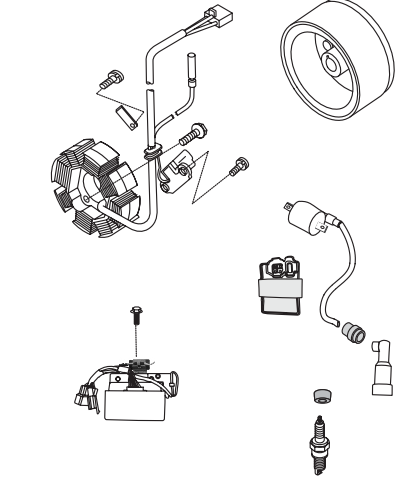
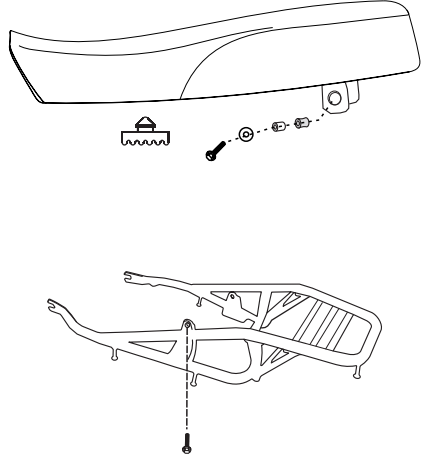
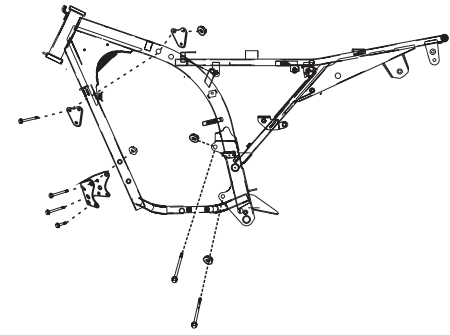
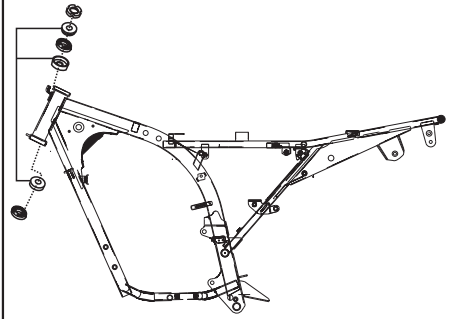
PLATE NO. : 13 COVER MAGNETO	PAGE NO. 26	PLATE NO. : 14 CLUTCH	PAGE NO. 28
			

PLATE NO. : 15 KICK STARTER MECHANISM	PAGE NO. 30	PLATE NO. : 16 CARBURETOR	PAGE NO. 32
			

Pictorial Index

PLATE NO. : 17 AIR CLEANER COMPLETE	PAGE NO. 34	PLATE NO. : 18 SILENCER ASSLY	PAGE NO. 36
			
PLATE NO. : 19 OIL PUMP	PAGE NO. 38	PLATE NO. : 20 STARTER ASSEMBLY	PAGE NO. 40
			

Pictorial Index

PLATE NO. : 21 MAGNETO, CDI & H.T. COIL	PAGE NO. 42	PLATE NO. : 22 SEAT ASSEMBLY	PAGE NO. 44
			
PLATE NO. : 23 ENGINE MOUNTING	PAGE NO. 46	PLATE NO. : 24 FRAME & FRAME FITTING	PAGE NO. 48
			

Pictorial Index

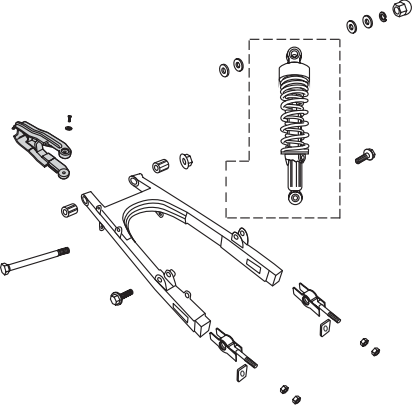
PLATE NO. : 25 SWING ARM / REAR SHOCK ABSORBER 50	PAGE NO. 50
	

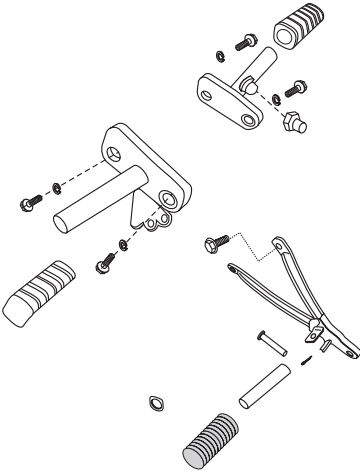
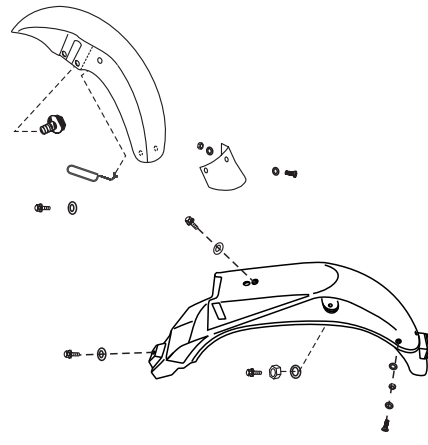
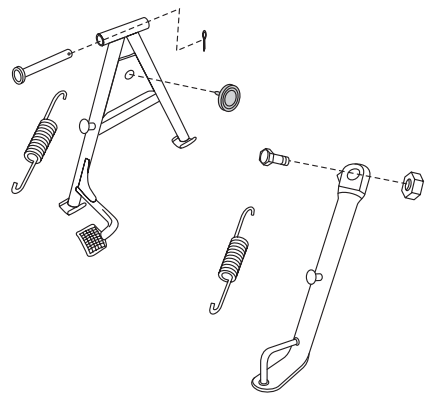
PLATE NO. : 26 RIDER FOOT REST / PILLION FOOT REST 52	PAGE NO. 52
	

PLATE NO. : 27 MUD GUARD - FRONT & REAR 54	PAGE NO. 54
	
PLATE NO. : 28 STAND ASSEMBLY 56	PAGE NO. 56
	

Pictorial Index

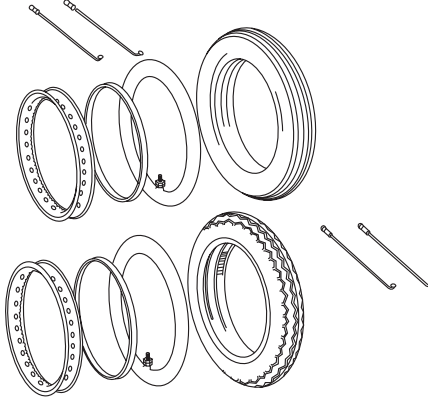
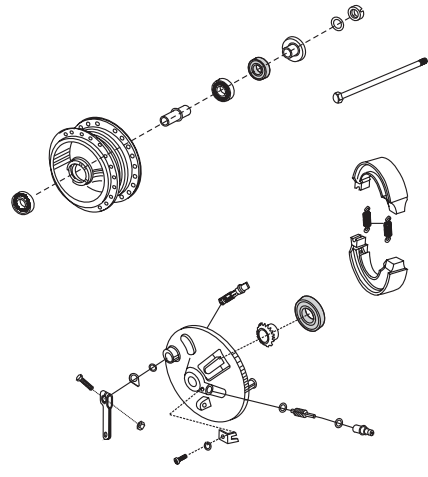
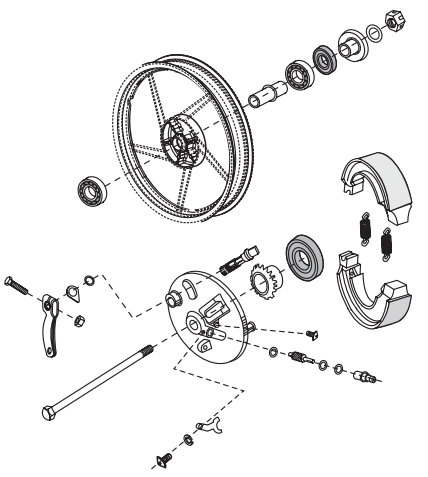
PLATE NO. : 29 TYRE, TUBE & RIM 58	PAGE NO. 58
	
PLATE NO. : 29 TYRE, TUBE & RIM (ALLOY WHEEL) 60	PAGE NO. 60
	

PLATE NO. : 30 FRONT HUB (FOR SPOKE WHEEL) 62	PAGE NO. 62
	
PLATE NO. : 30 FRONT HUB (FOR ALLOY WHEEL) 64	PAGE NO. 64
	

Pictorial Index

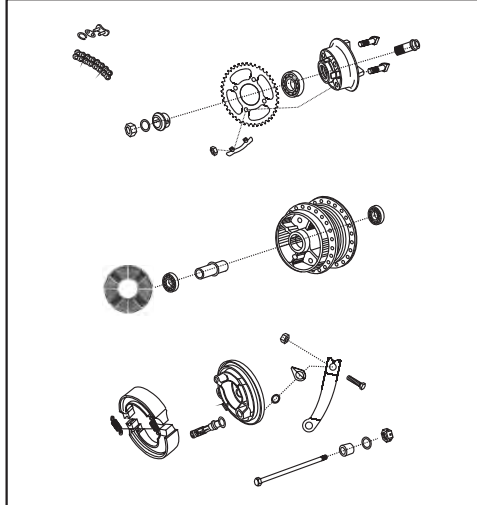
PLATE NO. : 31 REAR HUB (FOR SPOKE WHEEL)	PAGE NO. 66
	

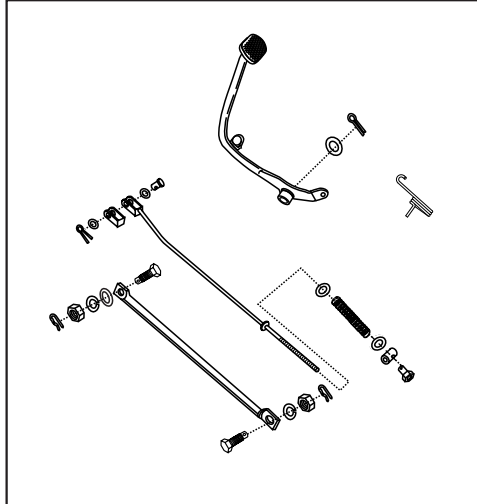
PLATE NO. : 32 REAR BRAKE PEDAL	PAGE NO. 70
	

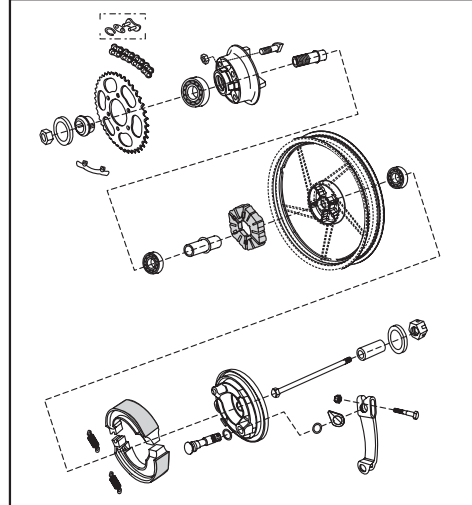
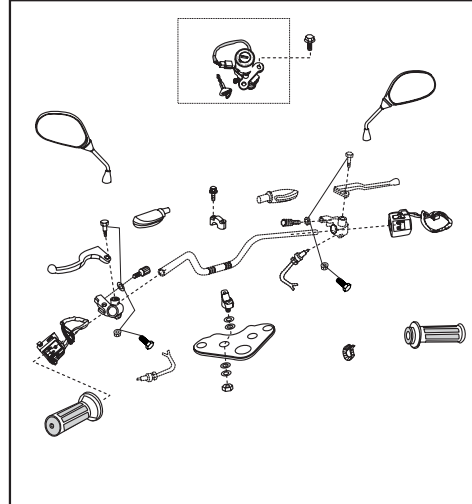
PLATE NO. : 31 REAR HUB (FOR ALLOY WHEEL)	PAGE NO. 68
	

PLATE NO. : 33 HANDLE BAR	PAGE NO. 72,74
	

Pictorial Index

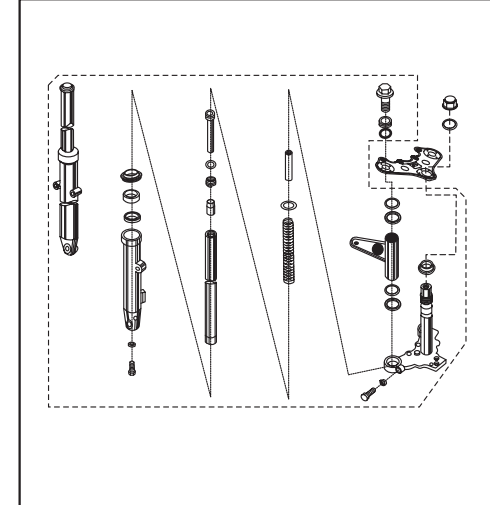
PLATE NO. : 34 FRONT FORK (FOR W/O FAIRING)	PAGE NO. 76
	

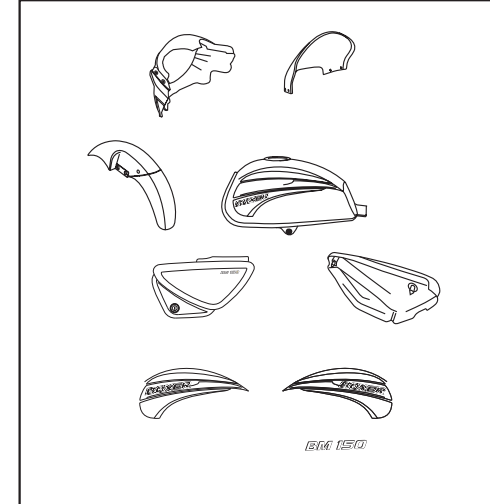
PLATE NO. : 34 FRONT FORK (FOR FAIRING)	PAGE NO. 78
	

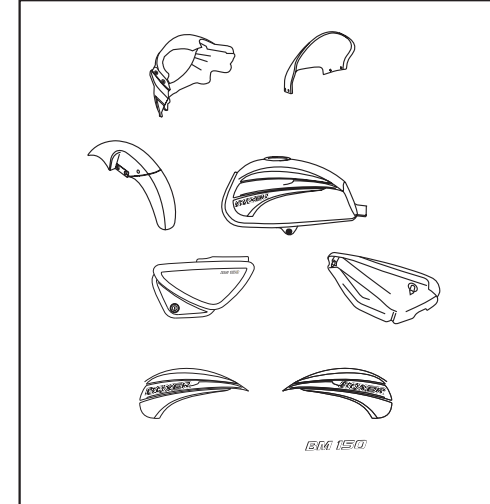
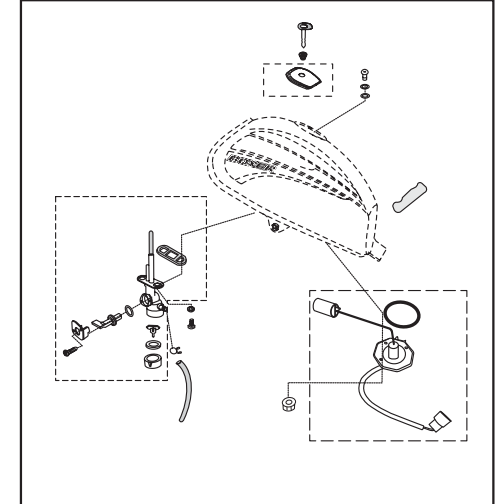
PLATE NO. : 35 PAINTED PARTS & DECALS	PAGE NO. 80
	

PLATE NO. : 30 FUEL TANK, CAP TANK & GAUGE FUEL	PAGE NO. 82
	

Pictorial Index

PLATE NO. : 37 FITTING - FUEL TANK, SIDE COVER & COVER SEAT	PAGE NO. 84
---	----------------

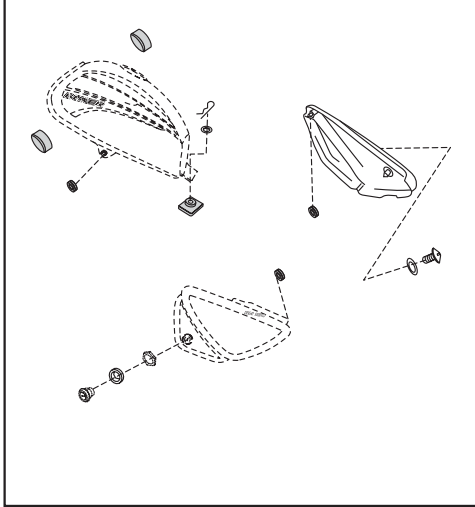


PLATE NO. : 38 METER ASSLY	PAGE NO. 86
-------------------------------	----------------

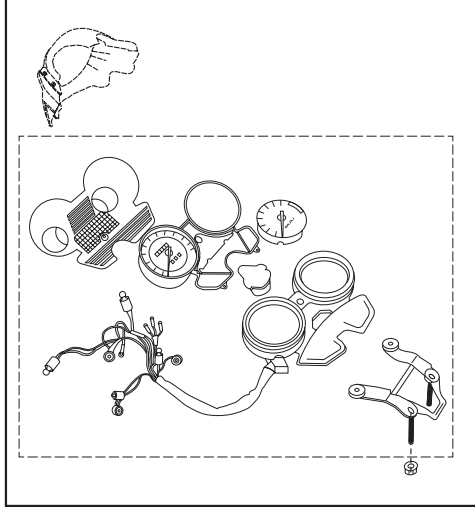


PLATE NO. : 39 CONTROL CABLES	PAGE NO. 88
----------------------------------	----------------


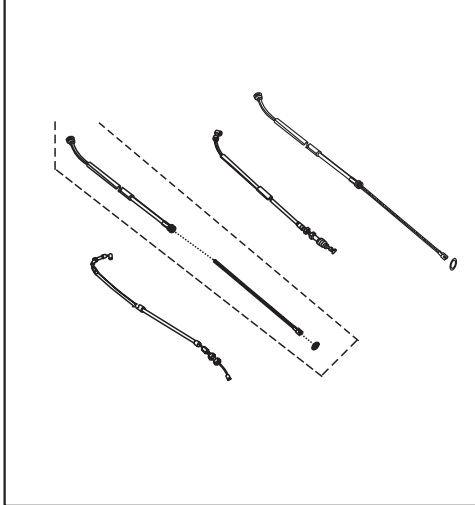


PLATE NO. : 40 CHAIN CASE	PAGE NO. 90
------------------------------	----------------

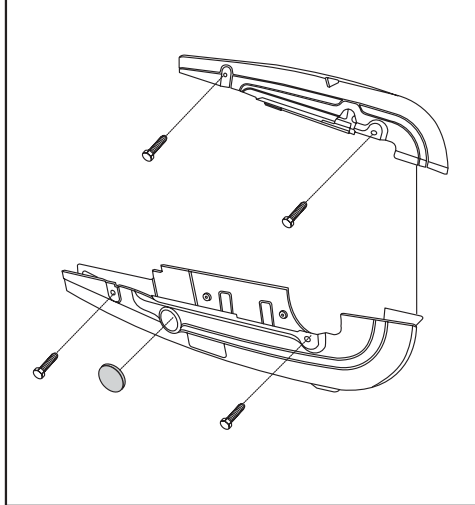

Pictorial Index

PLATE NO. : 41 HEADLAMP WITHOUT FAIRING	PAGE NO. 92
--	----------------

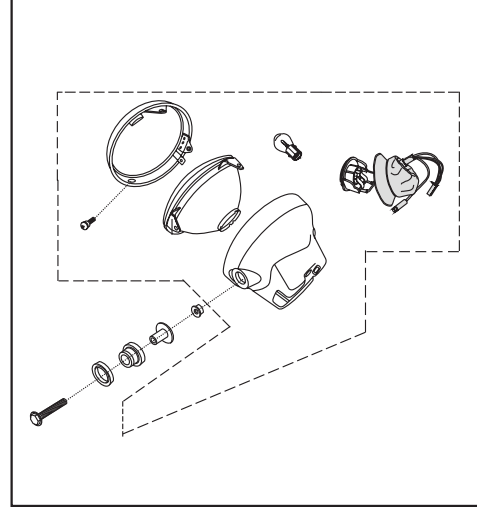


PLATE NO. : 41 HEADLAMP WITH FAIRING	PAGE NO. 94
---	----------------

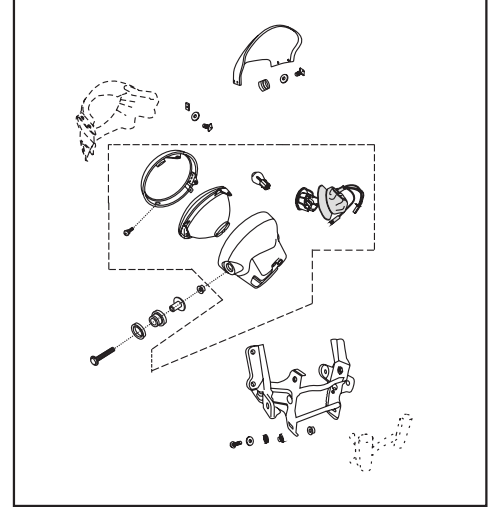


PLATE NO. : 42 INDICATOR LIGHT ASSLY	PAGE NO. 96
---	----------------


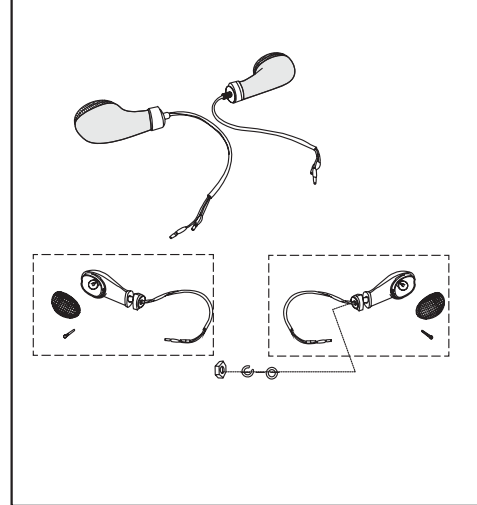
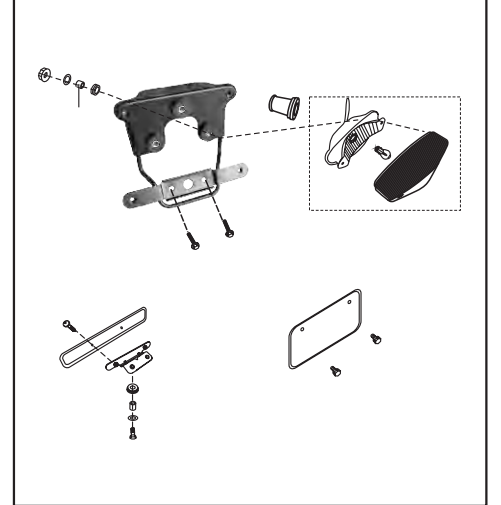
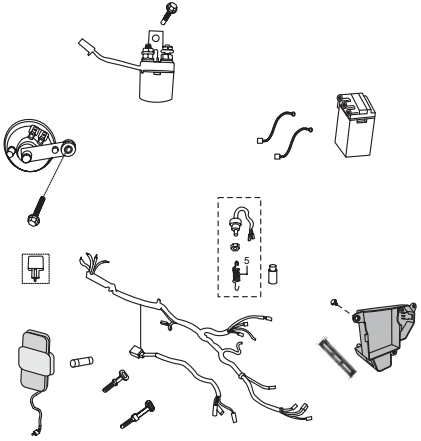
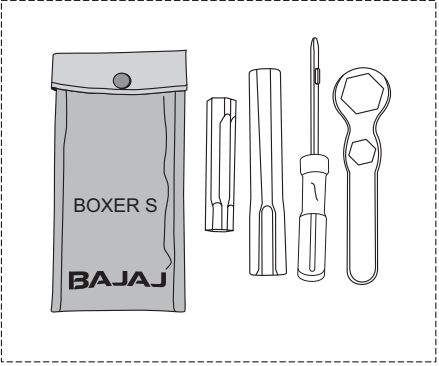


PLATE NO. : 43 TAIL LIGHT ASSLY / FR NUMBER PLATE	PAGE NO. 98
--	----------------

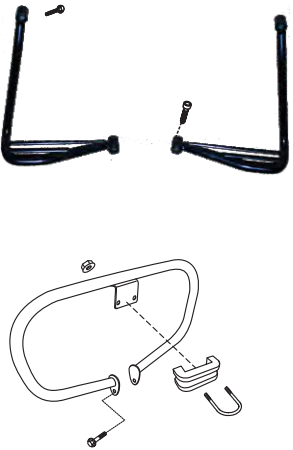


Pictorial Index

PLATE NO. : 44 ELECTRICAL EQUIPMENTS	PAGE NO. 100	PLATE NO. : 45 TOOL KIT	PAGE NO. 102
			
PLATE NO. : 46 ACCESSORIES	PAGE NO. 104	PLATE NO. :	PAGE NO.
			


Pictorial Index

PLATE NO. :	PAGE NO.	PLATE NO. :	PAGE NO.
PLATE NO. :	PAGE NO.	PLATE NO. :	PAGE NO.

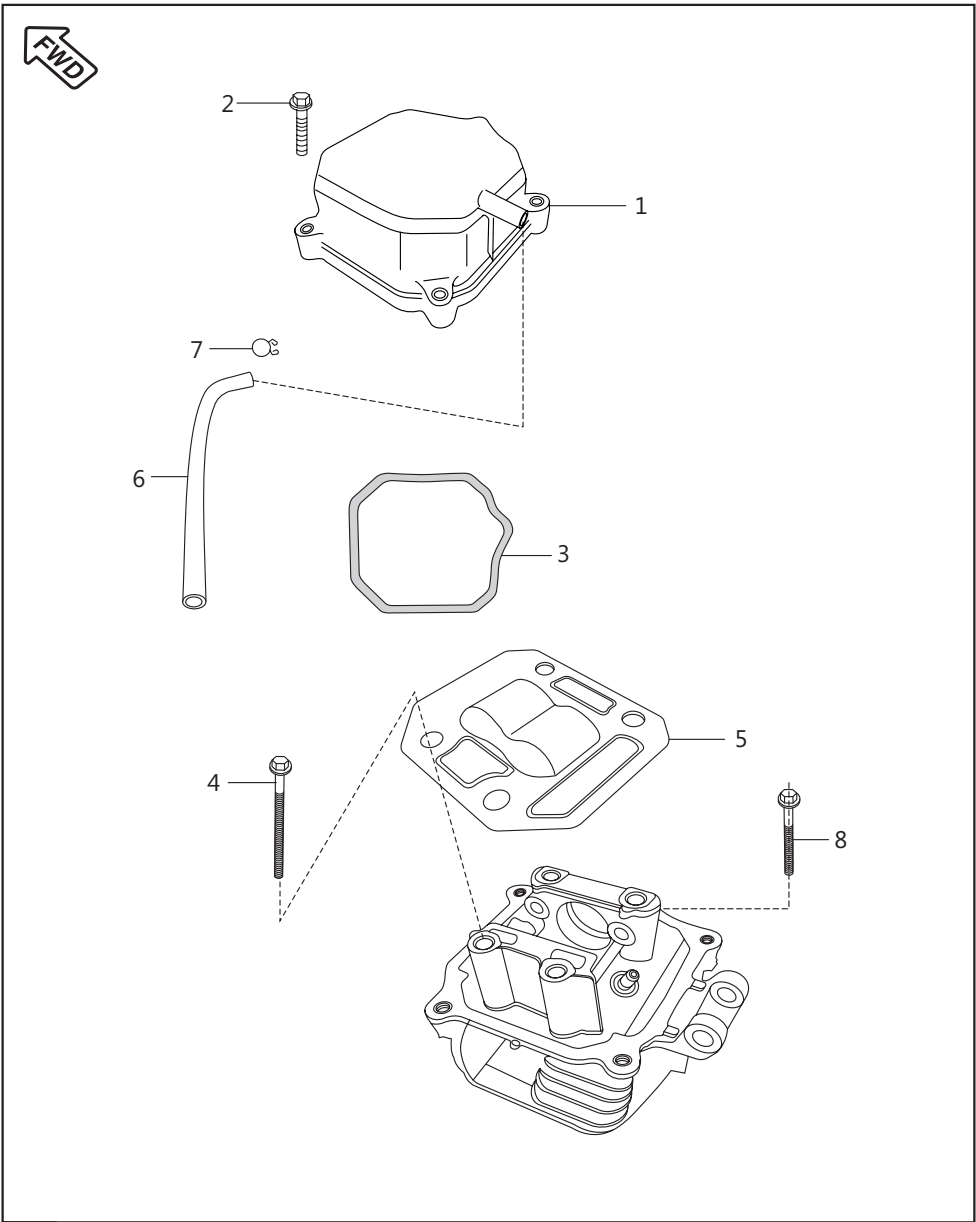


Cover Cylinder Head

No.	Part No.	Description	Qty	Remarks
1	JZ 5110 21	Cover Cylinder Head Assly	1	
2	59 0400 38	Bolt	1	
3	JD 5110 10	Gasket Head Cover	1	
4	JA 5110 08	Bolt Head Mounting	4	M8 X 1.25 X 196L
5	PA 5110 39	Plate Cylinder Head	1	
6	JA 5110 11	Hose Breather	1	
7	DP 1210 25	Clamp	3	
	DG 1210 40	Clamp	3	Ref. Cir. IB 321
8	PF 5110 21	Flange Bolt	1	M8 X 142

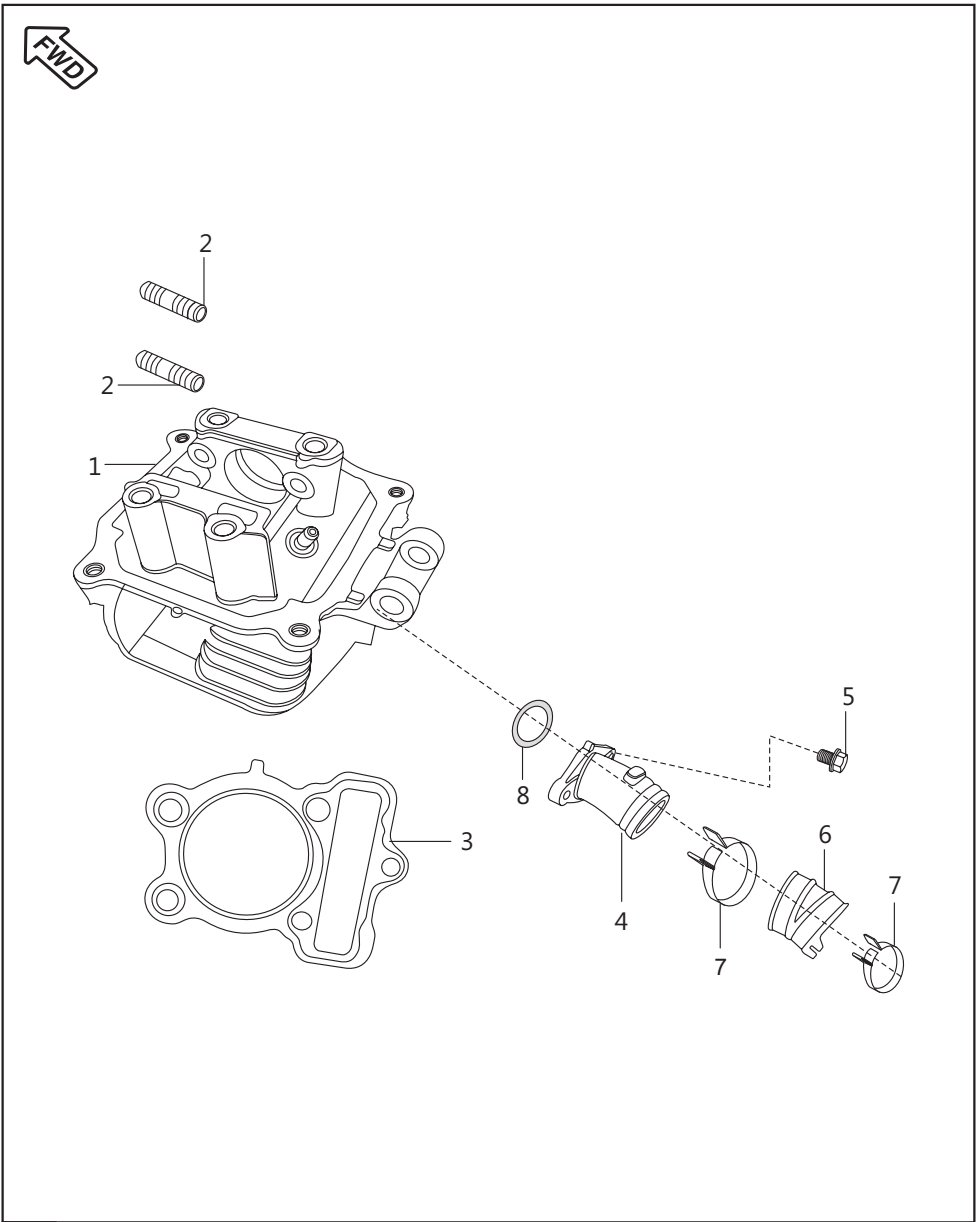


Cylinder Head

No.	Part No.	Description	Qty	Remarks
1	36 PF00 01	Kit Asly Cylinder Head	1	With studs &Valve Guide
2	JA 5110 28	Stud	2	
3	JZ 5110 16	Gasket Cylinder Head	1	
4	PF 5814 01	Intake Manifold	1	
5	JA 5814 06	Bolt Flange	2	
6	PF 5814 02	Sleeve (Carb - Duct Rubber)	1	
7	DH 1210 38	Clamp	2	
8	39 2539 21	'O' Ring (Intake Pipe)	1	

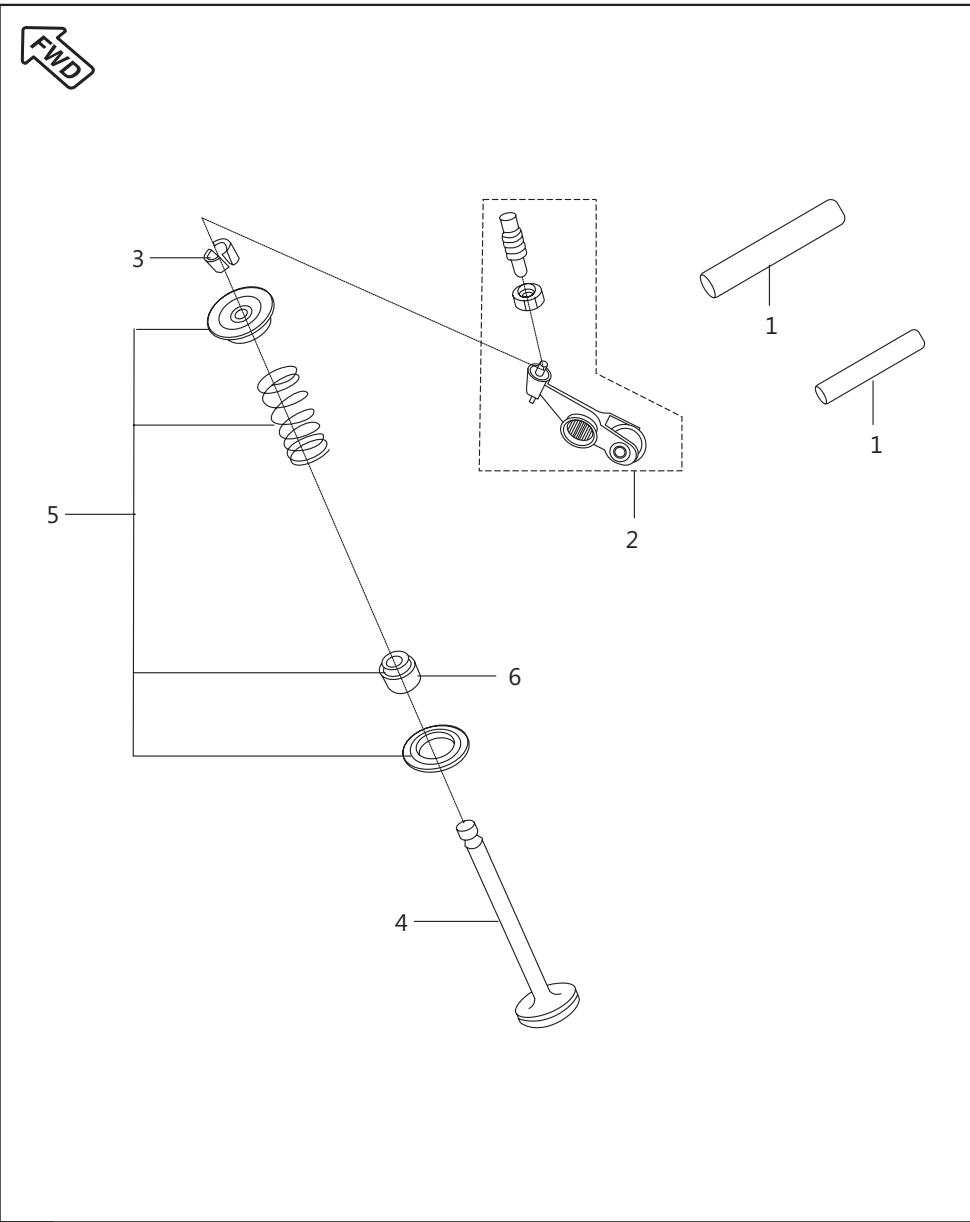


Valve

No.	Part No.	Description	Qty	Remarks
1	JA 5112 11	Shaft Rocker Arm	2	48.2 mm
2	JZ 5112 03	Rocker Arm with Roller	2	
3	DG 1010 29	Cotter Valve (Collet)	4	
4	36 JZ00 01	Valve Kit	1	Refer Page No. 105
5	36 JZ00 04	Valve Repair Kit	1	Refer Page No. 105
6	39 2017 19	Seal Valve Stem	2	

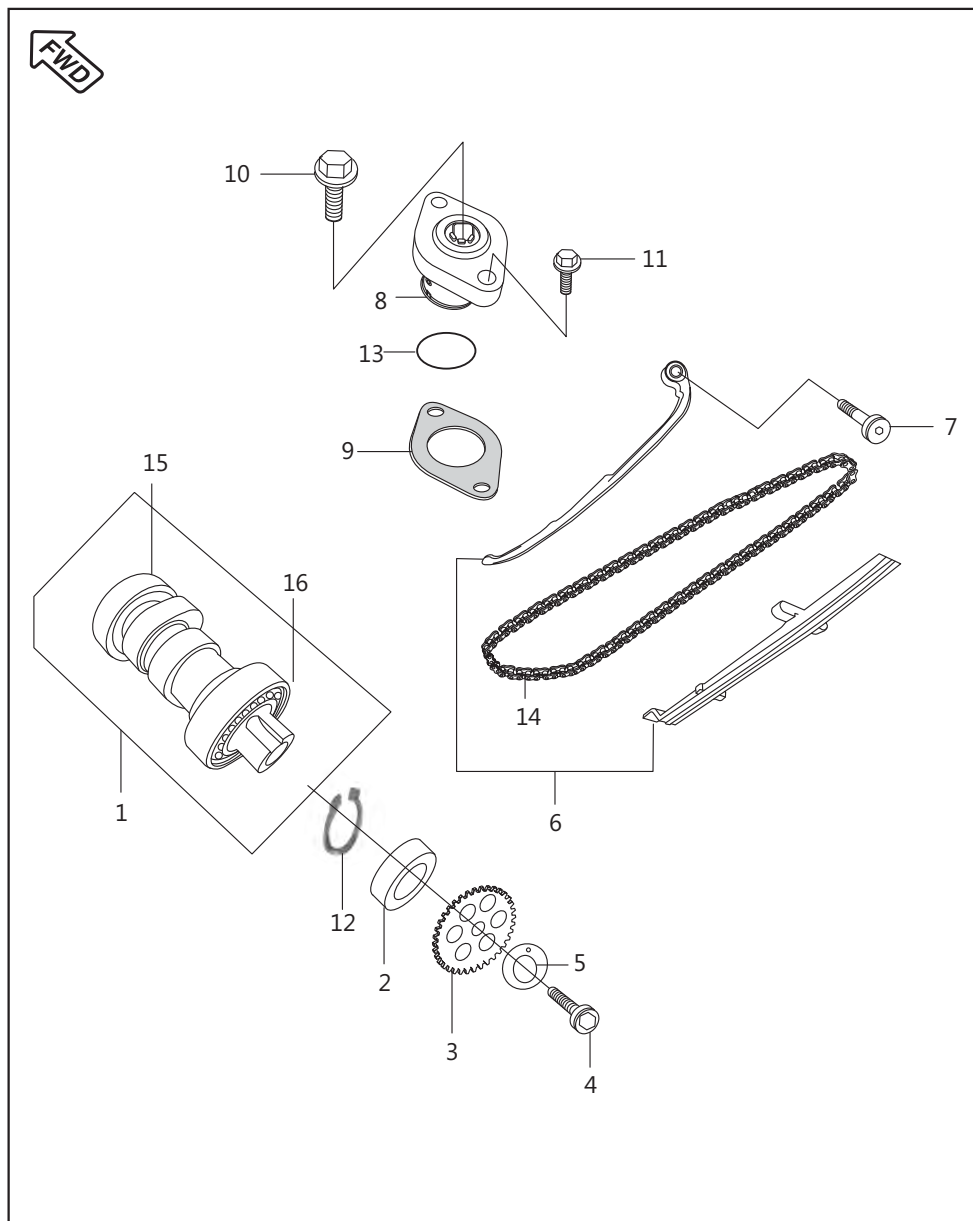


Camshaft / Tensioner

No.	Part No.	Description	Qty	Remarks
1	JZ 5110 04	Camshaft Complete	1	
2	JA 5112 16	Spacer Cam Sprocket	1	
3	DS 1012 76	Sprocket Cam Shaft - 32 T	1	
4	DH 1013 87	Hex Head Bolt	1	
	DK 1013 86	Precoated soc. Head Cap Bolt	1	From Dec 12
5	DH 1010 48	Special Washer Cam Shaft	1	'O' Washer
6	36 JE00 03	Guide Chain Kit	1	Refer Page No. 105
7	DH 1013 92	Cam chain Tensioner Pivot Bolt	1	
8	JV 5210 03	Adjuster Chain Silver	1	
9	CS 1011 28	Gasket	1	
10	DD 1010 62	Bolt flange M6	1	
11	39 1673 04	Bolt M6 X 20 Silver	2	
12	39 0594 17	Circlip for Camshaft	1	
13	39 2669 21	'O' Ring (Tensioner)	1	
14	DS 1099 05	Cam Chain (94 Link)	1	
15	39 1880 20	Bearing Ball - Small 15 X 32 X 9	1	W X OD X ID
16	39 2683 20	Bearing Ball - Big 17 X 35 X 10	1	

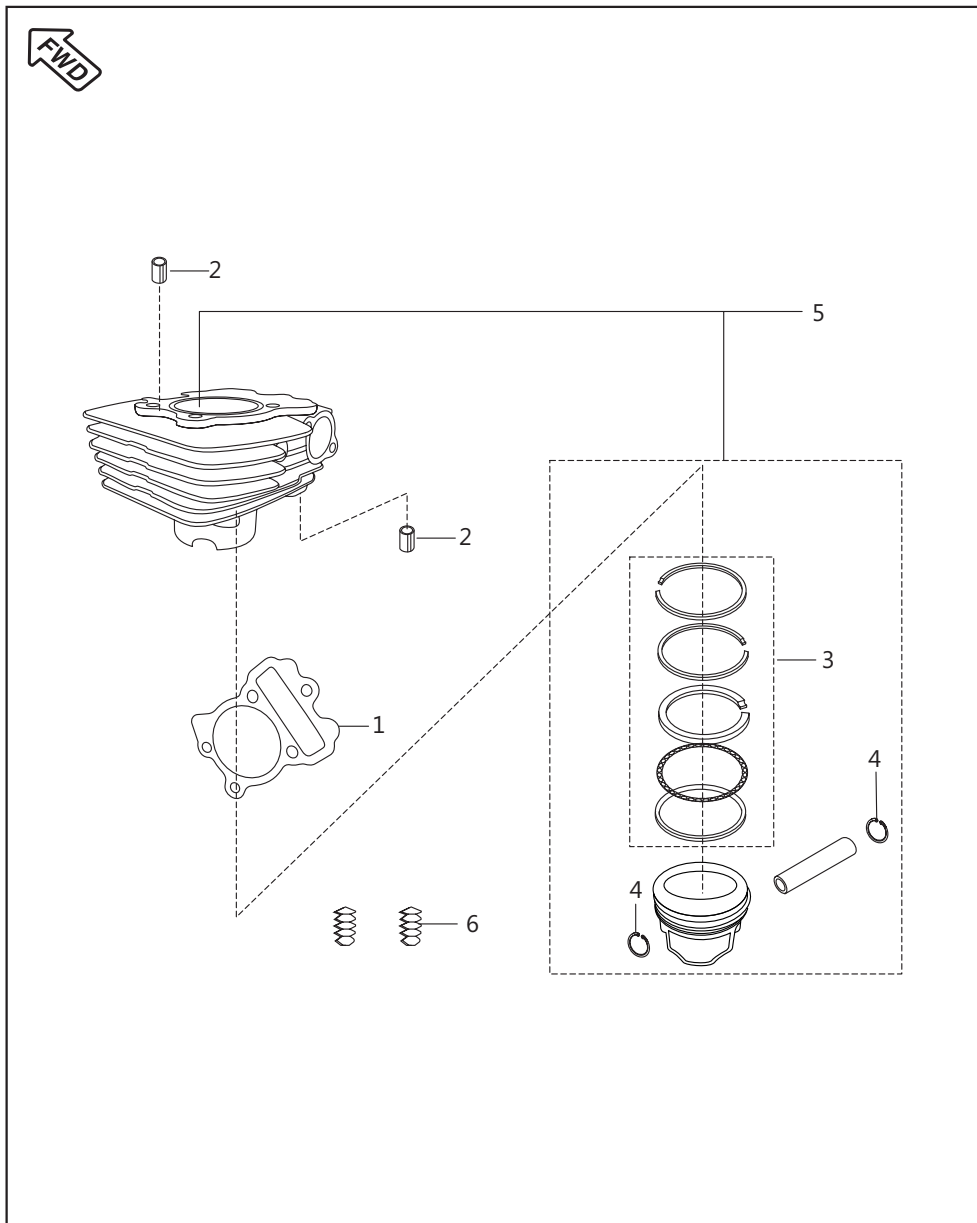

Cylinder and Piston


No.	Part No.	Description	Qty	Remarks
1	JD 5210 02	Gasket Cylinder Block	1	
	JH 5210 07	Gasket Cylinder Block	1	Ref. Cir. IB: 321
	PF 5210 14	Gasket Cylinder Block	1	For Egypt Ref Cir IB-253
	PF 5210 30	Gasket Cylinder Block	1	For Egypt Ref Cir IB-321
2	39 1000 06	Dowel Pin	2	
3	36 PF01 16	Kit Piston Ring	1	Refer Page No. 105
4	DP 1011 65	Ring Snap	2	
5	36 PF00 02	Kit Cylinder Block / Piston Assly.	1	Refer Page No. 107
6	JA 5210 15	Damper Cylinder Block	3	

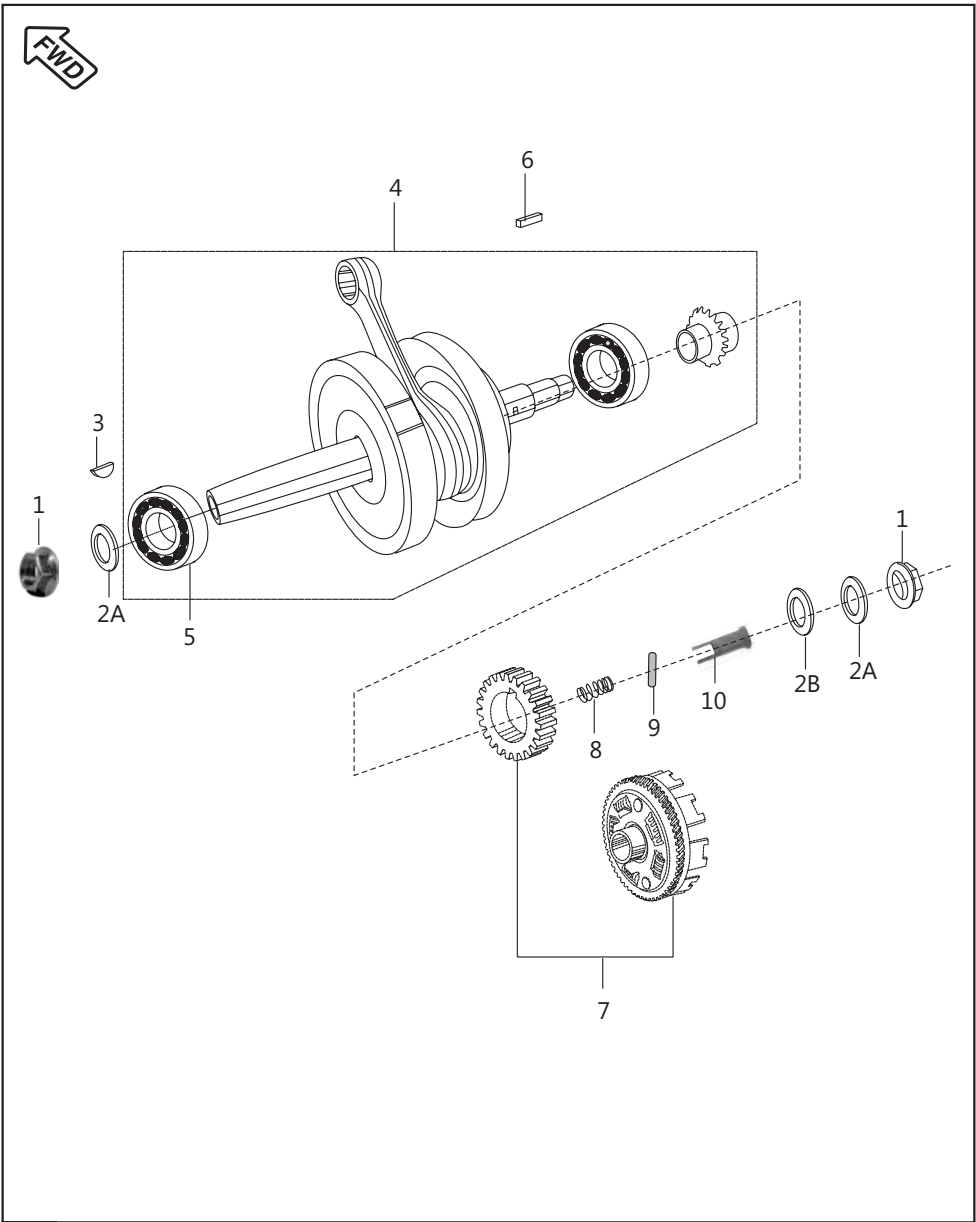

 Front Wheel Direction


Crankshaft

No.	Part No.	Description	Qty	Remarks
1	59 1500 14	Flange Nut	2	Refer Page No. 107
2A	59 1200 03	Belleville Washer	2	
2B	59 1100 08	Plain Washer	1	
3	31 1011 73	Key Woodruff	1	
4	PF 5310 00	Crank Shaft Assly	1	
5	JE 5310 01	Ball Bearing 56 X 22 X 16	2	
6	DS 1011 54	Parallel Key	1	
7	36 JZ00 03	Set Primary Drive / Driven	1	
8	JA 531012	Spring	1	
9	JA 5310 15	Pin Crank Shaft Plunger	1	
10	JB 5310 21	Plunger Oil Crank Shaft	1	

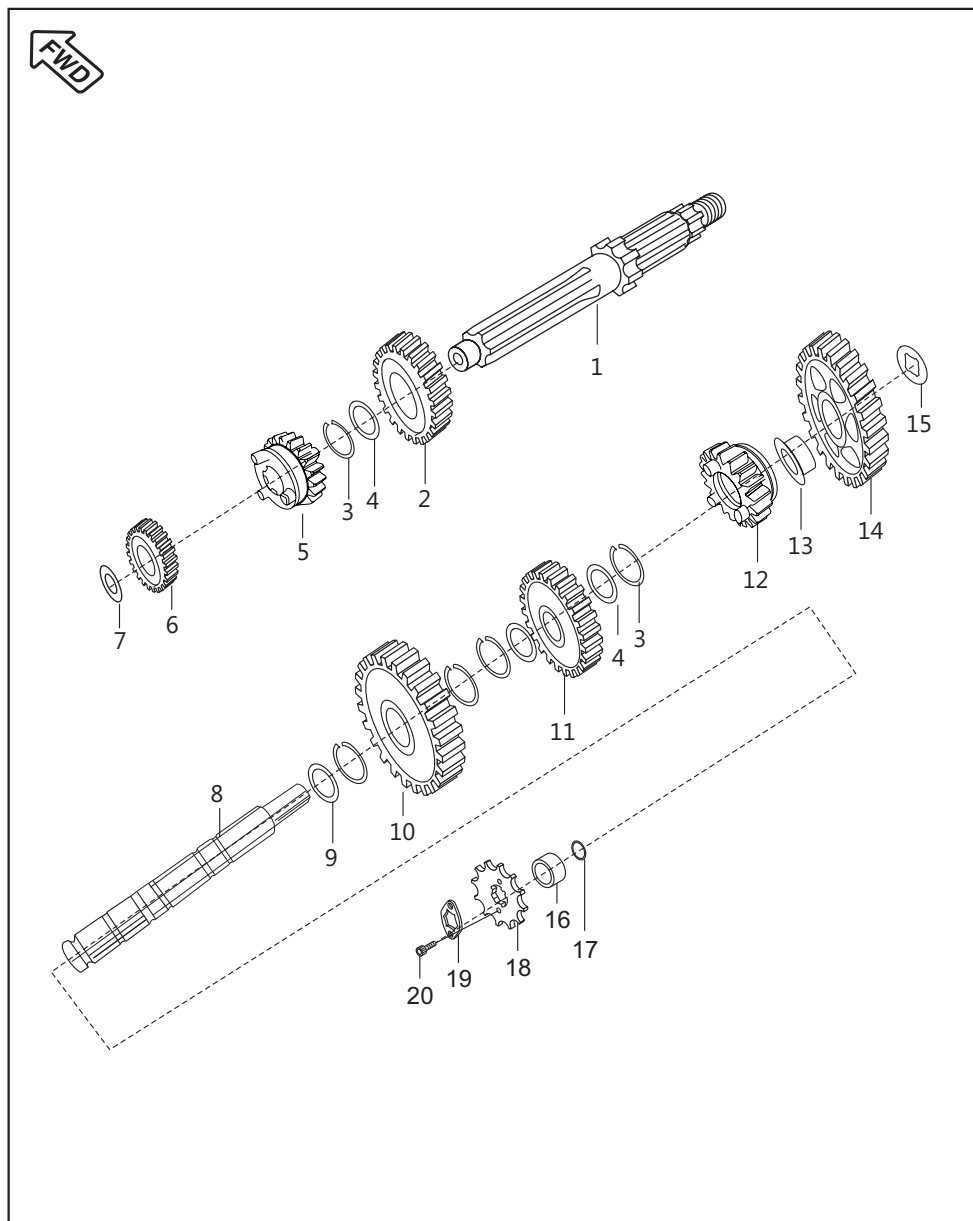


Transmission

No.	Part No.	Description	Qty	Remarks
1	PF 5510 02	Shaft Input Transmission (Drive)	1	
2	PF 5512 02	Gear 4th Drive	1	
3	39 0987 17	Ring Snap (17.2 X 20.5 X 1.5)	5	
4	JA 5510 02	Spline Washer (17.2 X 20.5 X 1.5)	3	
5	PF 5512 01	Gear 3rd Drive	1	
6	PF 5512 00	Gear 2nd Drive	1	
7	JA 5510 04	Washer Thrust 2nd Drive	1	
8	PF 5510 03	Shaft Output Transmission (Driven)	1	
9	PF 5512 06	2nd Driven Washer	1	
10	PF 5512 03	Gear 2nd Driven	1	
11	PF 5512 04	Gear 3rd Driven	1	
12	PF 5512 05	Gear 4th Driven	1	
13	JZ 5512 05	Bush 1st Driven	1	
14	JZ 5512 04	Gear 1st Driven	1	
15	JA 5510 08	Washer Thrust 1st Driven	1	
16	JA 5510 09	Collar Sprocket Drive	1	
17	59 2100 24	'O' Ring Collar Sprocket (13.8 X 1.9)	1	
18	JZ 5510 04	Sprocket Drive (Engine Sprocket)	1	14 Teeth N.S
19	DU 1012 13	Plate Lock Sprocket	1	
20	39 1981 04	Socket Head Bolt	2	

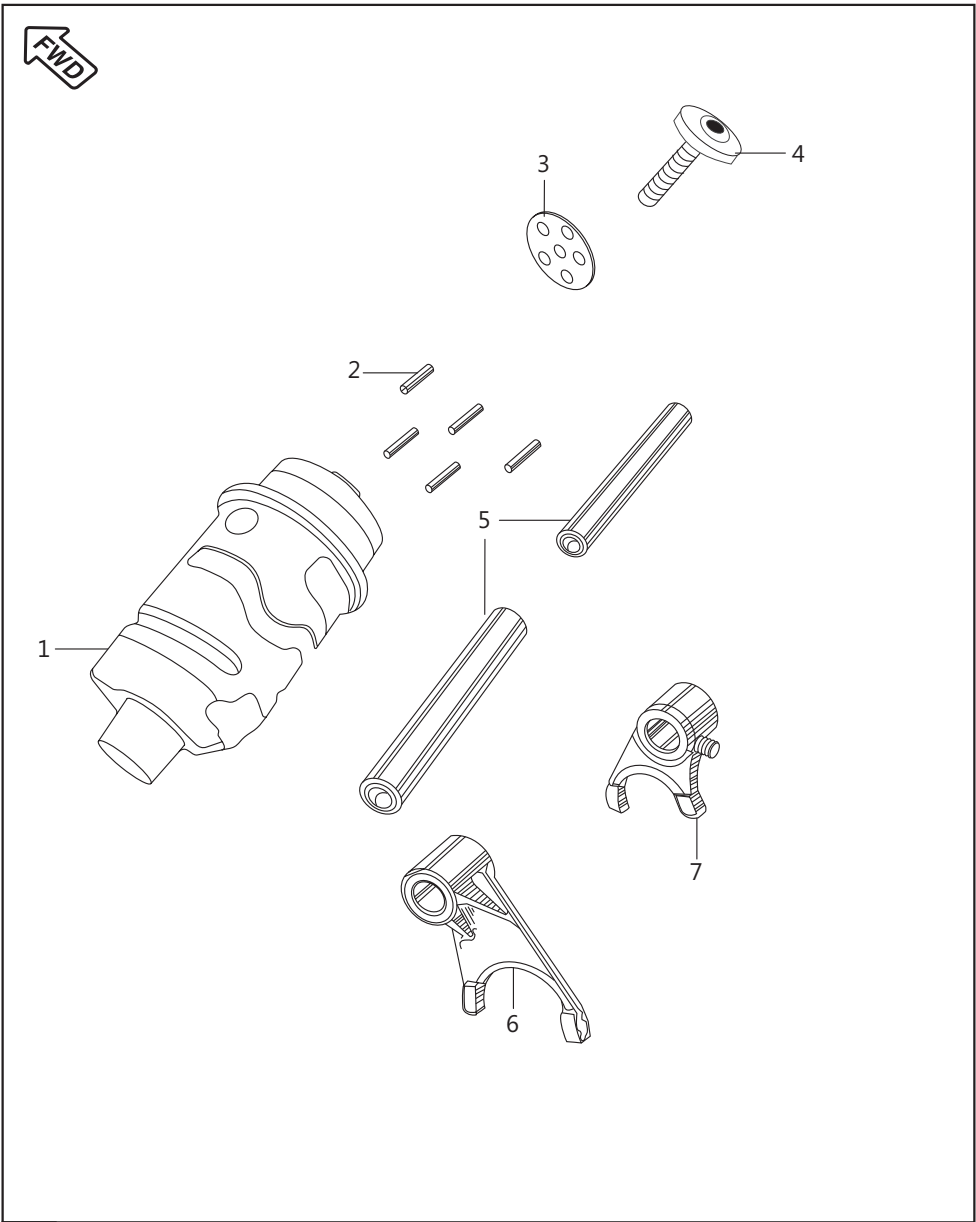


Change Drum / Shift Fork

No.	Part No.	Description	Qty	Remarks
1	PF 5610 00	Drum Complete Gear Shift	1	M6 X 1
2	39 0992 06	Dowel (Pin Drum Change)	5	
3	JA 5610 02	Cam Drum Change	1	
4	JD 5610 11	Special Bolt Drum Change	1	
5	PF 5610 02	Shaft Gear Shift Fork	2	
6	JD 5610 04	Fork Gear Shift Output	1	
7	JZ 5610 02	Fork Gear Shift Input	1	

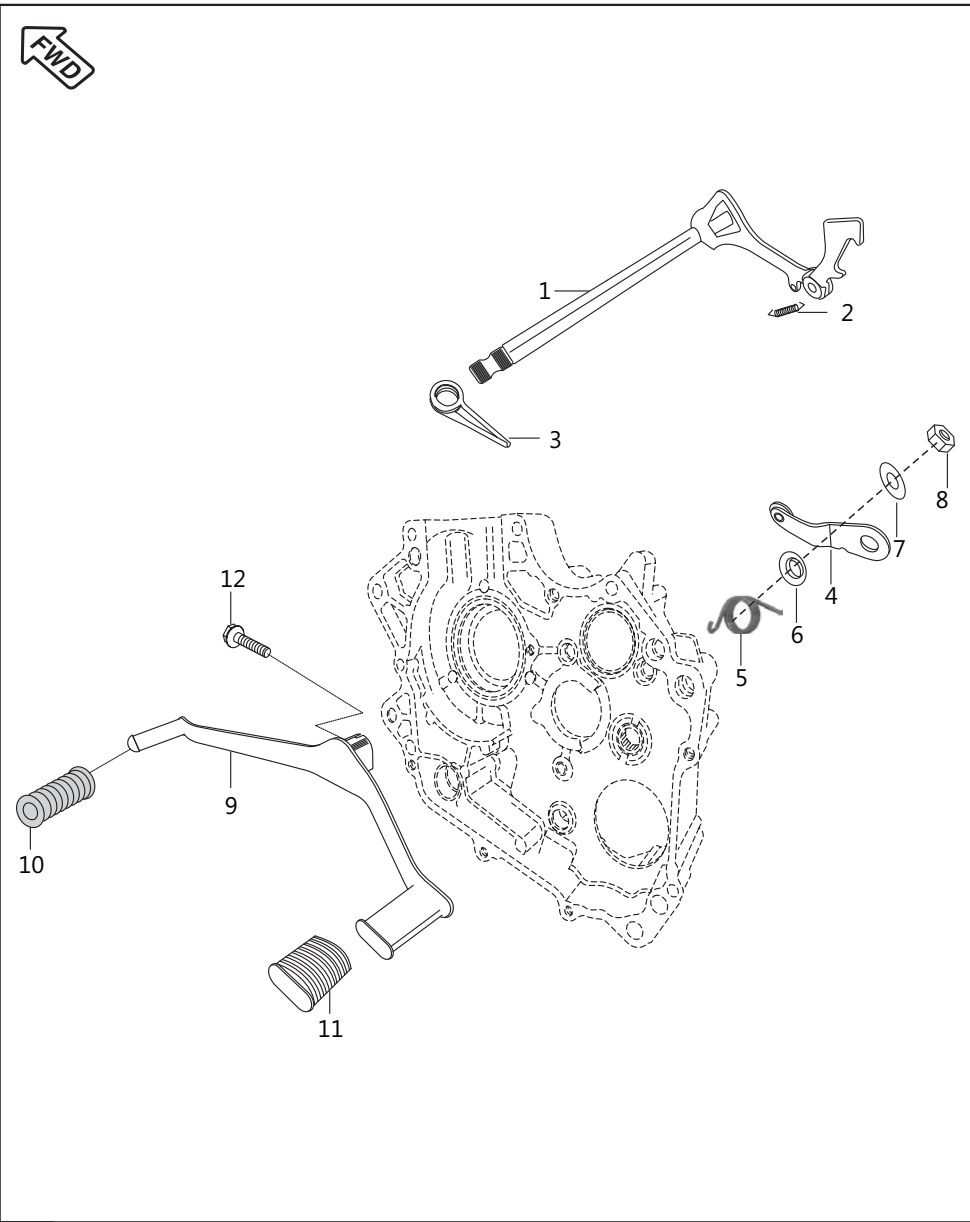


Gear Change Mechanism

No.	Part No.	Description	Qty	Remarks
1	PF 5612 00	Lever Gear Shift Comp	1	
2	JW 5612 06	Extension Spring	1	
3	JW 5612 08	Spring Gear Shift Return	1	
4	JA 5612 07	Inhibitor Complete Gear Shift	1	
5	JA 5612 08	Spring Inhibitor	1	
6	JA 5612 09	Step Washer (Collar)	1	
7	39 2704 11	Plain Washer	1	
8	39 0817 15	Hex Nut / Flange - M6	1	
9	JZ 5614 01	Lever Gear Shift (Gear Pedal)	1	
	JZ 5614 15	Assembly Gear Shift Lever	1	Alternate
10	DH 1015 09	Damper	1	
11	DG 1013 39	Damper	1	
12	39 1902 04	Flange Bolt	1	

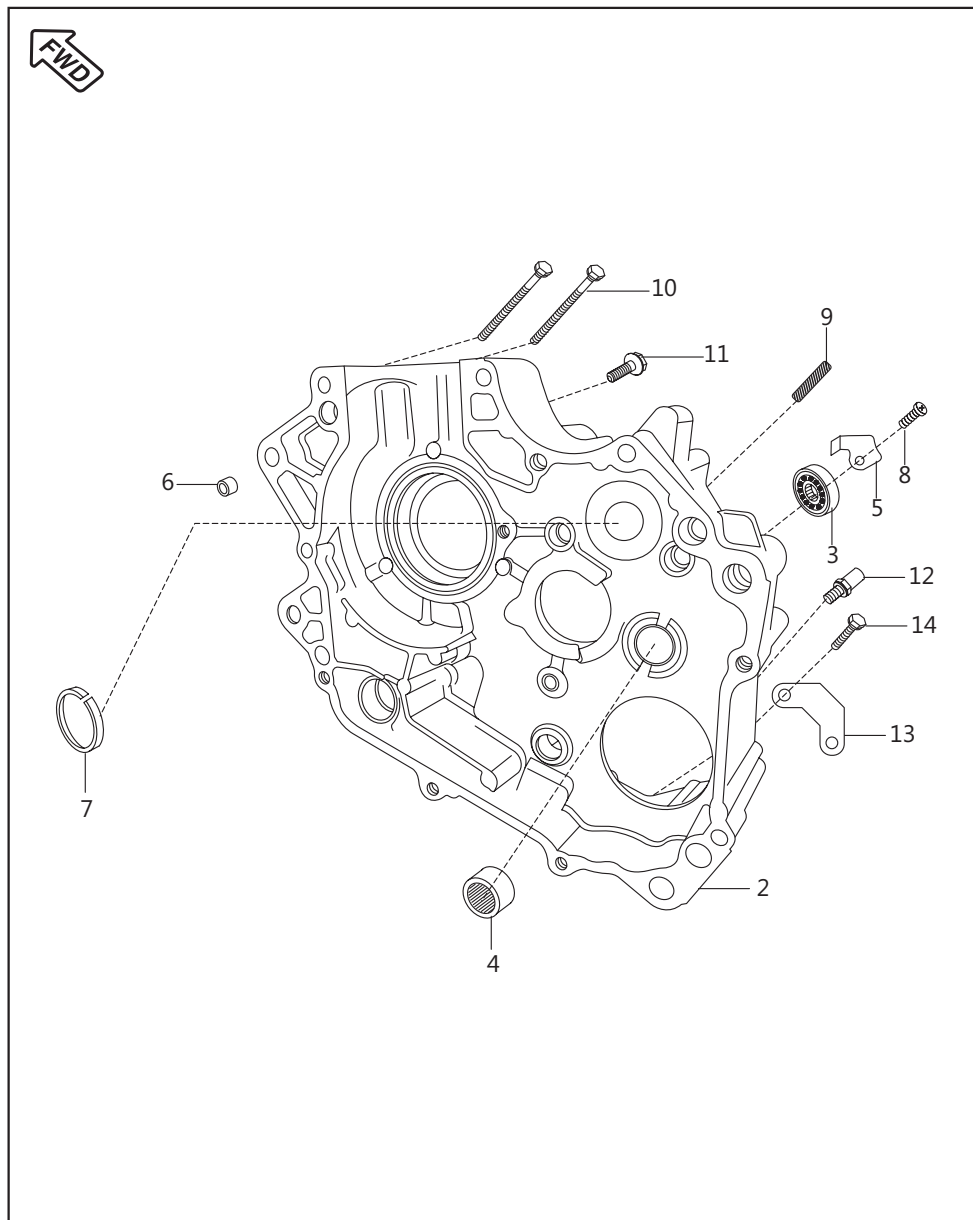

Engine Assembly / Crankcase RH

No.	Part No.	Description	Qty	Remarks
1	PF 5010 04	Engine Assly SS	1	N.I.
2	36 PF00 05	Kit Asly C'case RH BM150	1	
3	59 2000 36	6203 Ball Bearing	1	For I/P Shaft.
4	JA 5410 11	Needle Roller Bearing	1	For O/P Shaft.
5	JA 5410 10	Stopper Plate	1	
6	39 1000 06	Dowel Pin	2	
7	PF 5410 18	Bushing Drum BM-150	1	
8	DH 1013 80	Screw	1	
9	52 JA00 27	Stud Inhibitor Mounting	1	
10	39 1740 04	Bolt M6 X 85 Silver	2	
11	59 0400 38	Bolt	1	
12	52 JA00 29	Bolt Shift Change	1	
13	JA 5410 12	Guide Kick	1	
14	LA E000 15	Flange Bolt - Small	2	

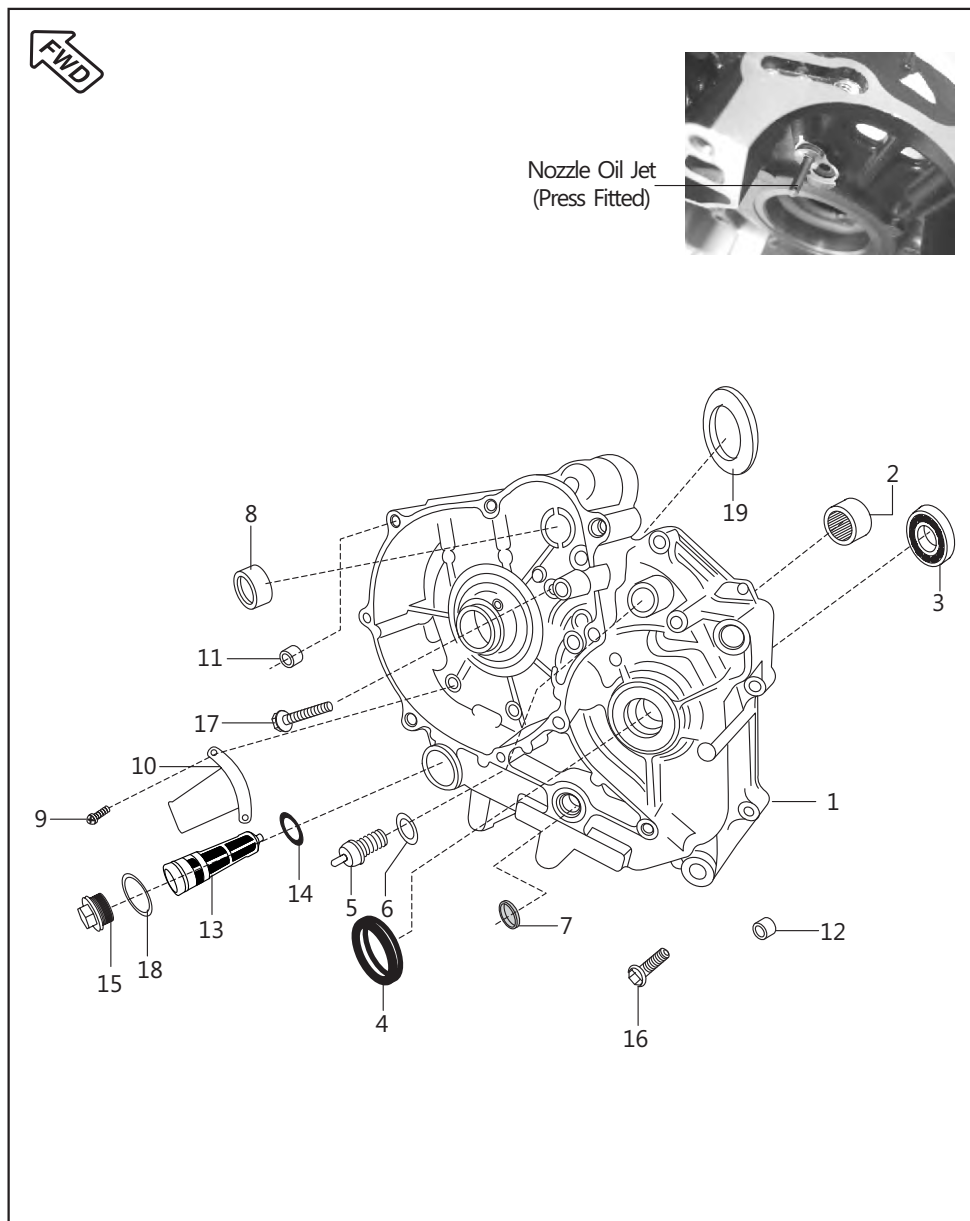

Crankcase LH

No.	Part No.	Description	Qty	Remarks
1	36 PF00 04	Kit Asly C'case Magneto Side BM-150	1	NRB + Bush
2	39 2562 20	Needle Roller Bearing	1	
3	59 2000 36	6203 Ball Bearing	1	
4	39 1715 19	Seal Oil	1	Output Shaft
5	31 2010 81	Switch Complete	1	Neutral Switch
6	DH 1017 84	Gasket Neutral Switch (T.I.S)	1	
7	39 2190 19	Oil Seal	1	Shifter Shaft
8	JA 5410 05	Bush Bendix	1	
9	39 0747 01	Screw Pan Cross M6	2	
10	JA 5410 34	Stopper Gear Starter Aluminium	1	
11	39 1000 06	Pin Dowel	4	
12	39 0999 06	Hollow Dowel Pin	4	
13	JG 5710 24	Mesh Oil Filter Assembly	1	
14	LJ A000 04	'O' Ring Strainer	1	
15	JV 5410 06	Cap Oil Filter	1	
16	59 0400 38	Bolt	6	
17	39 1759 04	Bolt (M6 X 1 X 55L)	1	Crankcase Mounting
18	59 2100 23	Ring 'O'	1	
19	JD 5410 00	Damper Crankshaft	1	

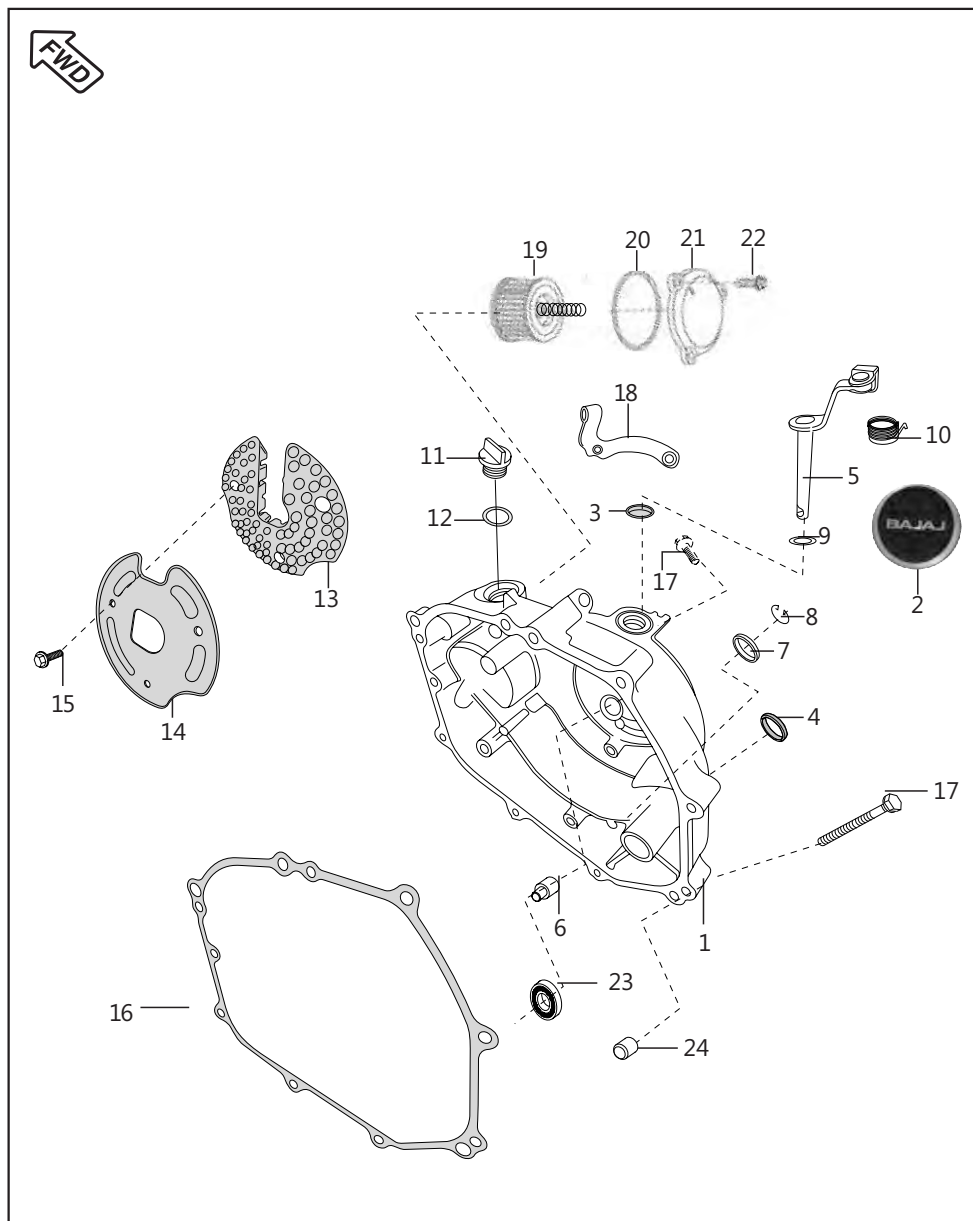


Plate No.: 12

Cover RH

No.	Part No.	Description	Qty	Remarks
1	36 PF00 08	Kit Asly Cl Cover BM-150	1	Oil Level Check
2	JK 5412 14	Decal	1	
3	39 1041 19	Oil Seal Clutch Lever	1	
4	30 1011 42	Oil Seal (Kick Shaft)	1	
5	JV 5412 08	Shaft Clutch Release	1	
6	JE 5514 01	Rod Push	1	
7	DG 1014 18	Gauge	1	
8	DS 1012 15	Wire Circlip	1	
9	JA 5412 36	Plain Washer	1	
10	JA 5412 37	Spring Torsion Clutch Lever	1	
11	JA 5412 11	Cap Oil Filler	1	Ref. Cir. IB 321
12	JA 5412 25	'O' Ring Cap Oil Filler	1	
13	JK 5412 12	Damper Clutch Cover PL BM-150	1	
14	JA 5412 16	Plate Damper	1	
15	DH 1013 88	Bolt Flange	3	
16	JA 5412 12	Gasket Clutch Cover	1	
17	59 0400 38	Bolt Flange	8	
18	JV 5412 09	Bracket Clutch Cable	1	
19	DD 1211 81	Oil Filter Element	1	
20	39 1671 21	'O' Ring	1	
21	JV 5412 05	Cap Filter	1	
22	39 1673 04	Bolt flange M6	3	
23	14 1510 33	Bearing- Ball	1	
24	39 0999 06	Pin Hollow Dowel	2	

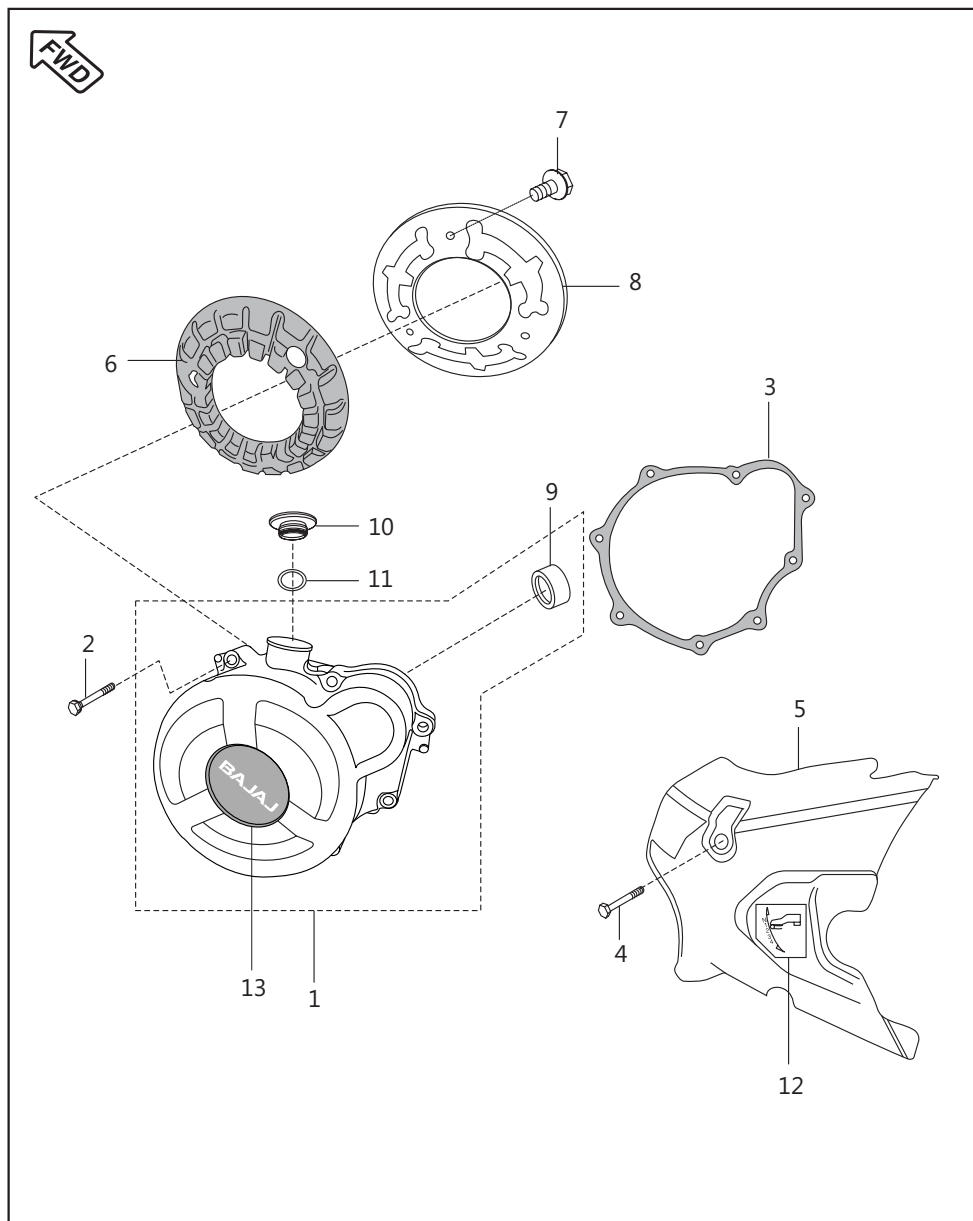


Plate No.: 13

Cover Magneto

No.	Part No.	Description	Qty	Remarks
1	36 PF00 07	Kit Assly Cover Magneto	1	With Bush
2	39 1065 04	Bolt M8 Silver colour	8	
3	JA 5412 05	Gasket Magneto Cover	1	
4	59 0400 38	Bolt	2	
5	JV 5412 12	Cover LH Rear Complete	1	
6	JK 5412 13	Damper Cover Magneto	1	
7	DH 1013 88	Flanged Bolt	3	
8	JA 5412 21	Plate Damper Cover Magneto	1	
9	JA 5410 05	Bush	1	For Drive Gear Assly
10	JA 5412 33	Cap TDC Finder	1	
11	30 1011 95	'O' Ring	1	
12	DS 1611 50	Sticker Gear Shifting	1	
13	JK 5412 14	Decal	1	


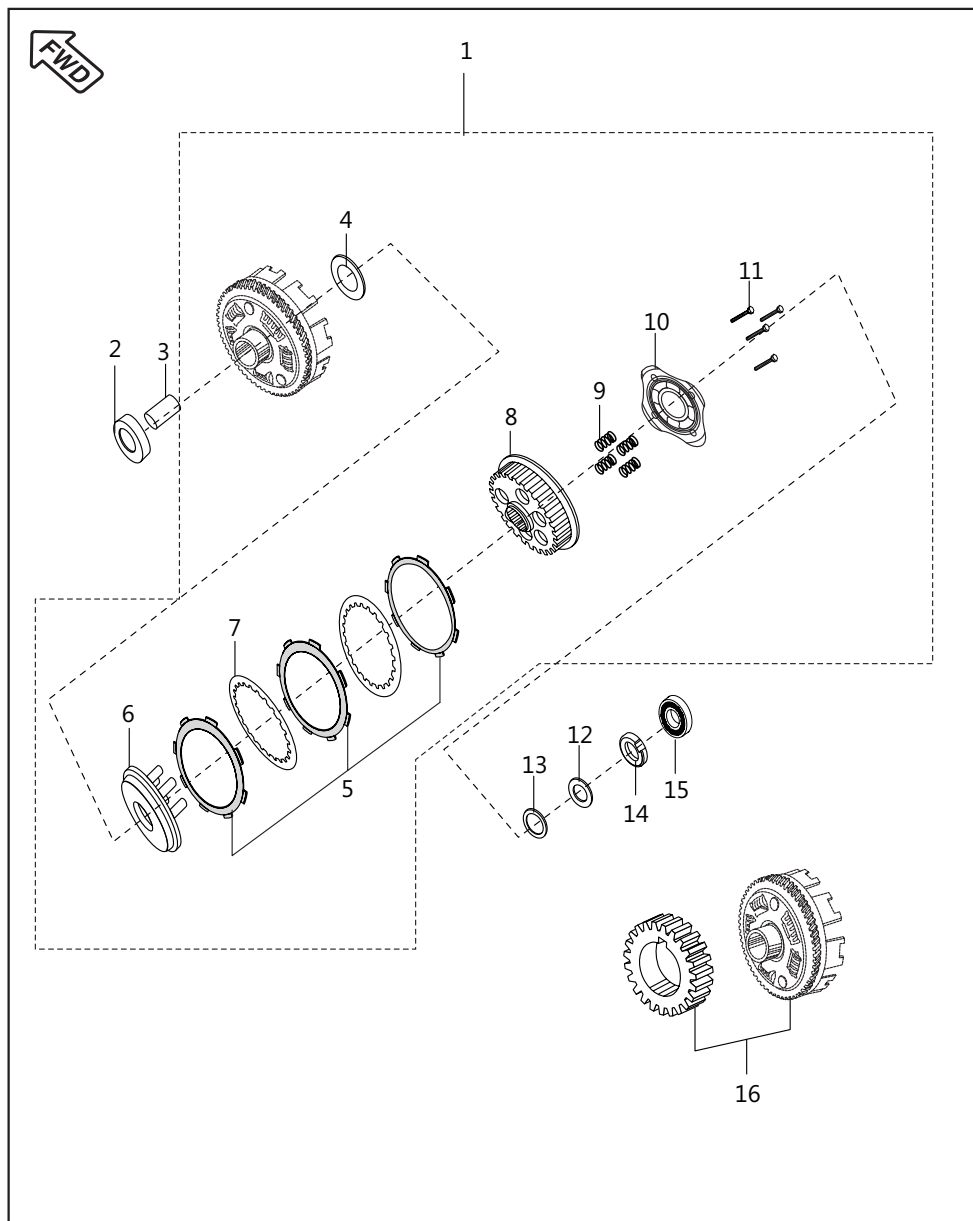


Plate No.: 14


Clutch

No.	Part No.	Description	Qty	Remarks
1	PF 5514 03	Clutch Assembly Complete	1	Refer Page No. 107
2	JD 5514 00	Spacer Clutch Assly	1	
3	JA 5514 06	Collar Clutch	1	
4	39 2600 11	Washer	1	
5	36 PF00 09	Kit Plate Friction	1	
6	JA 5514 14	Wheel Clutch	1	
7	JA 5514 19	Plate Clutch (Steel Plate)	4	
8	JA 5514 15	Hub Clutch	1	
9	PF 5514 05	Compression Spring	4	
10	PF 5514 06	Holder Clutch	1	
11	39 1553 04	Bolt Flange M6	4	
12	39 2200 11	Belleville Washer	1	
13	39 0240 11	Plain Washer	1	
14	DH 1016 48	Nut Special Clutch Center Lock	1	L.H. Threads
15	14 1510 33	Bearing - Ball	1	10 X 30 X 9
16	36 JZ00 03	Set Primary Drive & Driven	1	Refer Page No. 107

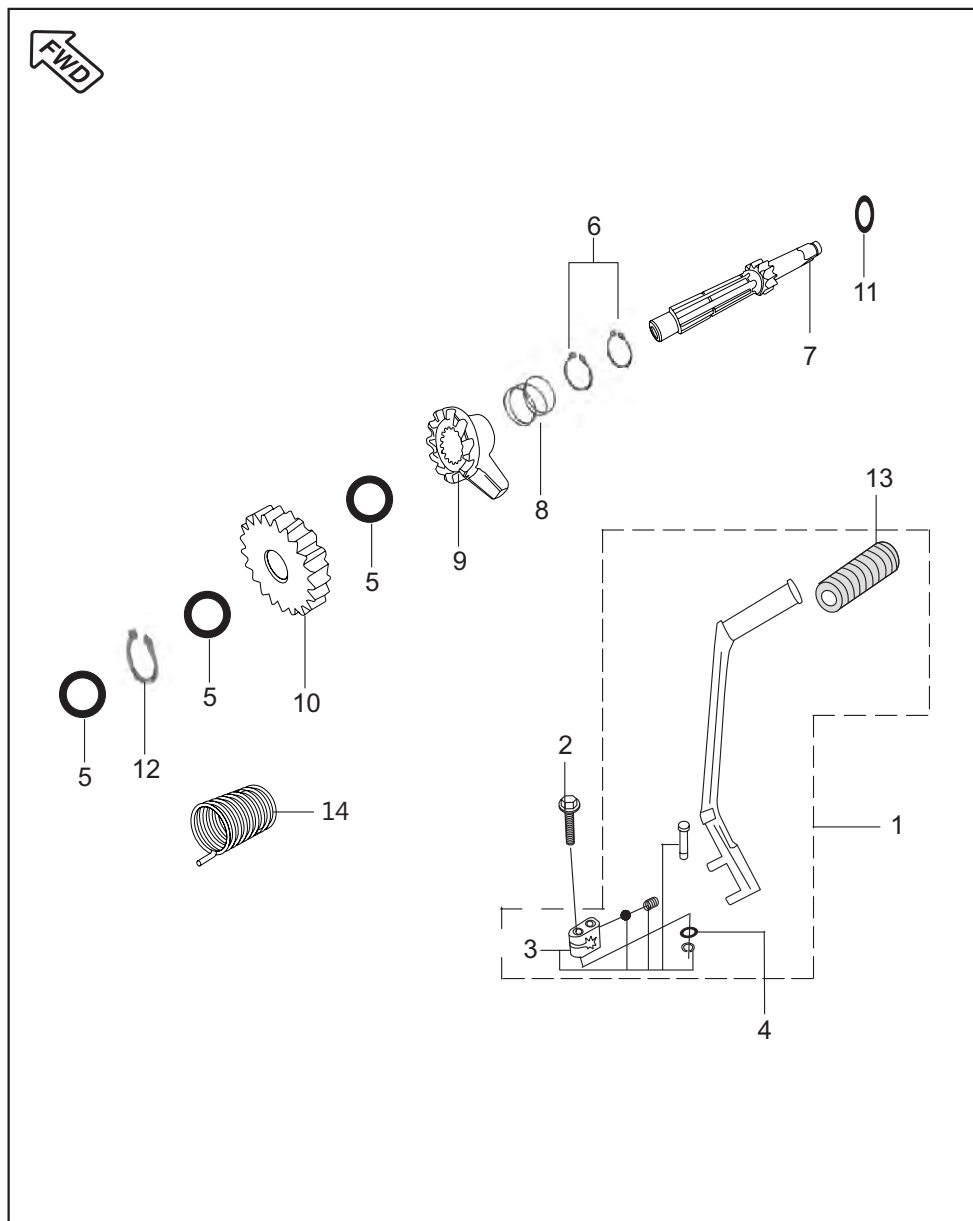

Kick Starter Mechanism

No.	Part No.	Description	Qty	Remarks
1	JA 6212 01	Lever Assly Kick	1	Refer Page No. 105
2	JA 6212 06	Bolt Special	1	
3	36 DU10 07	Boss Kick Set	1	
4	22 1502 41	Plain Washer	1	
5	39 0993 11	Plain Washer Small	3	
6	39 0738 17	Circlip Shaft	2	
7	JA 6210 01	Shaft Kick	1	
8	DS 1011 17	Spring Kick Starter Ratchet	1	
9	JA 6210 02	Ratchet	1	
10	JZ 6210 00	Gear Kick Pinion	1	
11	JA 6210 06	Washer Thrust (16.2 X 25 X 0.5)	1	
12	39 2408 17	Circlip	1	
13	DD 1010 97	Kick Rubber	1	
14	JE 5410 08	Spring Kick Starter Return	1	

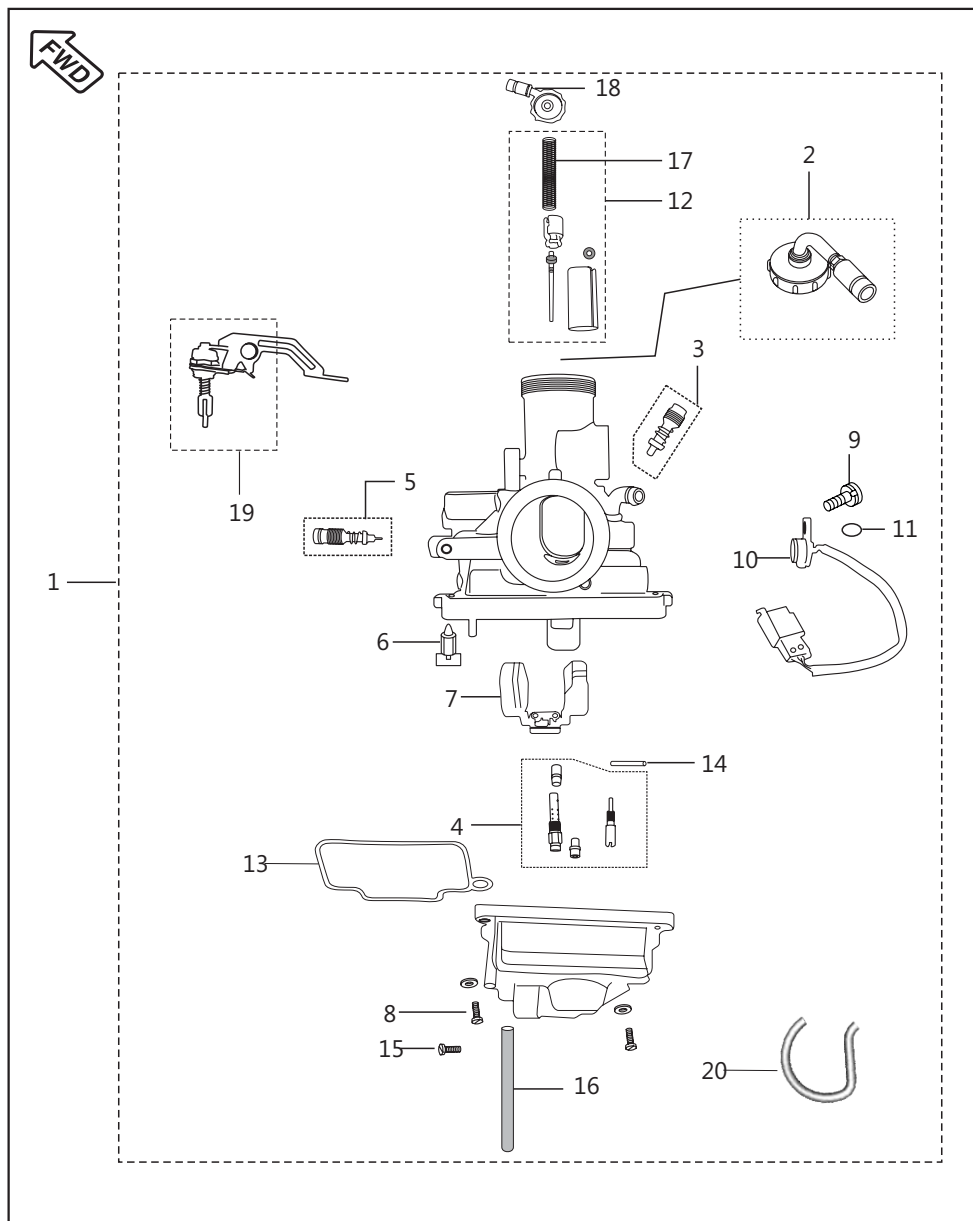


 Front Wheel Direction

Plate No.: 16


Carburettor

No.	Part No.	Description	Qty	Remarks
1	PF 5812 00	Carburettor Assly	1	
2	JA 5812 23	Mixing Cap Assembly	1	
3	DH 1211 69	Pilot Screw Kit	1	Refer Page No. 105
4	36 PF00 21	Kit Jet BM 150	1	
5	36 JZ00 16	Idling Screw Kit	1	Refer Page No. 106
6	JA 5812 21	Needle Valve Assembly	1	
7	24 1213 65	Float Complete	1	
8	CB 1210 42	Screw Washers Bowl M4x14	4	
9	39 1062 04	Screw TPS	1	
10	JB 5812 02	Throttle Position Sensor	1	
11	JB 5812 04	"O" Ring (TPS)	1	
12	36 PF00 22	Kit Piston Valve BM 150	1	Refer Page No. 106
13	36 PF00 24	Kit Carburetor Gasket/O Ring	1	N.I. Refer Page No. 106
14	24 1210 69	Arm Pin Float	1	
15	JA 5813 14	Drain Screw	1	
16	JZ 5812 20	Hose Drain	1	
17	JZ 5812 16	Spring	1	
18	JA 5812 91	Cable Adjuster	1	
19	36 PF00 23	Kit Choke Plunger BM 150	1	Refer Page No. 106
20	30 1210 04	Ring - Snap	1	

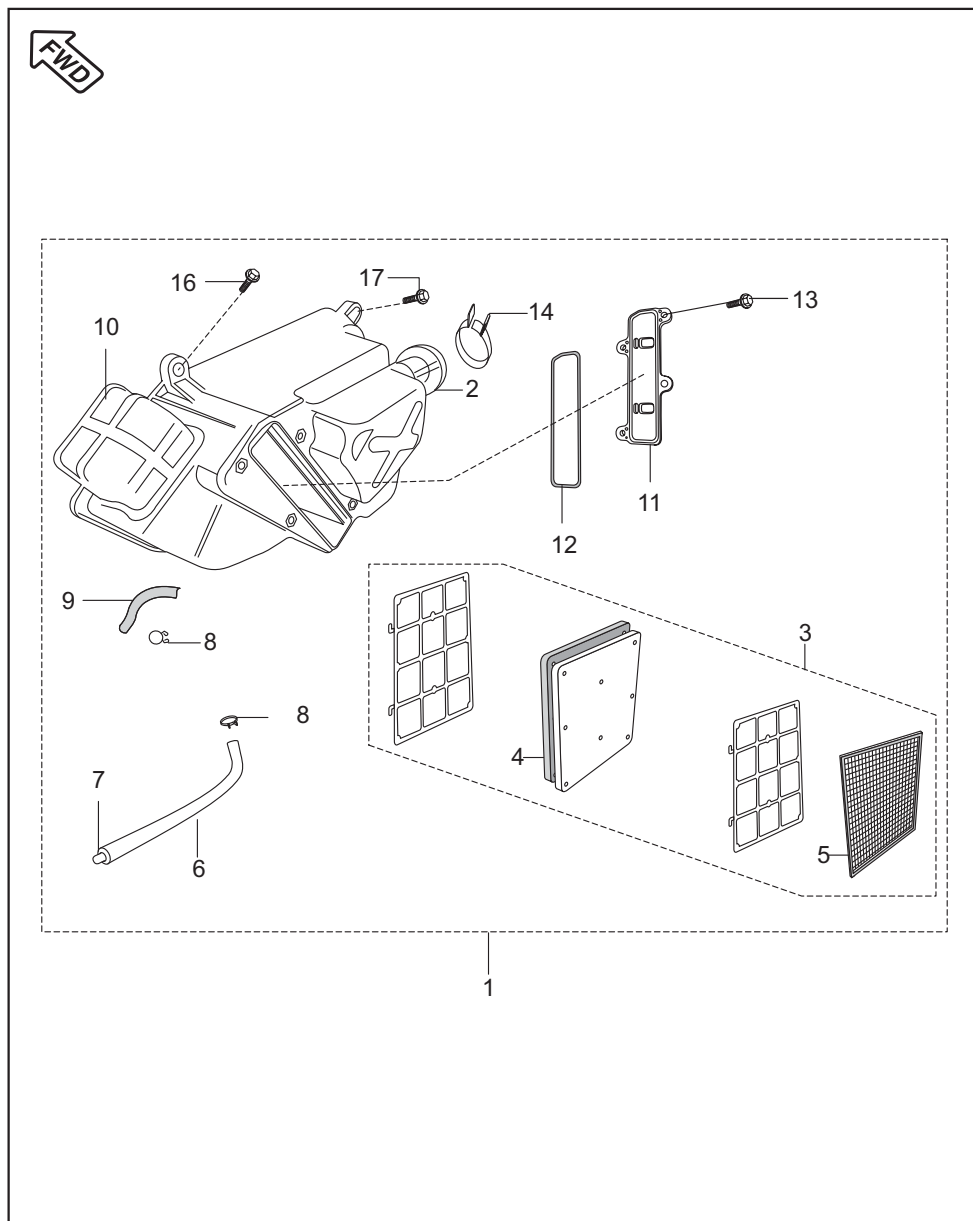


Air Cleaner Complete

No.	Part No.	Description	Qty	Remarks
1	PF 5810 03	Air Filter Assly	1	Intake
2	PF 5810 02	Duct Air Intake	1	
3	JA 5810 05	Assly Catridge Air filter	1	
4	JA 5810 06	Element Air Filter	1	
5	JA 5810 09	Flame Arrester	1	
6	JA 5810 12	Tube Drain	1	
7	DS 1211 26	Plug	1	
8	DP 1210 25	Clamp	1	
9	JA 5110 11	Hose Breather	1	
10	JB 5810 01	Air Intake Duct	1	
11	PF 5810 19	Cartridge Cover Assly.	1	
12	JA 5810 11	'O' Ring Cartridge Cover	1	
13	39 1773 04	Flange Bolt	4	
14	DH 1210 38	Clamp	1	
15	39 1779 02	Self Tapping Screw	2	
16	39 1677 04	Hex Head Screw	2	
17	DF 1614 26	Bolt - Stepped with Flange	2	

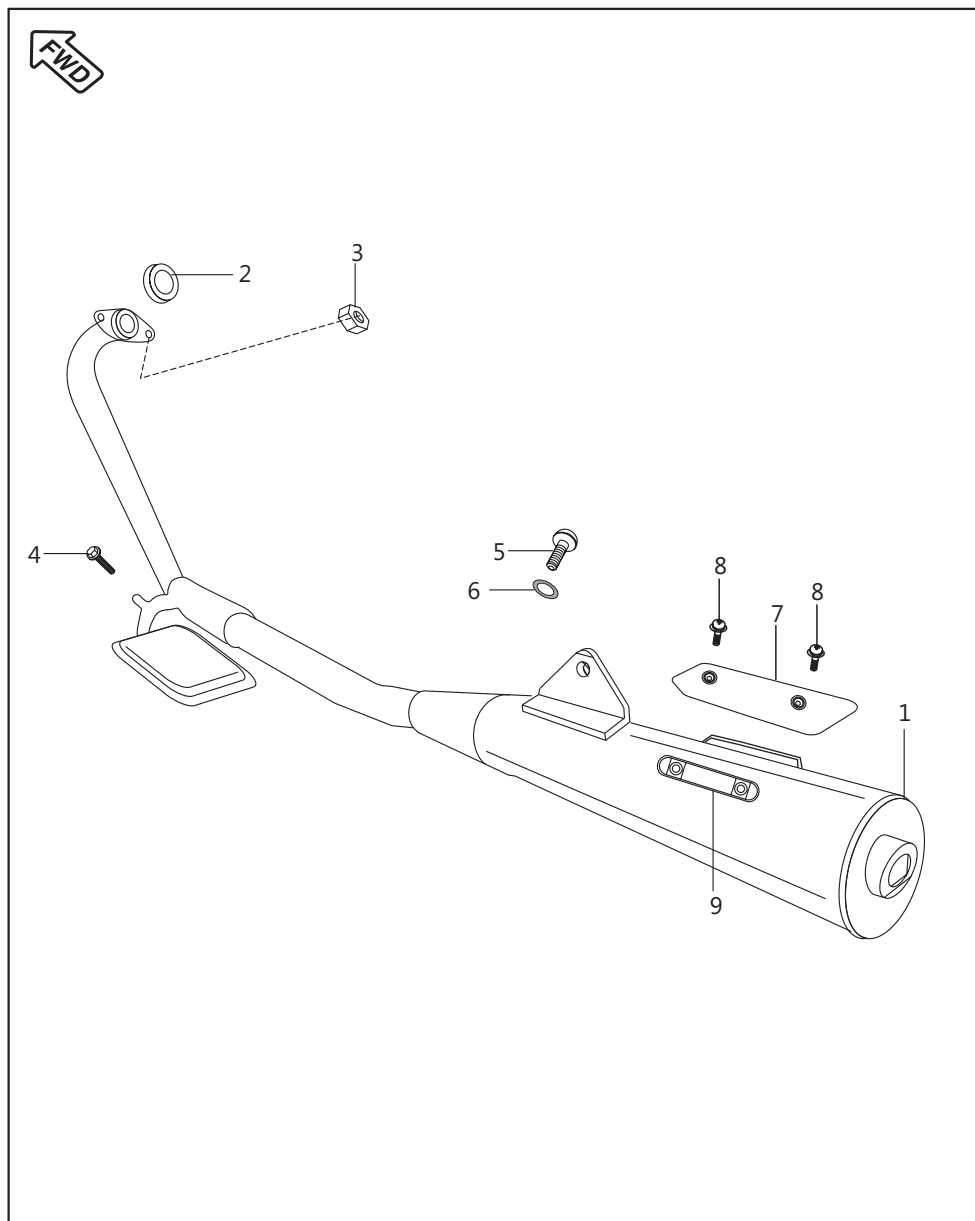


Silencer Assembly

No.	Part No.	Description	Qty	Remarks
1	36 PF00 25	Kit Silencer Without Shield	1	
	PF 5910 17	Silencer Assly CAT, Wire Shield	1	Alt- 36PF0025
	PF 5910 65	Silencer Assly CAT, Without Wire Shield	1	Alt- 36PF0025
	PF 5910 79	Silencer Assly.	1	W/O CAT, Wire with Shield
	PF 5910 59	Silencer Assly.	1	W/O CAT, W/O Wire Shield
2	CB 1011 14	Gasket Exhaust Mounting	1	
	JE 5910 02	Gasket Exhaust	1	Ref. Cir. IB 321
3	39 2295 15	Flange Nut	2	
4	39 2754 04	Bolt Hex with Flange M5	1	
5	39 2722 04	Bolt M10 x 1.25	1	
6	JB 1130 05	Washer	2	
7	PF 5910 45	Shield Muffler	1	
8	DH 1016 07	Truss Screw	4	
9	PF 5910 43	Wire Shield	1	

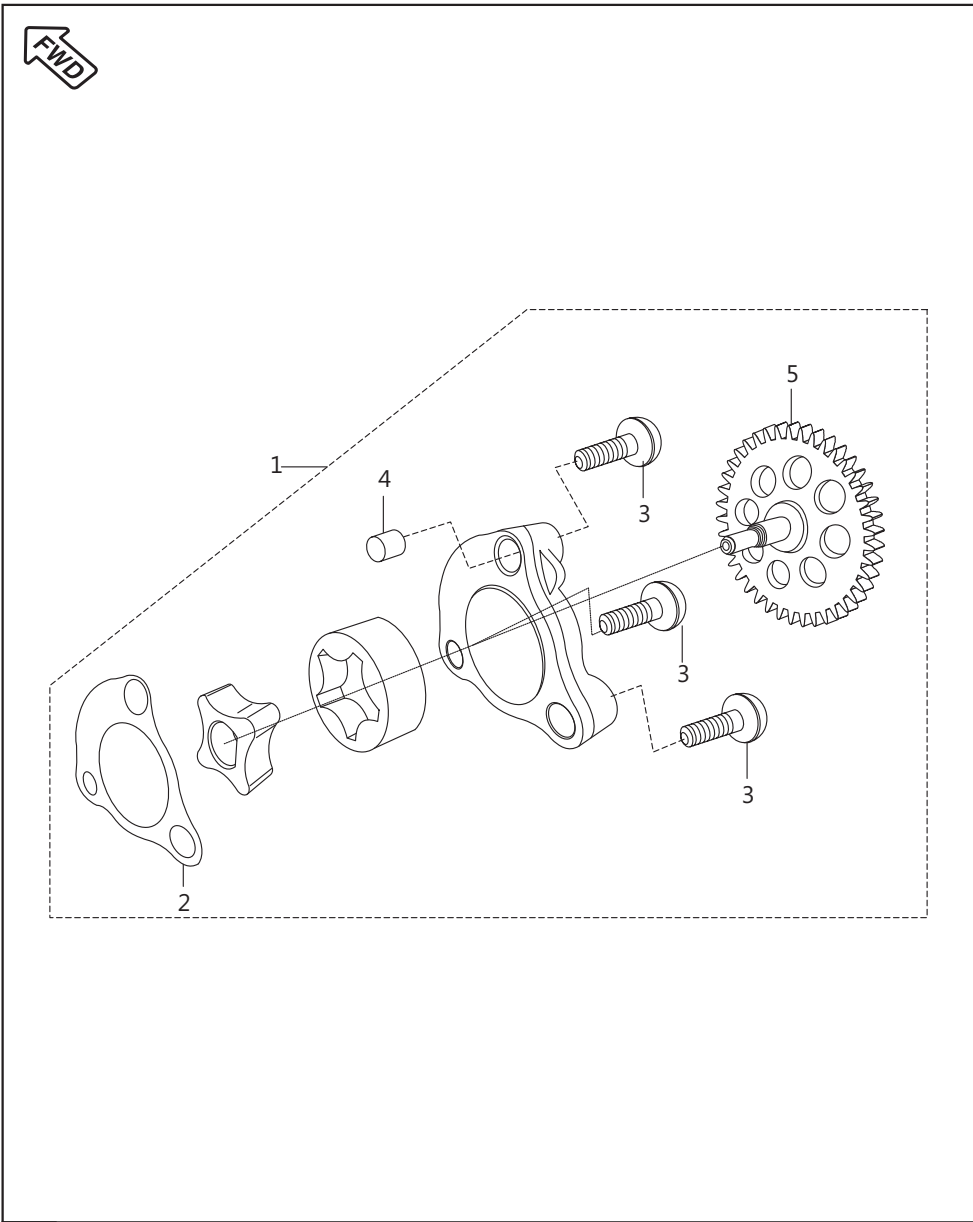


Oil Pump

No.	Part No.	Description	Qty	Remarks
1	PF 5710 00	Oil Pump Assly	1	
2	JA 5410 16	Gasket Case Oil Pump	1	Not part of assembly
3	FD 1010 78	Pan Head Screw M6 X 1 X 3DL	3	Not part of assembly
4	39 0999 06	Dowel	2	Not part of assembly
5	PF 5710 01	Gear Oil Pump	1	

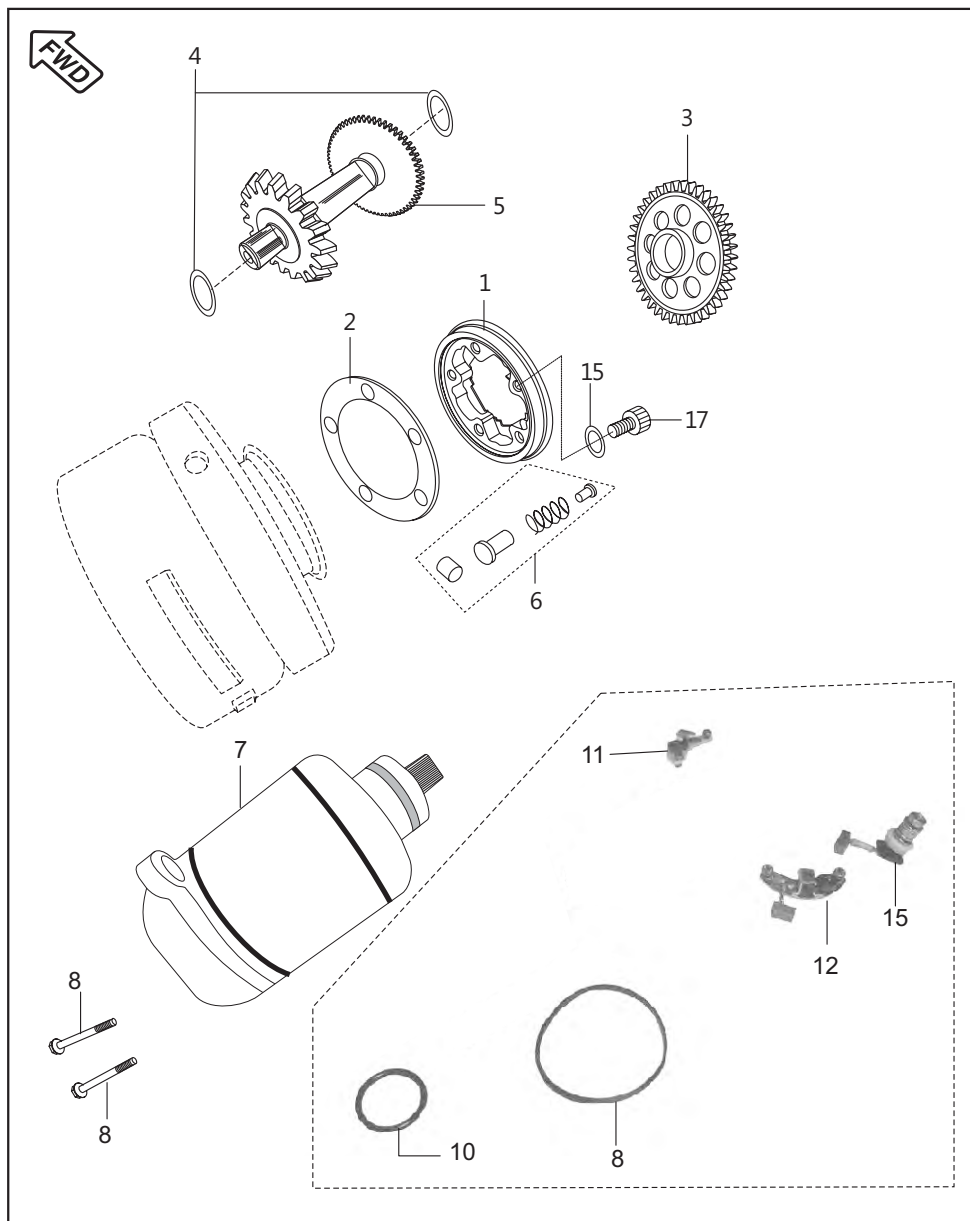

Starter Assembly

No.	Part No.	Description	Qty	Remarks
1	JA 6214 14	Body Complete Starter Clutch	1	
2	DH 1017 81	Plate Roller Clutch	1	
3	JA 6214 10	Gear Starter Clutch	1	
4	JA 6214 02	Washer	2	
5	JA 6214 06	Starter Drive Assly	1	
6	36 JZ00 08	Starter Clutch Repair Kit	1	Refer Page No. 107
7	PF 3516 00	Motor Assly	1	
8	JA 3516 06	Sealing Ring (Flash)	1	
	JA 3516 26	Sealing Ring (Lucas-TVS)	1	
9	LA D000 11	Flange Bolt M6x20	2	Motor Mounting
10	JA 3516 02	'O' Ring For Spigot (Flash)	1	
	JA 3516 27	'O' Ring For Spigot (Lucas-TVS)		
11	JA 3516 08	+ve Brush Holder Assly (Flash)	1	
12	JA 3516 09	-ve Brush Holder Assly (Flash)	1	
13	JA 3516 18	Brush & Earth Plate Assly	1	N.I. (Lucas-TVS)
14	JA 3516 24	Brush Spring (Lucas-TVS)	1	N.I
15	JA 3516 19	Terminal Assly (Lucas-TVS)	1	
16	39 0849 14	Washer lock - Toothed	3	
17	DH 1013 80	Screw - Pan - Pre coated	3	

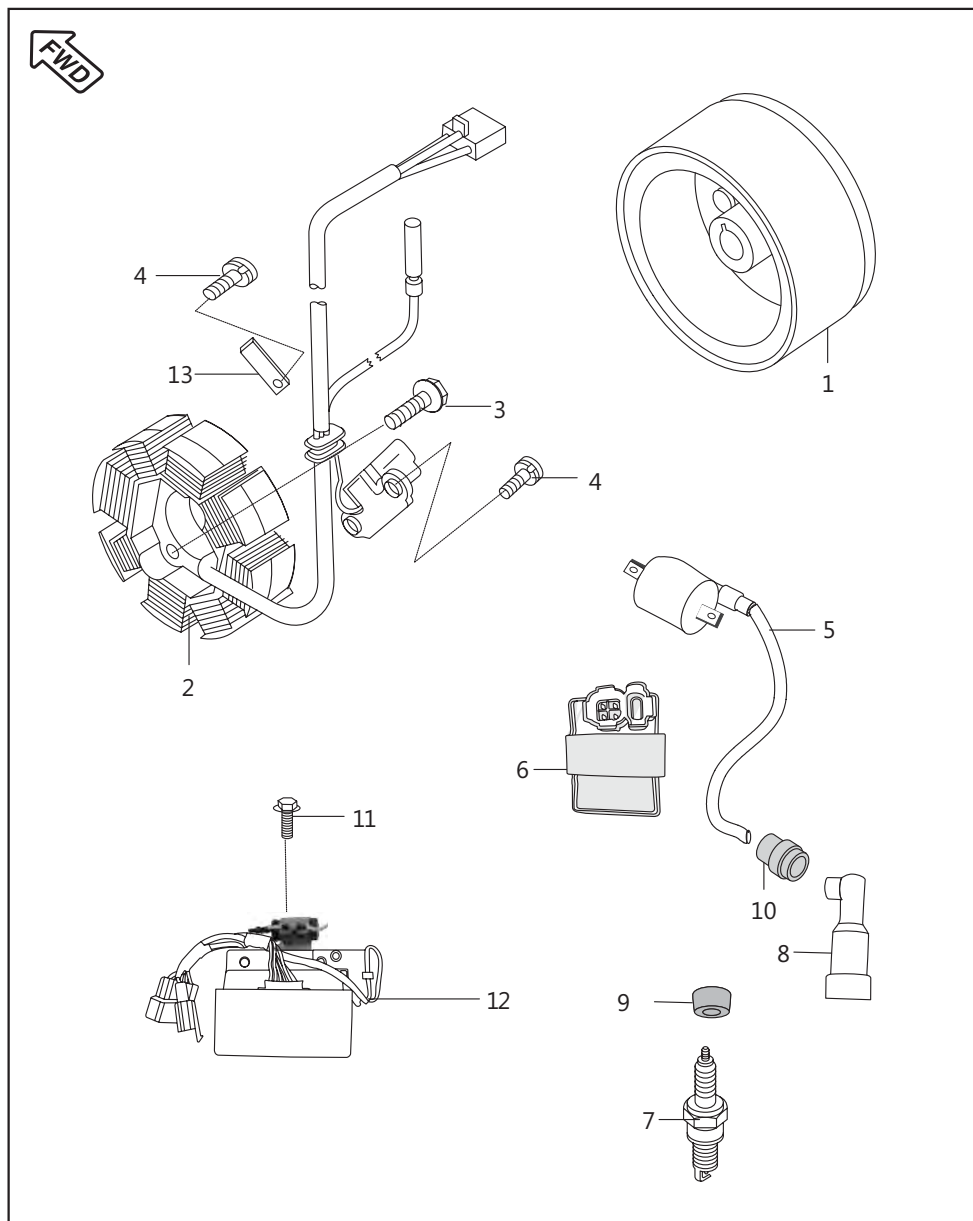


 Front Wheel Direction

Plate No.: 21


Magneto, CDI & H.T. Coil

No.	Part No.	Description	Qty	Remarks
1	PF 3510 03	Rotor Assly	1	Ref. Cir. IB 321
2	PF 3510 04	Stater Assly Complete	1	
3	39 1674 04	Bolt Flange M6 X 28	2	
	KA ED06 25	Bolt-flange	2	
4	DH 1013 80	Pan Head Screw M6 X 12	3	
5	JV 3512 04	H. T. Coil With Cable	1	
6	PF 3512 01	C.D.I. Assly	1	
7	DD 1110 18	Spark Plug PRZ9 HC	1	
	CF 1110 19	Spark Plug UR4AC	1	
8	DD 1110 48	Spark Plug Cap	1	
9	DD 1110 11	Grommet Spark Plug Cap	1	
10	DD 1110 12	Grommet for HT Cable	1	
11	39 1943 04	Bolt Flange M6	2	
12	JN 4020 00	DC Regulator With Capacitor	1	
13	JA 5410 28	Lock Plate	1	
14	59 0400 14	Bolt Flange (N.I.)	4	




Seat Assembly

No.	Part No.	Description	Qty	Remarks
1	PF 1910 00	Seat assly. complete (Profile Seat)	1	
	JV 1910 01	Seat assly. complete (Flat Seat)	1	
2	FD 2110 06	Grommet Seat	2	
3	FD 2110 07	Spacer Seat	2	
4	39 1211 11	Washer Plain	2	
5	LA C000 21	Bolt Hexagon Socket Head	2	
6	PF 2314 05	Grip Frame	1	
7	39 1556 04	Bolt Flange	2	
8	DP 2110 09	Damper For Seat	7	

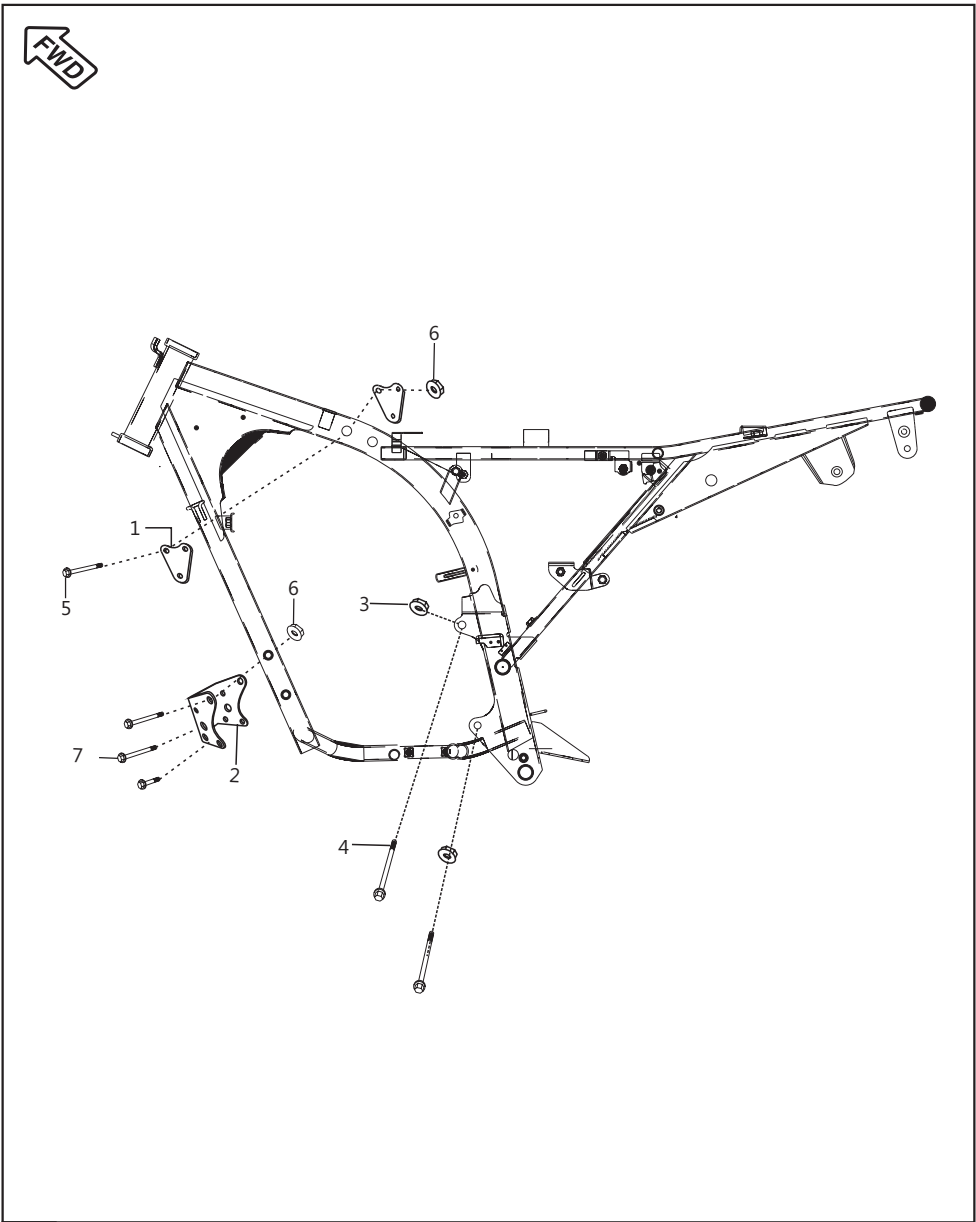


Engine Mountings

No.	Part No.	Description	Qty	Remarks
1	PF 1134 02	Bracket Engine Hanger	2	
2	JA 1134 02	Engine Mounting Bracket Front	1	
3	39 2723 15	Hex Nut Flanged	2	
4	JA 1134 03	Bolt Flanged	2	
5	39 2312 04	Bolt Flanged	3	
6	39 1970 15	Nut Flanged	7	
7	59 0400 17	Hex Bolt Flanged	4	

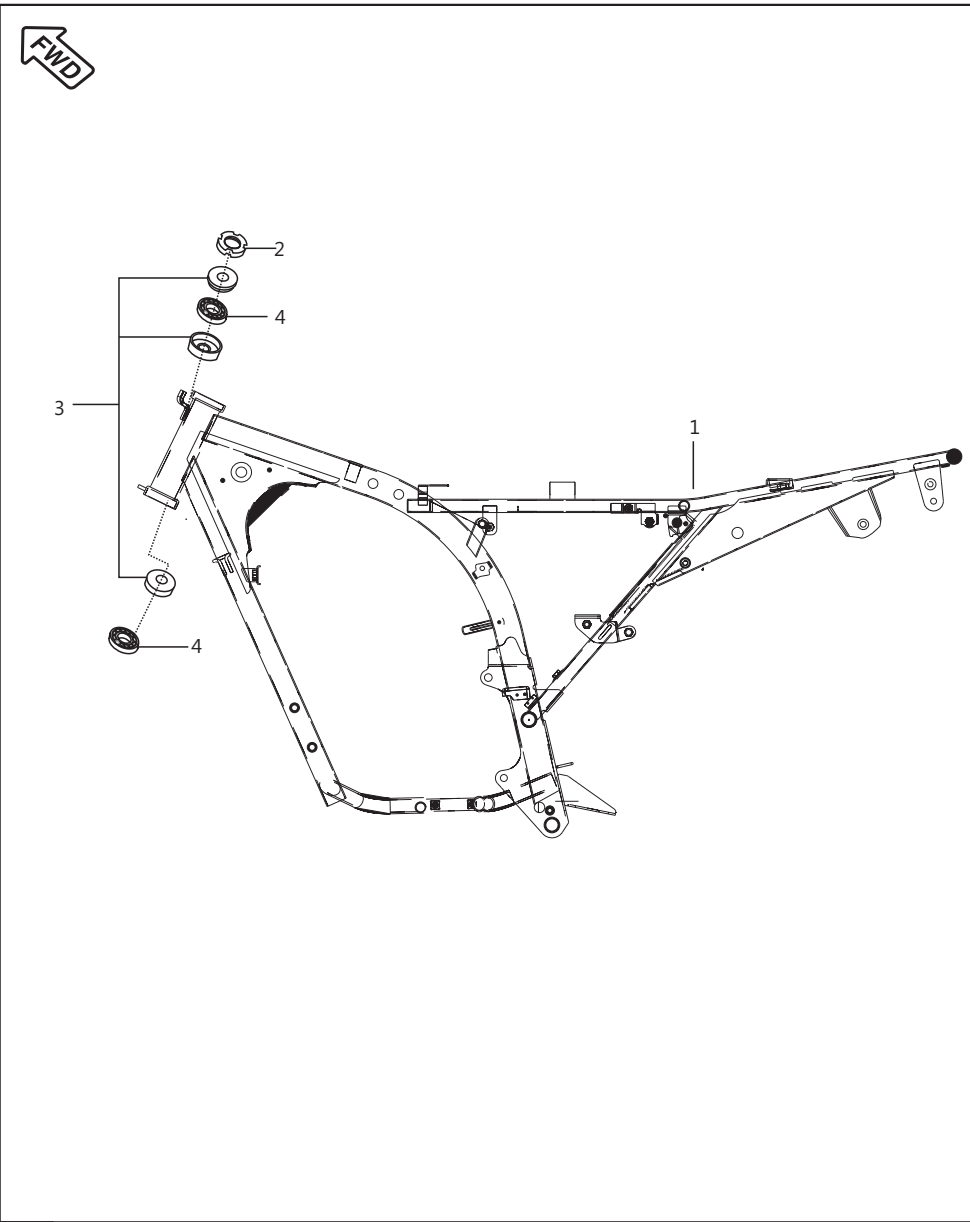

Frame and Frame Fittings

No.	Part No.	Description	Qty	Remarks
1	PF 1110 00	Frame Assly.	1	
2	DS 1810 18	Nut with Dust Cap	1	
3	36 3140 01	Bearing cone Kit	1	Refer Page No. 106
	36 3140 05	Bearing cone Kit	1	Alt. For 36 3140 01
4	DJ 1811 15	Cage Bearing	2	
5	DH 1810 14	Cup Steering	1	N.I.

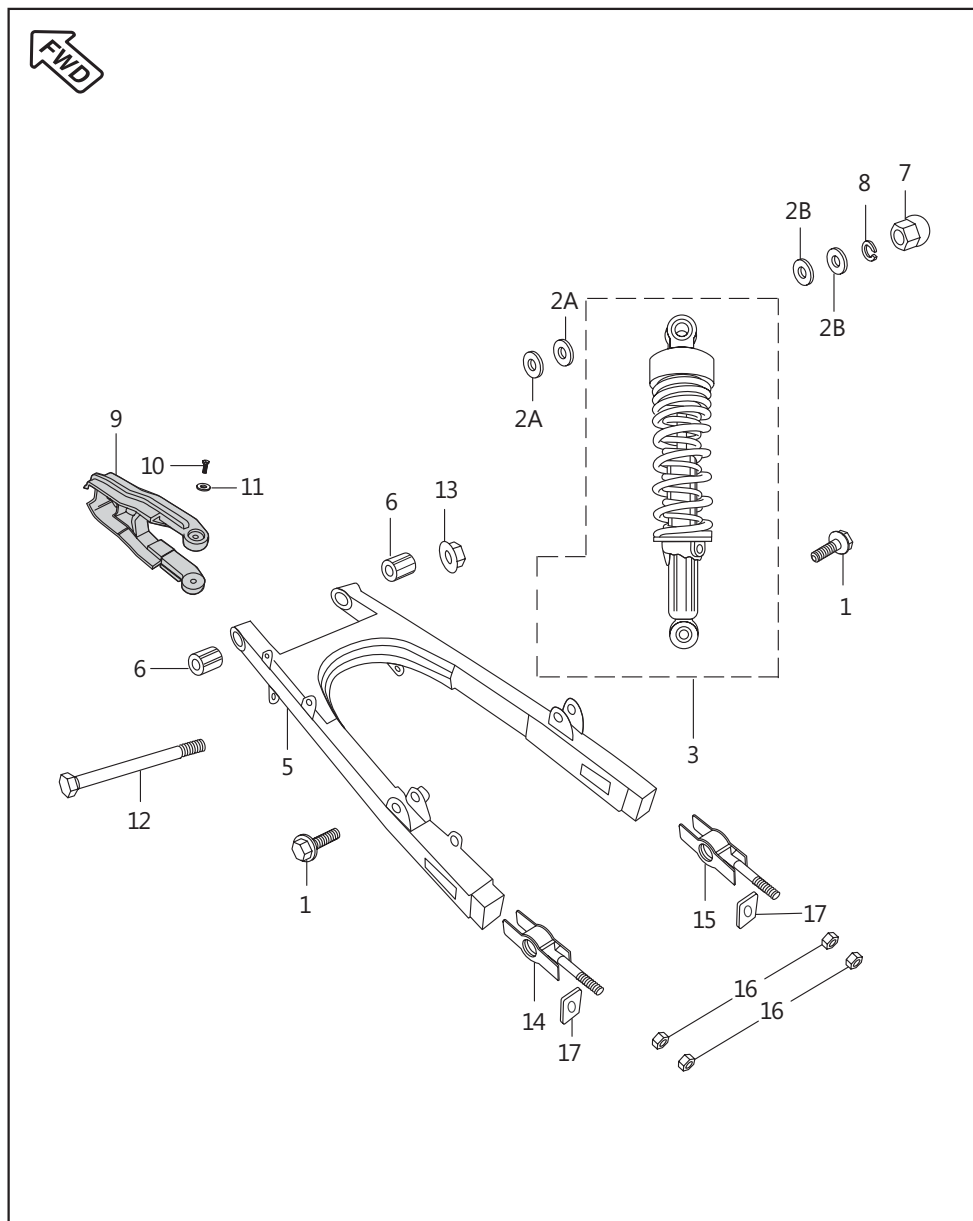


 Front Wheel Direction

Plate No.: 25

Swing Arm / Rear Shock Absorber

No.	Part No.	Description	Qty	Remarks
1	JB 1220 16	Hex Bolt / Flange - M10	2	For RSA
2A	39 0714 11	Plain Washer	2	For RSA
2B	39 2349 11	Plain Washer	4	
3	PF 1220 05	Rear Shock Absorber	2	
	PF 1220 28	Rear Shock Absorber	2	Ref. Cir. IB-258
5	52 PF02 19	Kit Asly Swing Arm	1	With Bush
	PF 1220 30	Swing Arm	1	Ref. Cir. IB-253
6	DP 1710 06	Bushing Rubber	2	
7	39 2366 15	Domed Cap Nut	2	
8	39 0789 12	Spring Washer	2	
9	JB 1220 03	Chain Slider	1	
10	39 0553 02	Screw	2	For Chain Sider
11	39 0454 11	Plain Washer	2	For Chain Sider
12	JA 1210 03	Shaft Swing Arm	1	
13	39 0939 15	Nylock Nut	1	
14	DJ 1510 36	Adjuster Chain LH	1	
15	DJ 1510 37	Adjuster Chain RH	1	
16	39 0292 15	Hexagon Nut	4	
17	DJ 1510 47	Plate Chain Adjuster	2	
18	Pf 1220 23	Statutory Plate	1	N.S
19	PF 1220 24	Tape Double Sided	1	N.S

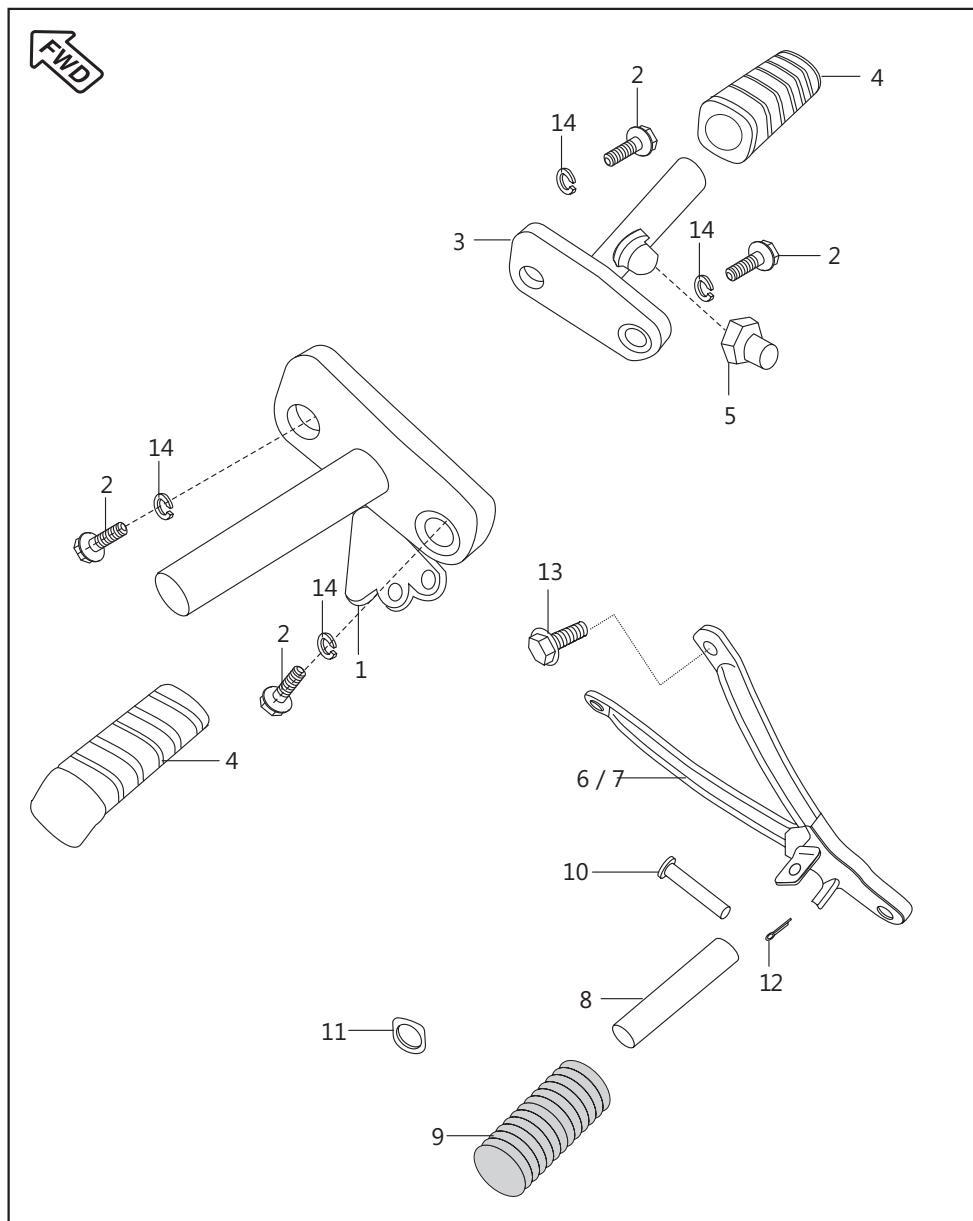


FWD Front Wheel Direction

Plate No.: 26


Rider Foot Rest / Pillion Foot Rest

No.	Part No.	Description	Qty	Remarks
1	PF 1130 00	Main Step LH	1	
2	KA DF08 22	Bolt Flanged	4	
3	PF 1130 01	Main Step RH	1	
4	DF 1614 13	Rubber Main Step	2	
5	DH 1611 94	Kick Stopper	1	
6	PF 1130 02	Stay LH	1	For Kick stopper
7	PF 1130 03	Stay RH	1	
8	DP 1611 70	Step RH / LH	2	
9	JK 1130 08	Rubber Pillion Step	2	
10	30 1710 22	Pin Pillion Step	2	
11	DP 1611 63	Washer for foot step	2	
12	39 0784 08	Split Pin	2	
13	39 2481 04	Bolt Hex With Flange M8	4	
14	39 2659 12	Washer - Spring	4	

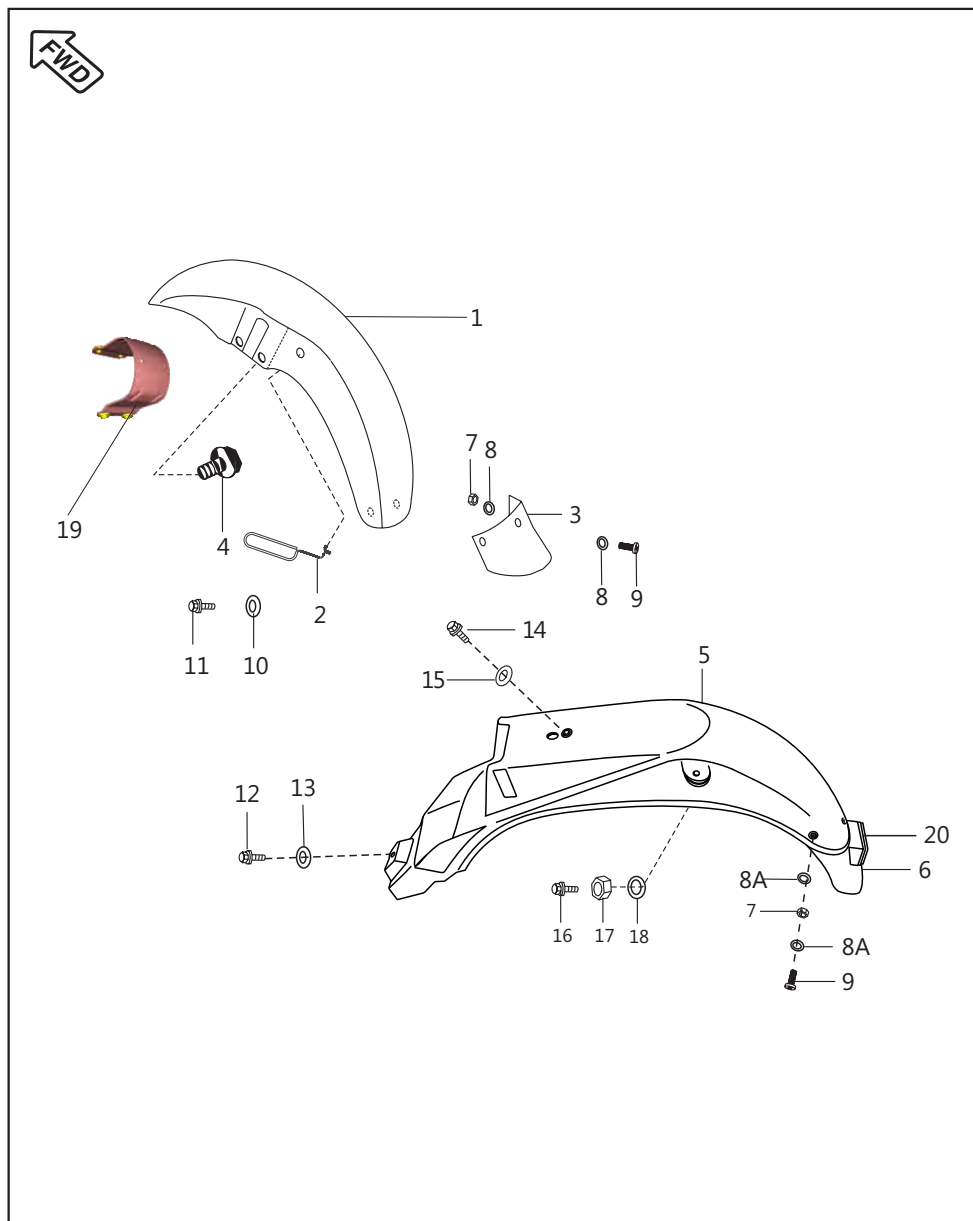

Mudguard - Front & Rear


No.	Part No.	Description	Qty	Remarks
1	PF 1814 04	Fender Assly. Front (Chrome Plated)	1	Fender Front Mounting
2	DF 1910 20	Cable Guide	1	
3	PF 1814 08	Mud Flap Front Fender	1	
4	39 2222 04	Flange Bolt	4	
5	JV 1814 08	Fender Rear	1	Front Fender Flap
6	JV 1814 10	Fender Rear Flap	1	
7	39 0326 15	Nyloc Nut	6	
8	39 0242 11	Washer - Plain	6	
8A	39 1839 11	Washer	6	Rear Fender Flap
9	39 1698 01	Screw	6	
10	39 1309 11	Washer Plain	1	
11	39 2473 04	Bolt Hex M6	1	
12	39 1943 04	Bolt Flange	1	
13	39 0211 11	Washer Plain	1	
14	39 1556 04	Bolt Flange	1	
15	39 1507 11	Washer Plain	1	
16	KA DF08 20	Bolt Flange	2	
17	39 1970 15	Nut Hexagon M8	2	
18	39 1507 11	Washer Plain	2	
19	PF 1814 10	Fender Brace	1	
20	30 2010 69	Reflector Reflex	1	

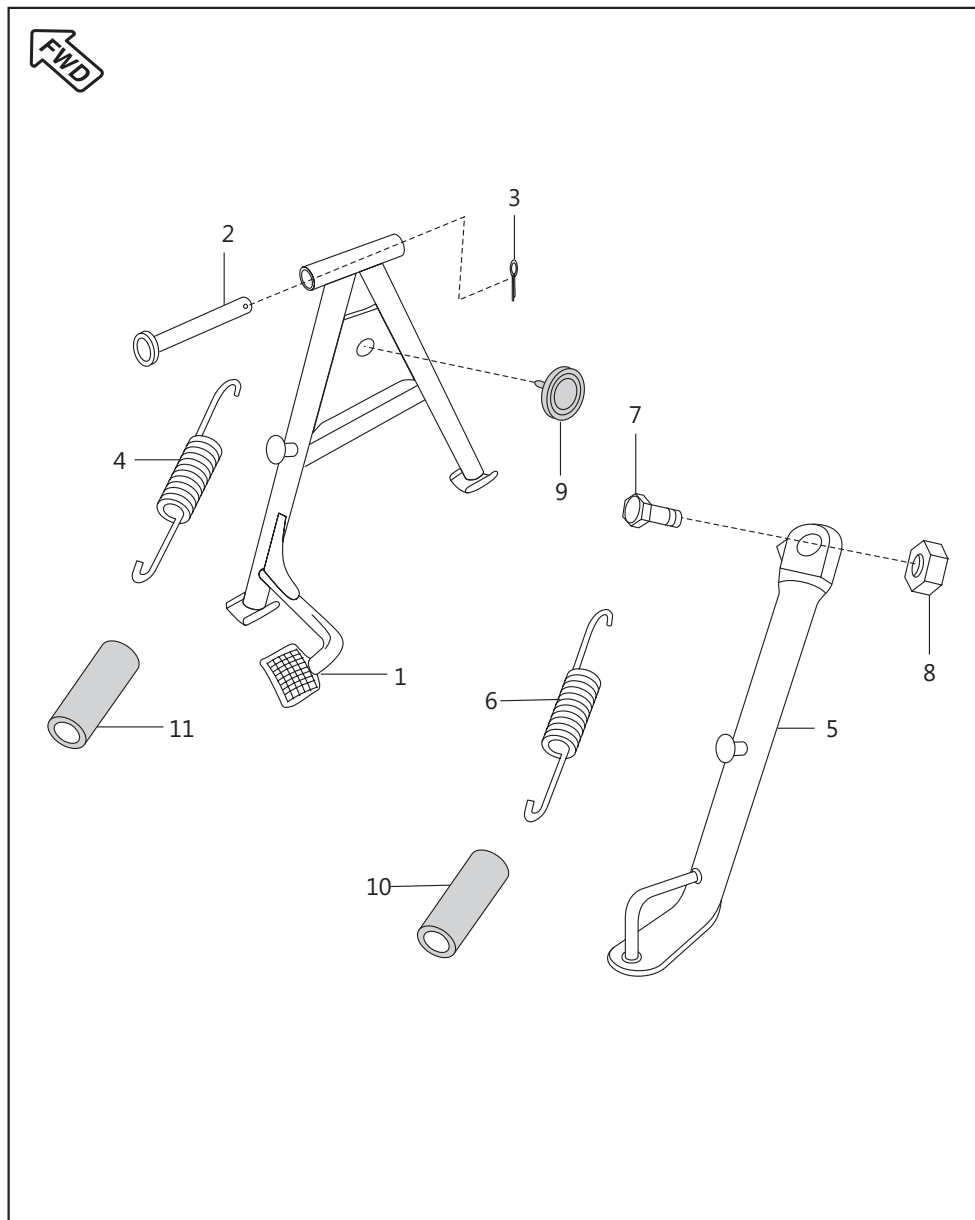

 Front Wheel Direction

Stand Assembly

No.	Part No.	Description	Qty	Remarks
1	PF 1132 02	Center Stand	1	
2	JA 1132 01	Shaft Stand	1	
3	39 0797 08	Pin Cotter	1	
4	DH 1611 21	Spring Stand Center	1	
5	JA 1132 02	Stand Side	1	
6	DH 1610 66	Spring Side Stand	1	
7	DF 1611 02	Bolt	1	
8	39 0422 15	Nut Nyloc M10	1	
9	DG 1611 24	Damper Main Stand	1	
10	DH 1611 46	Cover Spring Side Stand	1	
11	DH 1611 45	Cover Spring Main Stand	1	

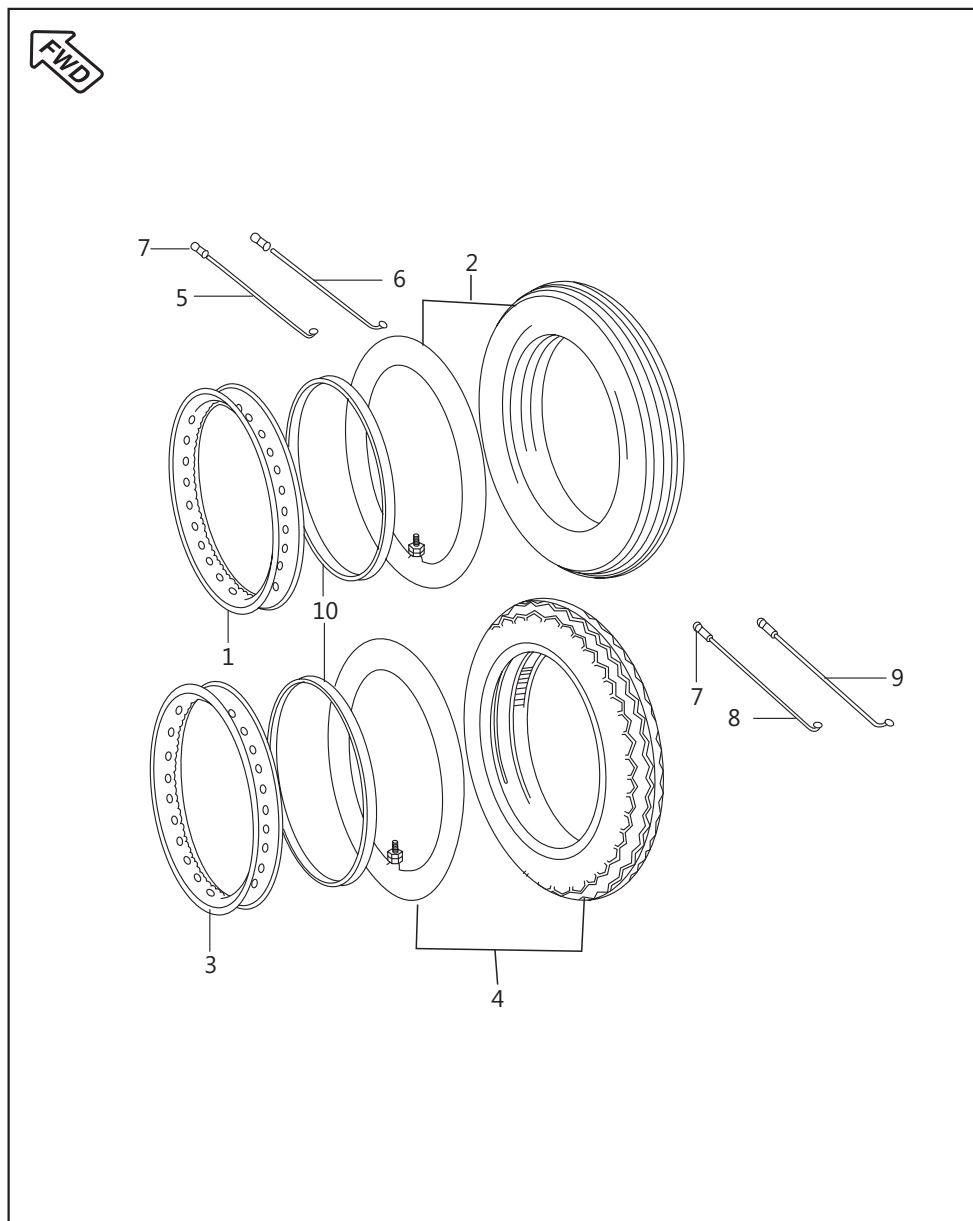


 Front Wheel Direction

Plate No.: 29


Tube / Tyre / Rim

No.	Part No.	Description	Qty	Remarks
1	DS 1510 03	Wheel Rim Front	1	1.6 X 17
2	PF 1310 01	Tyre Front 3 X 17 RIM with Tube	1	
3	DS 1510 34	Wheel Rim Rear 2.15 X 17	1	
4	PF 1312 10	Tyre Rear 100 x 90, 17, 55P with Tube	1	
5	DS 1510 04	Spoke Inner Front	18	
6	DS 1510 05	Spoke Outer Front	18	
7	16 1510 66	Nipple Spoke	72	
8	DS 1510 09	Spoke Inner Rear	18	
9	DS 1510 10	Spoke Outer Rear	18	
10	DG 1510 22	Band Rim	2	

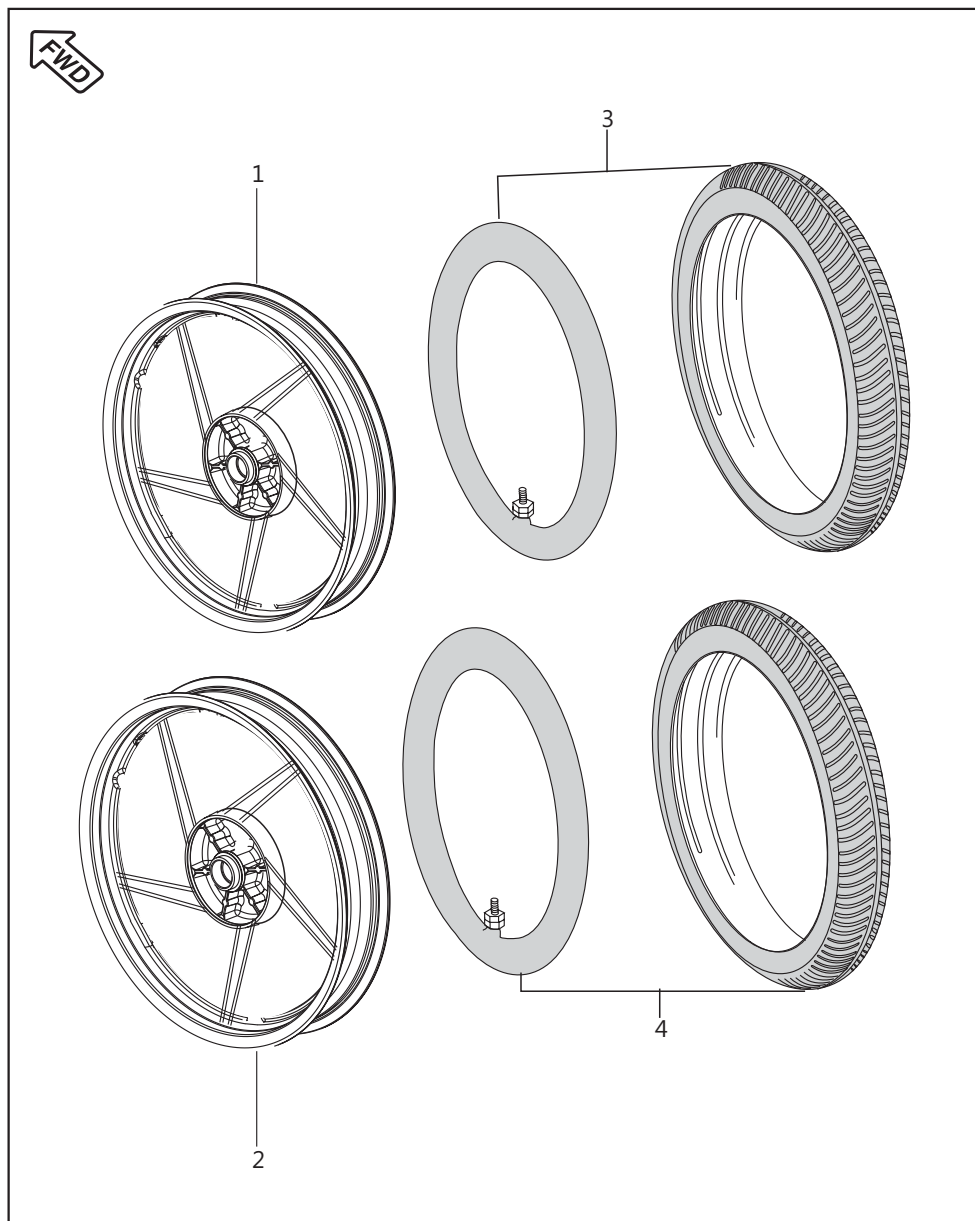

Tube / Tyre / Rim (Alloy Wheel)

No.	Part No.	Description	Qty	Remarks
1	DS 1510 80	Wheel Rim Front (6 Spoke)	1	
	PF 1310 12	Wheel Rim Front (5 Spoke)	1	from May 2012
2	DH 1510 57	Wheel Rim Rear (6 Spoke)	1	
	PF 1312 22	Wheel Rim Rear (5 Spoke)	1	from May 2012
3	PF 1310 01	Tyre with Tube Front	1	N.I
4	PF 1312 10	Tyre with Tube Rear	1	N.I

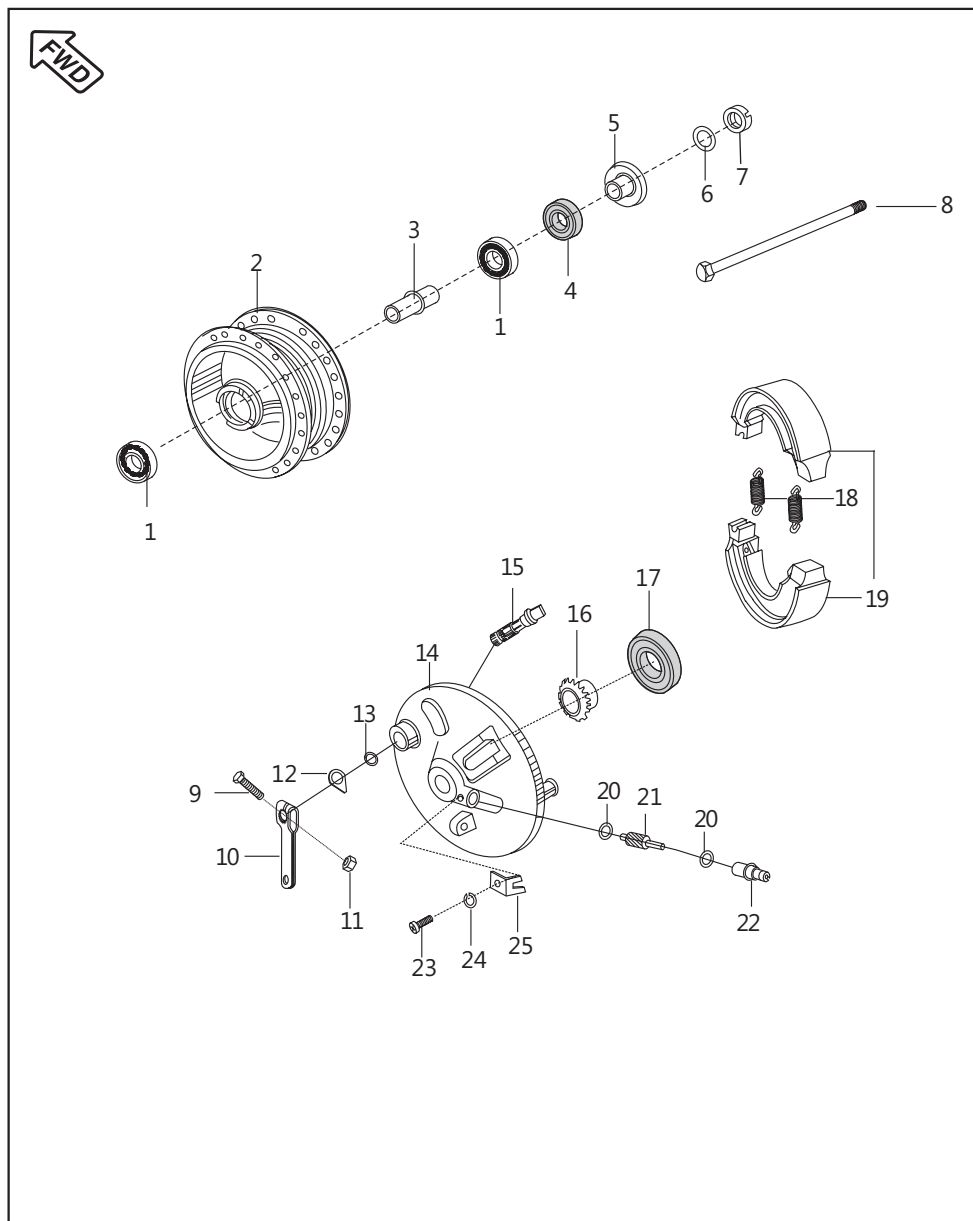


 Front Wheel Direction

Plate No.: 30

Front Hub (for Spoke Wheel)

No.	Part No.	Description	Qty	Remarks
1	39 2688 20	Ball Bearing 12 x 37 x 12	2	
2	JA 1316 03	Drum Front	1	
3	30 1510 32	Collar Bearing	1	
4	30 1510 33	Oil Seal	1	
5	DS 1510 60	Spacer Assy	1	
6	39 0781 11	Plain washer	1	
7	59 1500 03	U Nut M12	1	
8	DJ 1510 41	Axle Front	1	
9	39 0775 04	Bolt M6 X 30	1	
10	JA 1316 07	Lever Brake Front	1	
11	39 0798 15	Nut Hex. Flange M6	1	
12	DD 1510 09	Indicator Front	1	
13	30 1510 38	'O' Ring	1	
14	JA 1316 05	Panel Front Brake	1	
15	30 1510 11	Cam Brake	1	
16	30 1511 16	Gear Speedometer	1	
17	30 1510 35	Seal Oil	1	
18	30 1510 69	Spring	2	
19	30 1511 05	Shoe- Brake for Spare Parts	1	Asbestos type
	JN 1318 12	Shoe Brake	1	Non Asbestos type
20	39 0242 11	Washer - Plain	2	
21	30 1510 41	Gear Meter Screw	1	
22	JA 1316 06	Bush for Speedo Gear	1	
23	39 0840 01	Screw Pan Cross M4	1	
24	39 0900 12	Washer Spring	1	
25	30 1511 18	Stopper For Bushing	1	

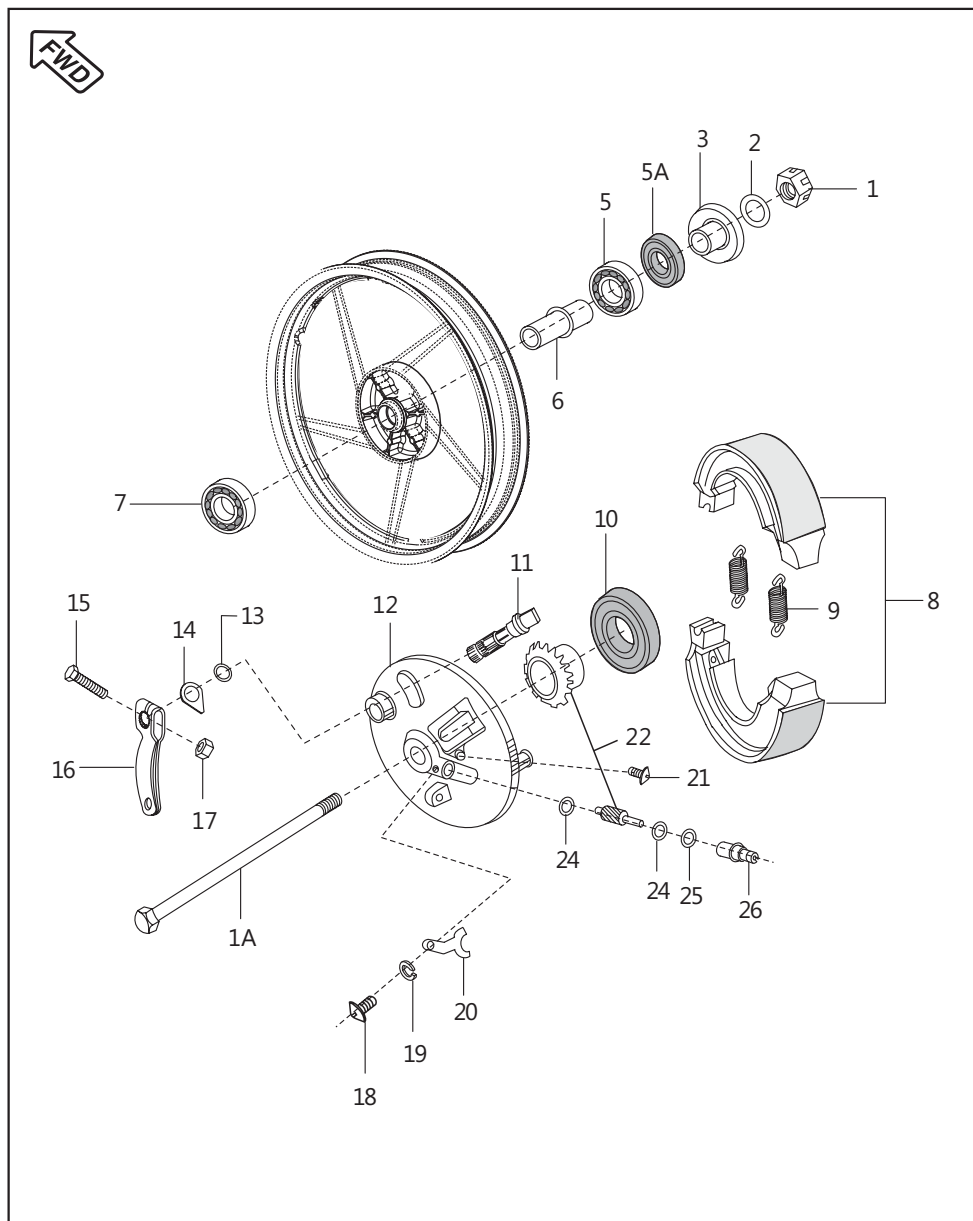


FWD Front Wheel Direction

Plate No.: 30

Front Hub (for Alloy Wheel)

No.	Part No.	Description	Qty	Remarks
1	59 1500 03	U Nut (M12)	1	
1A	JB 1310 17	Axle Front Wheel	1	
2	JB 1310 18	Plain Washer	1	
3	DS 1510 56	Dust Seal	1	
4	DS 1510 60	Spacer Assy	1	(N.I.)
	DJ 1510 34	Spacer	1	Ref. Cir. IB-253
5	39 2688 20	Bearing Ball	1	
5A	30 1510 33	Oil Seal	1	
6	30 1510 32	Collar Bearing	1	
7	39 2688 20	Ball Bearing	1	
8	30 1511 05	Shoe- Brake for Spare Parts	1	Asbestos type
	JN 1318 12	Shoe Brake	1	Non Asbestos type
9	30 1510 69	Spring	2	
10	14 1510 21	Oil Seal	1	
11	30 1510 04	Cam Brake Assly.	1	
12	JA 1316 05	Panel Front Brake	1	
13	30 1510 38	Ring 'O'	1	
14	DD 1510 09	Indicator	1	
15	39 0775 04	Bolt	1	
16	JA 1316 07	Lever Brake Cam	1	
17	39 0798 15	Nut	1	
18	39 0840 01	Screw Pan Cross M4	1	
19	39 0732 12	Washer Spring	1	
20	30 1511 18	Stopper for Bushing	1	
21	LB D000 01	Screw	1	To Secure Speedo Cable
22	36 DS 15 02	Speedometer Gear Kit	1	
23	30 1510 35	Seal Oil	1	N.I
24	39 0242 11	Washer Plain	2	
25	39 1013 21	'O' Ring	1	
26	JA 1316 06	Bushing Speedo Gear	1	

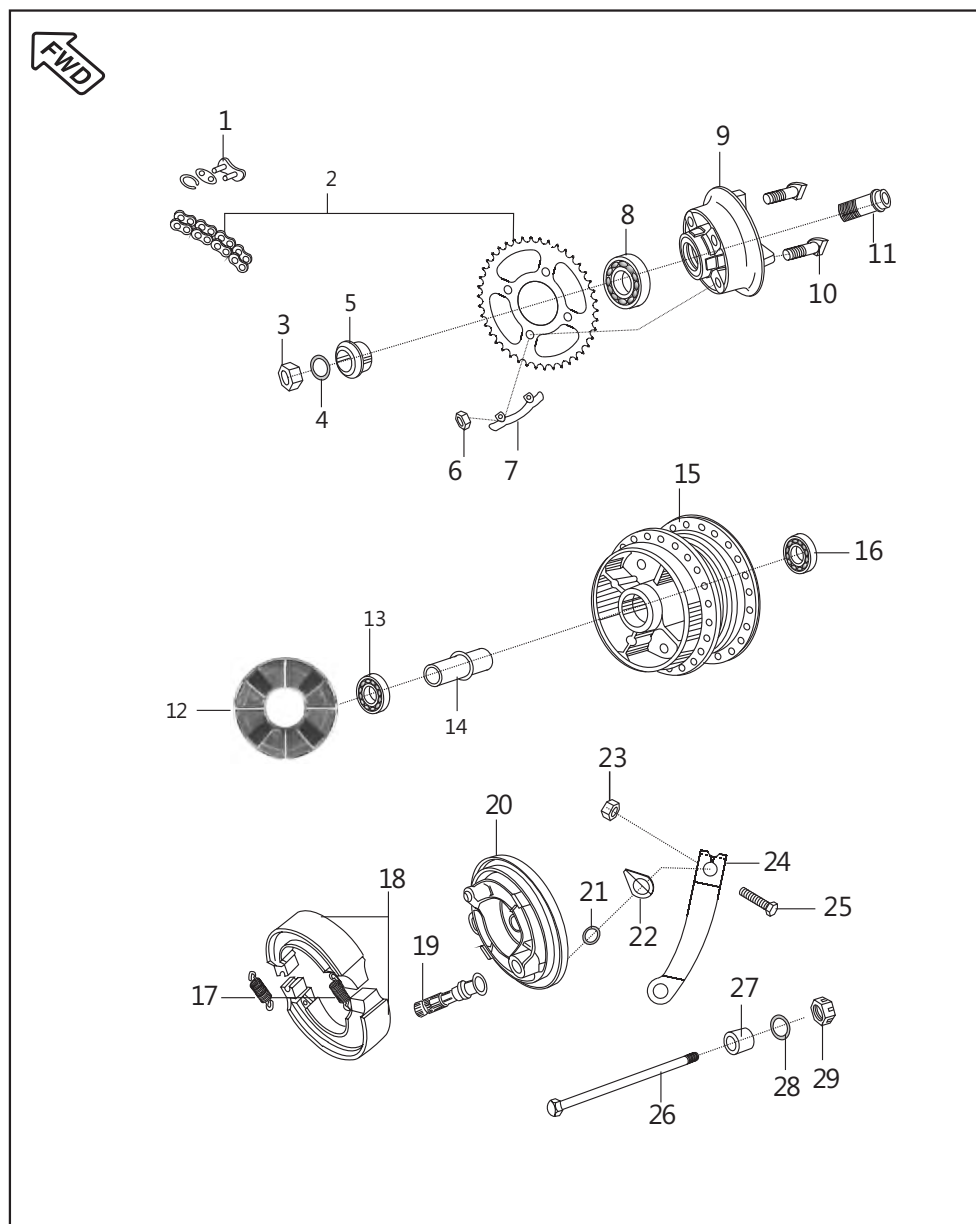


Front Wheel Direction

Plate No.: 31

Rear Hub (for Spoke Wheel)

No.	Part No.	Description	Qty	Remarks
1	JN 1410 02	Drive Chain Lock	1	Refer Page No. 107
2	36 PF00 10	Kit Chain Sprocket	1	
3	39 0801 15	Nut Hex. M20 X 1	1	
4	39 2567 11	Washer Plain	1	
5	DJ 1510 35	Collar	1	
6	39 0794 15	Hex Lock Nut	4	
7	DS 1510 74	Washer Four Rubber	2	
8	39 2240 20	Ball Bearing	1	
9	DS 1510 68	Coupling	1	
10	DS 1510 73	'D' Bolt	4	
11	DJ 1510 33	Sleeve Rear Axle	1	
12	DK 1510 94	Coupling Rubber	1	
13	39 2686 20	Bearing Sprocket Side	1	Ref. Cir. IB-120
14	30 1510 75	Collar Bearing	1	
15	PF 1312 28	Collar Bearing	1	Ref. Cir. IB-120
16	DS 1510 67	Drum Rear (4 Rubber)	1	
17	PF 1316 14	Drum Rear (4 Rubber)	1	
18	39 2687 20	Bearing Brake Side	1	
19	30 1510 69	Spring	2	
20	30 1511 05	Shoe- Brake for Spare Parts	1	
21	JN 1318 12	Shoe Brake Non Asbestos type	1	
22	30 1510 11	Cam Brake Rear	1	
23	39 0722 11	Washer	1	
24	DS 1510 76	Panel Rear Brake	1	
25	30 1510 38	Ring 'O'	1	
26	30 1510 05	Indicator	1	
27	39 0798 15	Nut M6	1	
28	JW 1316 01	Lever Brake Rear	1	
29	39 2447 04	Hex. Head Bolt M6	1	
30	PF 1312 08	Axle Rear Wheel (Dia.15)	1	
31	DX 1510 22	Collar	1	
32	39 2566 11	Washer Plain	1	
33	DH 1710 19	Nut 'U' M14 Swing Arm	1	

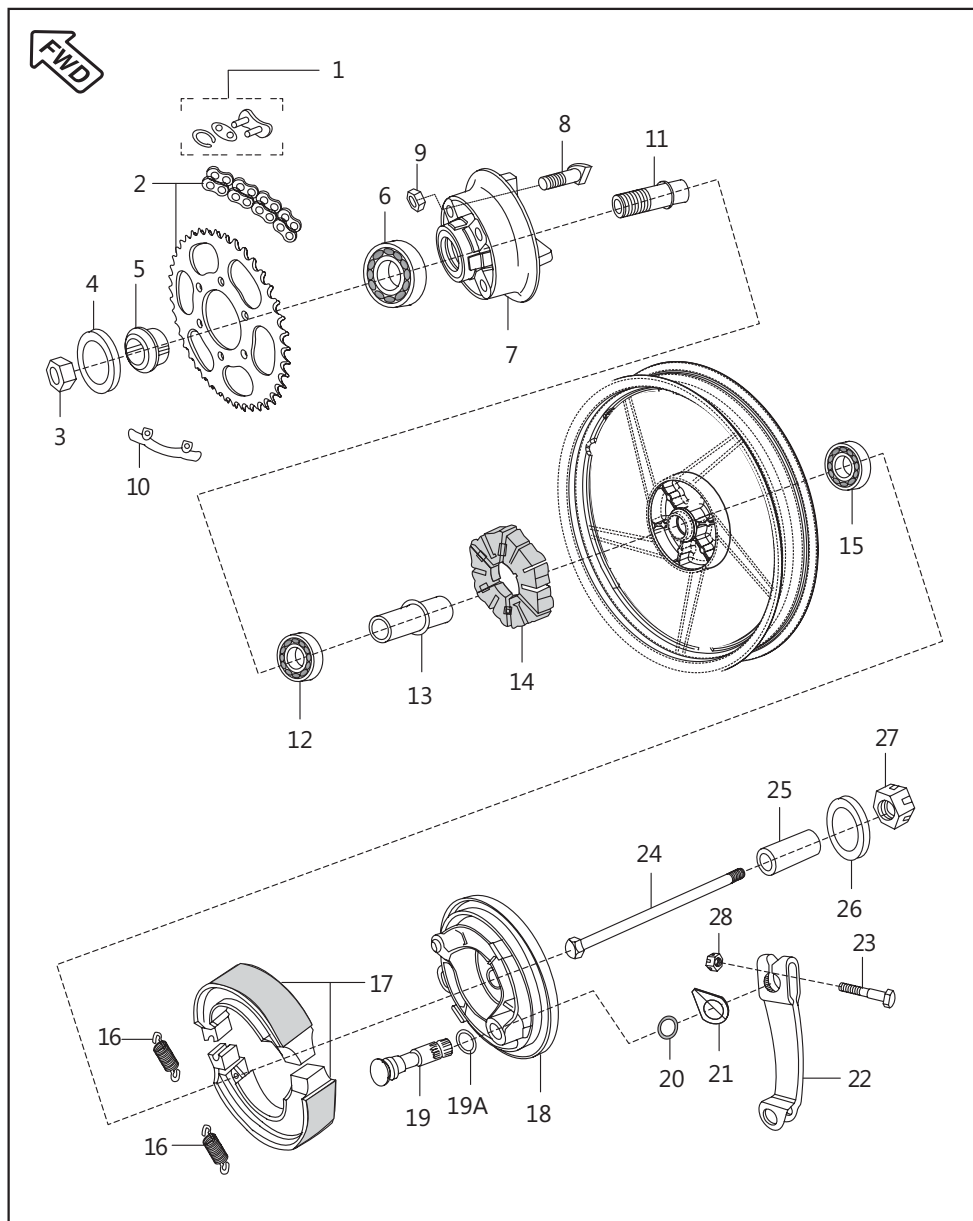


FWD Front Wheel Direction

Plate No.: 31

Rear Hub (for Alloy Wheel)

No.	Part No.	Description	Qty	Remarks
1	DJ 1510 53	Drive Chain Lock	1	
2	36 PF00 10	Chain Sprocket Kit	1	
3	LC A000 01	Nut	1	
	39 0801 15	Nut	1	Alt for LC A000 01
4	LD B000 02	Plain Washer	1	
	39 2567 11	Plain Washer	1	Alt. For LD B000 02
5	DJ 1510 35	Collar	1	
6	39 2240 20	Bearing Ball	1	
7	DS 1510 68	Coupling	1	
8	DS 1510 73	'D' Bolt	4	
9	39 0794 15	Hex Lock Nut	4	
10	DS 1510 74	Washer	2	
11	DJ 1510 33	Sleeve	1	
12	39 2686 20	Bearing Ball	1	
13	30 1510 75	Collar Bearing	1	
	PF 1312 28	Collar Bearing	1	Ref. Cir. IB-120
14	DK 1510 94	Coupling Rubber	1	
15	39 2687 20	Bearing Ball	1	
16	30 1510 69	Spring	2	
17	30 1511 05	Shoe- Brake for Spare Parts	1	Asbestos type
	JN 1318 12	Shoe Brake	1	Non Asbestos type
18	DS 1510 69	Panel Rear Brake	1	
19	30 1510 11	Cam Brake	1	
19A	39 0722 11	Plain Washer	1	
20	30 1510 38	Ring 'O'	1	
21	30 1510 05	Indicator	1	
22	JW 1316 01	Lever Brake	1	
23	39 2447 04	Bolt	1	
24	PF 1312 08	Axle	1	
25	DX 1510 22	Collar	1	
26	39 2567 11	Plain Washer	1	
27	DH 1710 19	'U' Nut	1	
28	39 0798 15	Nut M6	1	

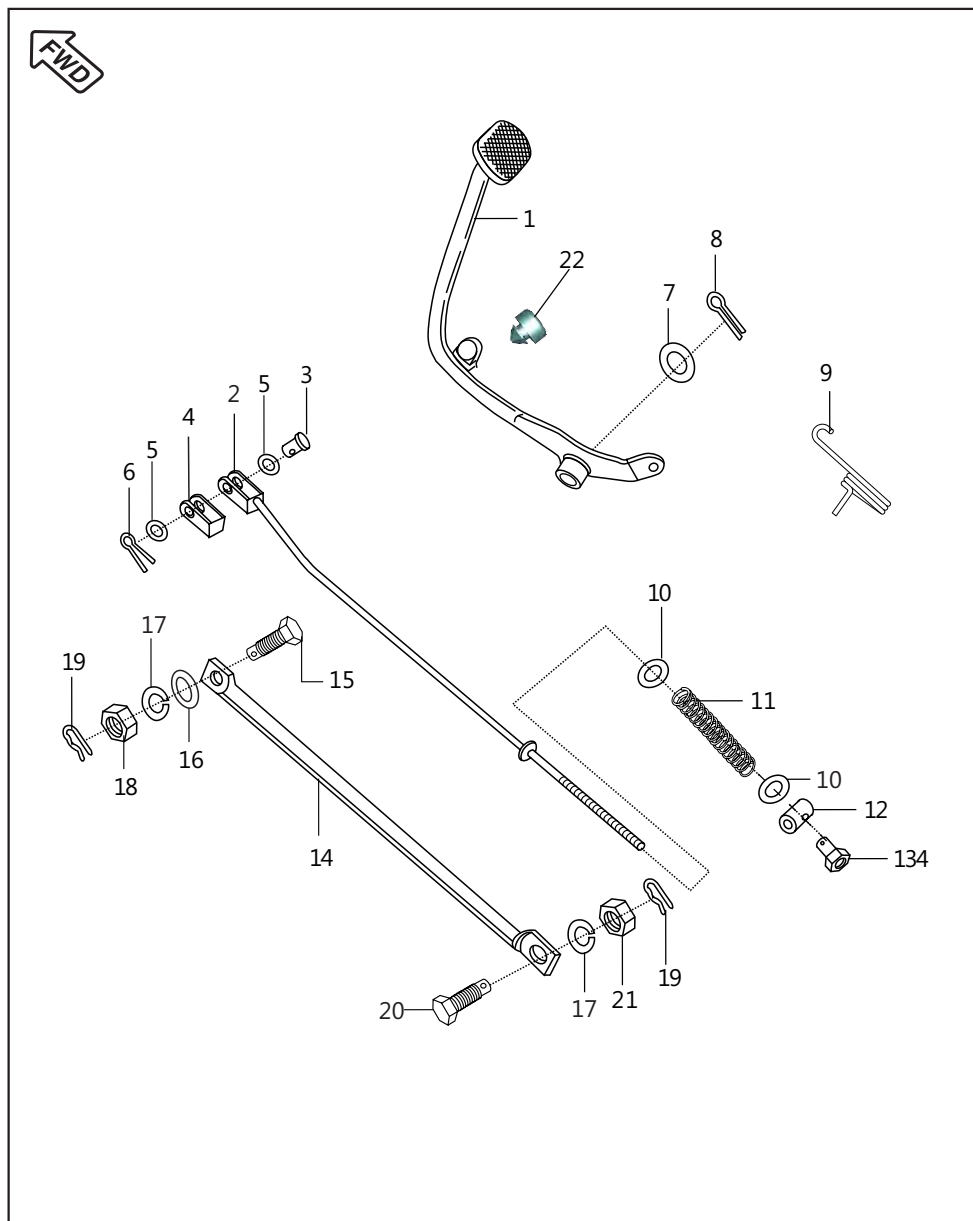


FWD Front Wheel Direction

Plate No.: 32

Rear Brake Pedal

No.	Part No.	Description	Qty	Remarks
1	PF 1610 02	Brake Pedal	1	
2	PF 1610 01	Rod brake	1	
3	30 1910 38	Pin	1	
4	DS 1910 35	Packing Brake rod	1	
5	39 0198 11	Plain washer	2	
6	39 0808 08	Split pin	1	
7	39 0805 11	Plain Washer	1	
8	39 0797 08	Pin Cotter	1	
9	JV 1610 14	Brake Pedal Return Spring	1	
10	39 0198 11	Washer Plain	2	
11	30 1910 35	Spring	1	
12	JB 1610 02	Pin Brake Rod	1	
13	30 1910 36	Nut Brake Adjuster	1	
14	JW 1220 04	Rod Torque	1	
15	DH 1510 29	Step Bolt Torque Rod	1	
16	39 1540 11	Plain Washer	1	
17	39 0789 12	Spring Washer	2	
18	39 0694 15	Hex. Lock Nut M8 x 1.25	1	
19	39 0807 08	Split Pin	2	
20	30 1510 95	Bolt Hex.	1	
21	39 0708 15	Nut Hex. M10 X 1	1	
22	DD 1610 78	DAMPER	1	

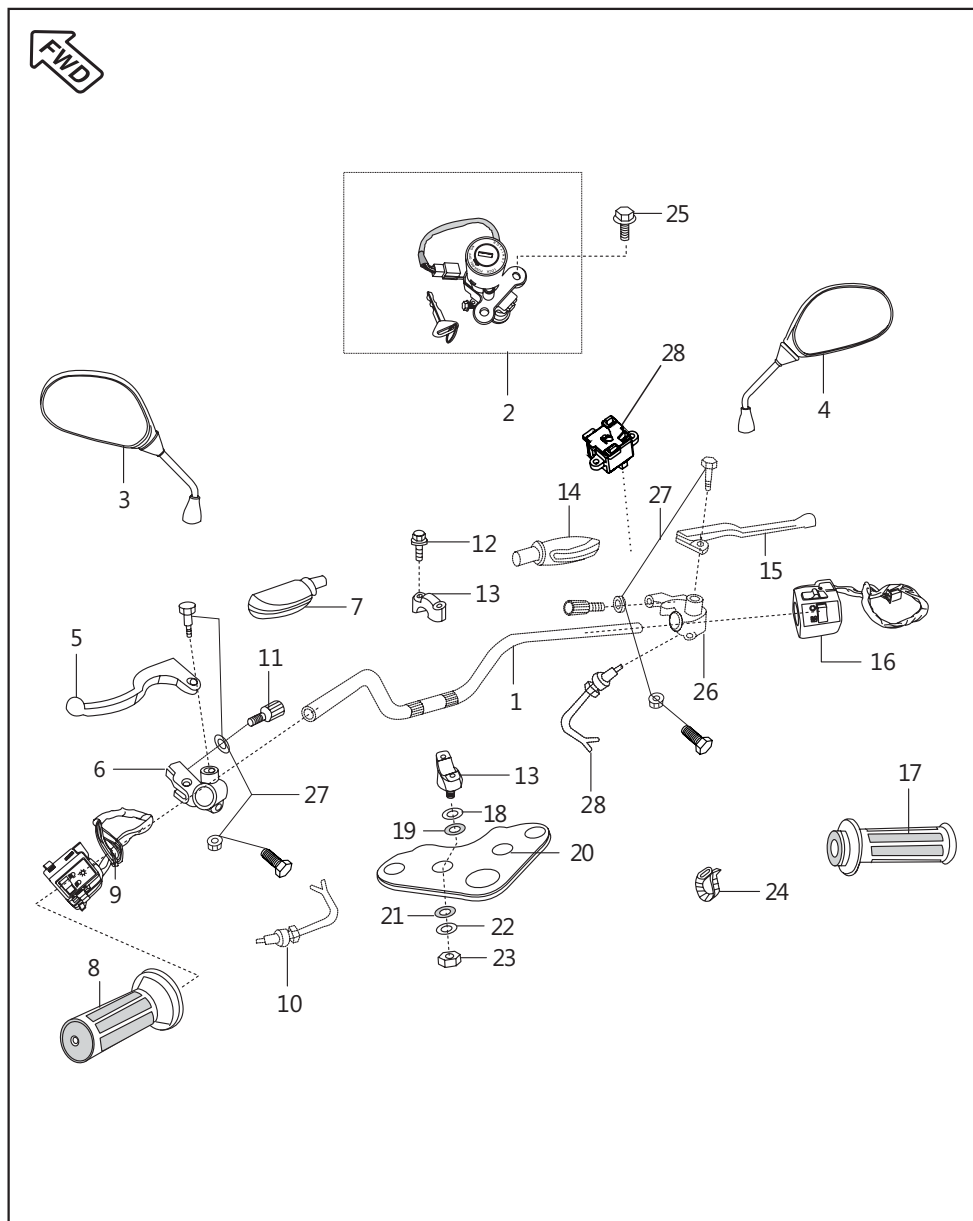


 Front Wheel Direction

Plate No.: 33

Handle Bar

No.	Part No.	Description	Qty	Remarks
1	DU 1810 21	Handle Bar	1	
2	DS 1810 22	Switch Ignition Assly	1	
2A	PF 2326 01	3 in One Lock Set	1	N.I.
3	DJ 2210 03	Mirror Assly. LH	1	
4	DJ 2210 04	Mirror Assly. RH	1	
5	DX 1910 09	Lever Control LH	1	
	DJ 1910 83	Lever Control LH	1	Ref. Cir. IB-114
6	DJ 1910 54	Holder LH	1	
	DJ 1910 81	Holder LH	1	Ref. Cir. IB-114
7	DS 1910 52	Boot For Lever LH	1	
8	DU 1910 09	Grip LH	1	
9	JB 4014 00	Control Switch LH	1	
10	JB 4014 09	Clutch Switch	1	N.I.
	JZ 4014 05	Clutch Switch	1	N.I. Ref. Cir. IB-114
11	DD 1911 47	Screw for Cable Adjuster	2	N.S
12	39 1074 04	Flanged Bolt	4	
13	36 DS18 01	Holder Handle Set	2	Refer Page No. 106
14	DS 1910 18	Boot For Lever RH	1	
15	DD 1911 42	Lever RH	1	
16	PF 4014 08	Control Switch RH	1	
	PF 4014 17	Control Switch RH	1	Ref. Cir. IB-113
17	DU 1910 03	Hand Grip Assly RH	1	
18	DS 1810 07	Washer Handle Upper	2	
19	DS 1810 08	Damper Handle Upper	2	

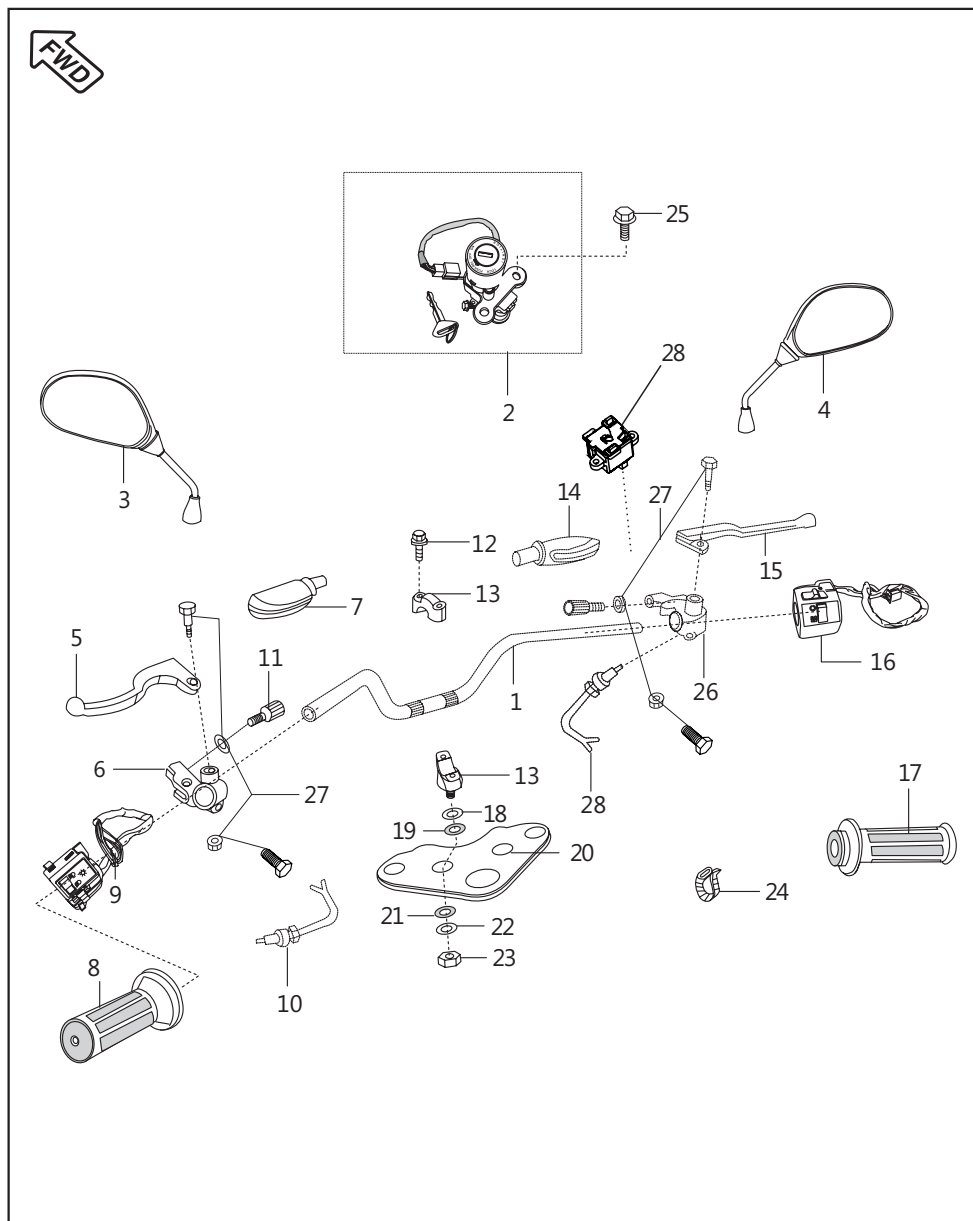


 Front Wheel Direction

Plate No.: 33


Handle Bar

No.	Part No.	Description	Qty	Remarks
20	DS 1810 05	Bracket Upper Front Fork	1	For Fairing Version
21	DS 1810 09	Damper Handle Lower	2	
22	DS 1810 10	Washer Handle Lower	2	
23	39 0422 15	Nut Nyloc M10	2	
24	30 1910 48	Band	2	
25	39 1943 04	Flange Bolt	2	For Ignition Switch
26	DS 1910 38	Holder RH	1	
27	36 DK00 37	Kit Mirror Holder	2	Refer Page No.108
28	DD 2011 70	Switch Assly	1	

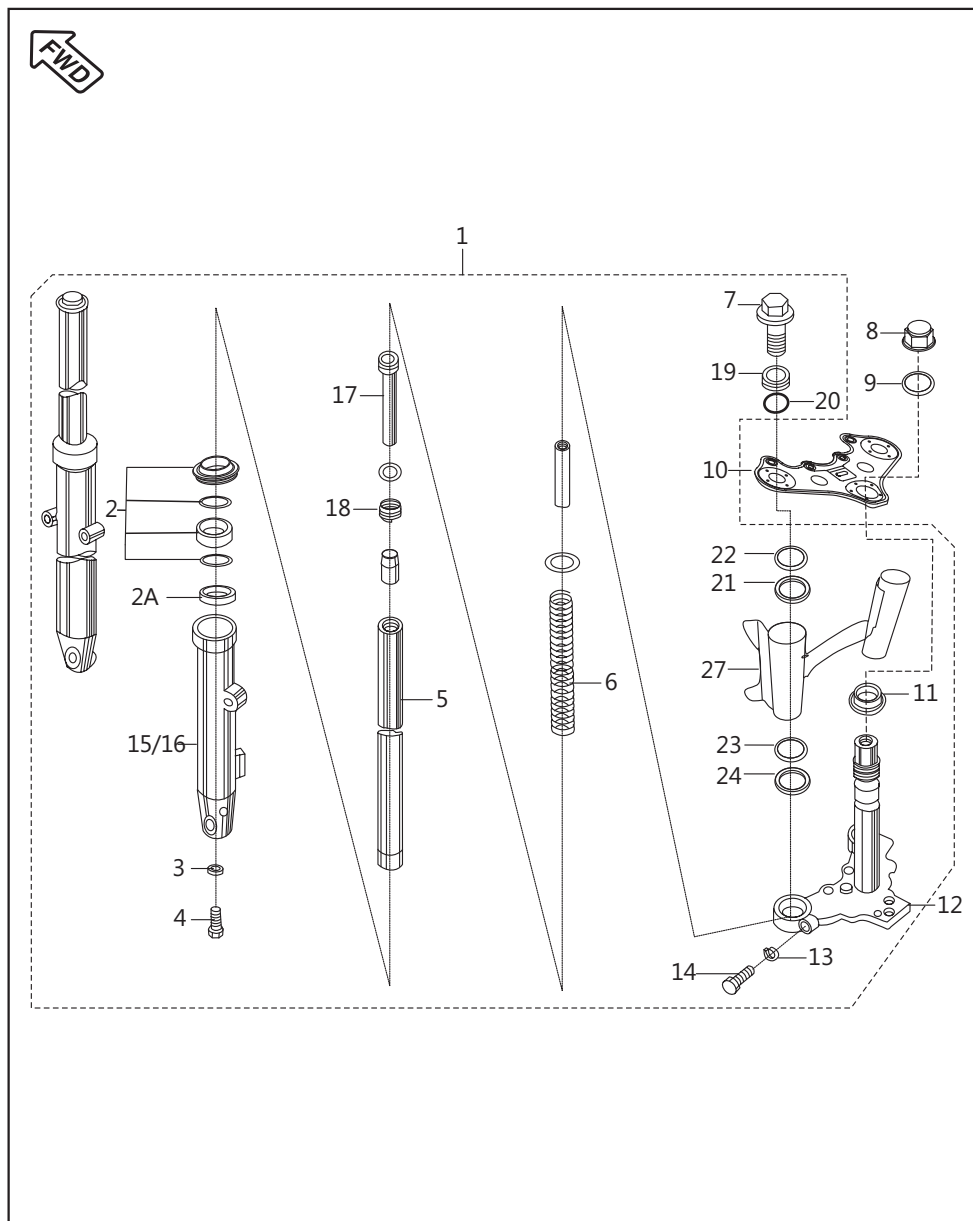

Front Fork (for Without Fairing Version)

No.	Part No.	Description	Qty	Remarks
1	PF 1210 12	Fork Front	1	
2	36 DK00 20	Front Fork Seal Kit	1	Refer Page No. 107
2A	DJ 1810 87	Seal - Oil for 31 Dia. Fork	2	
3	30 1810 26	Gasket	2	
4	30 1810 25	Bolt	2	
5	PF 1210 17	Fork Pipe Inner	2	
6	DS 1810 84	Spring Front Fork	2	
7	59 0400 06	Bolt Fork	2	With Washer
8	DS 1810 15	Cap Nut Fork	1	
9	DS 1810 16	Plain Washer	1	For Cap Nut
10	DS 1810 05	Bracket Upper Front Fork	1	
11	30 1810 09	Bearing Cone	1	
12	DS 1810 20	Under Bracket Fork	1	
13	39 0789 12	Spring Washer	2	
14	39 1181 01	Bolt	2	
15	PF 1210 18	Pipe Left Fork Outer	1	
16	PF 1210 19	Pipe Right Fork Outer	1	
17	PA 1210 41	Seat Pipe	2	
18	31 1810 99	Rebound Spring	2	
19	DS 1810 12	Bolt Fork	2	
20	31 1811 02	'O' Ring	2	
21	DJ 1810 42	Cover Trail A	2	
22	PF 1210 28	Damper Cover Fork	2	
23	DJ 1810 43	Cover Trail B	2	
24	DJ 1810 85	Cushion Rubber	2	
25	PF 1210 15	Cover Fork LH	1	N.I
26	PF 1210 16	Cover Fork RH	1	N.I
27	PF 1210 24	Lamp Shade Assly	1	

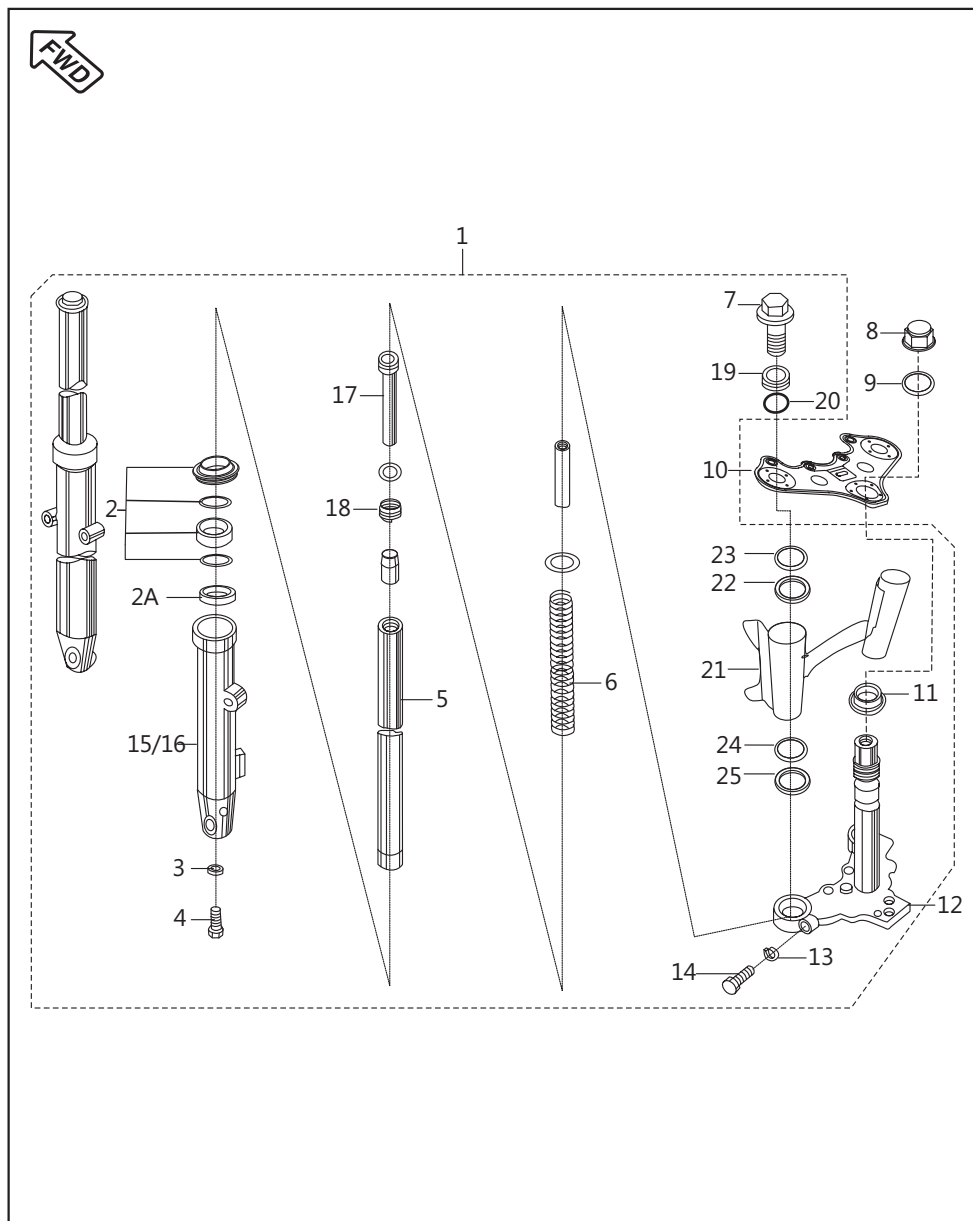


 Front Wheel Direction

Plate No.: 34


Front Fork (For Fairing Version)

No.	Part No.	Description	Qty	Remarks
1	PF 1210 26	Fork Front	1	Refer Page No. 107
2	36 DK00 20	Front Fork Seal Kit	2	
2A	DJ 1810 87	Seal Oil	2	
3	30 1810 26	Gasket	2	
4	30 1810 25	Bolt	2	With Washer
5	PF 1210 17	Fork Pipe Inner	2	
6	DS 1810 84	Spring Front Fork	2	
7	59 0400 06	Bolt Fork	2	
8	DS 1810 15	Cap Nut Fork	1	For Cap Nut
9	DS 1810 16	Plain Washer	1	
10	DS 1810 05	Bracket Upper Front Fork	1	
11	30 1810 09	Bearing Cone	1	
12	DS 1810 20	Under Bracket Fork	1	
13	39 0789 12	Spring Washer	2	
14	39 1813 04	Bolt	2	
15	PF 1210 18	Pipe Left Fork Outer	1	
16	PF 1210 19	Pipe Right Fork Outer	1	
17	DE 1810 33	Cylinder Complete Fork	2	
18	31 1810 99	Rebound Spring	2	
19	DS 1810 12	Bolt Fork	2	
20	30 1810 29	'O' Ring	2	
21	PF 1210 24	Lamp Shade Assly.	1	
22	DJ 1810 42	Cover Trail A	2	
23	PF 1210 28	Damper Cover Fork	2	
24	DJ 1810 43	Cover Trail B	2	
25	DJ 1810 85	Cushion Rubber	2	
26	DS 1810 70	Bush Guide	2	
27	DS 1810 72	Washer Guide Bush	2	

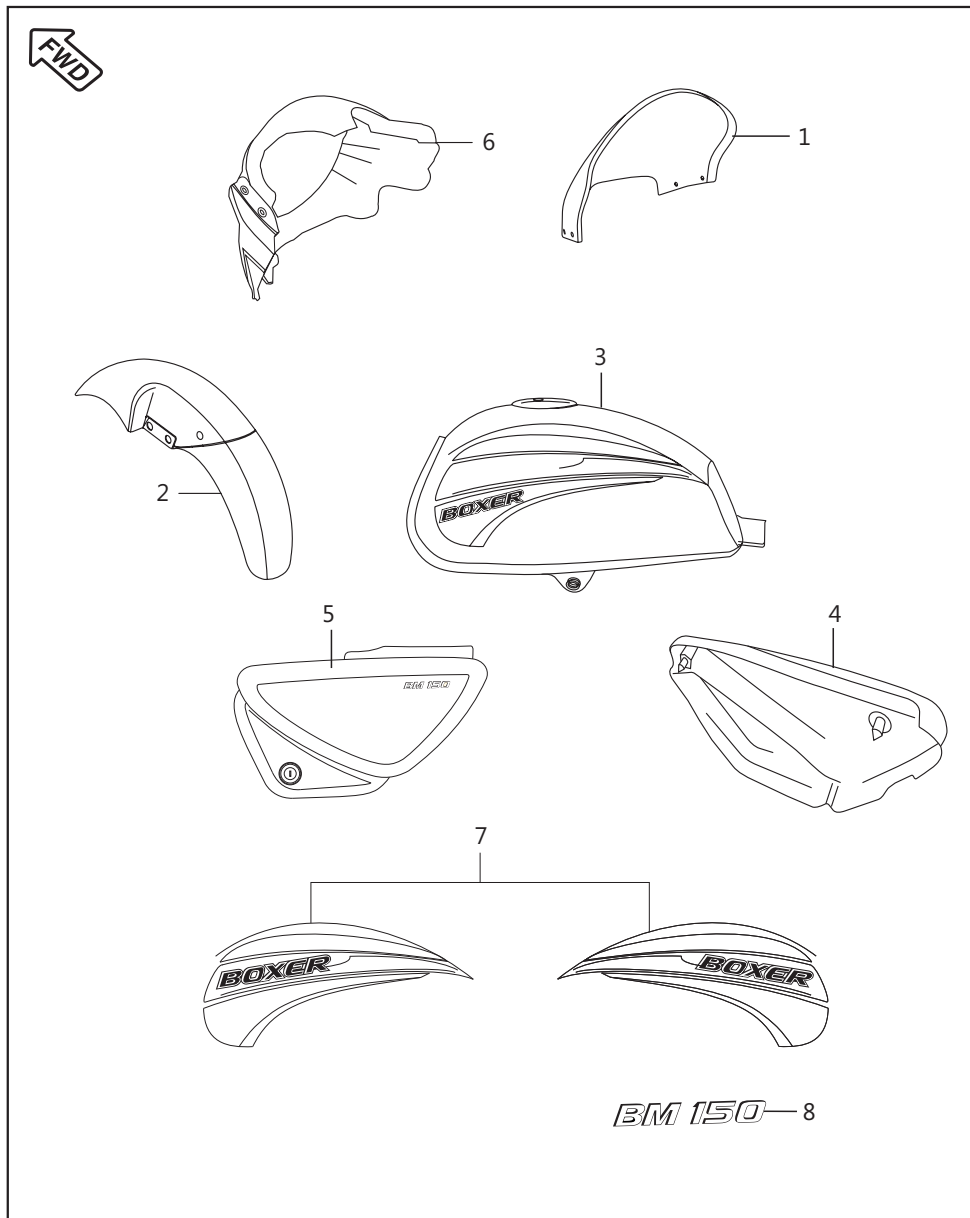

Painted Parts and Decals

No.	Part No.	Description	Qty	Remarks
1	PF 1812 09	Wind Shield	1	
2	PF 7201 X3	Front Fender Painted	1	Ebony Black
	PF 7201 3E	Front Fender Painted	1	Elect Blue
	PF 7201 3F	Front Fender Painted	1	Flame Red
	PF 7201 2D	Front Fender Painted	1	Arctic White
	PF 1814 04	Front Fender	1	For Iran
3	PF 7101 X3	P.Tank Ebony Black Decal	1	Black Decal
	PF 7101 3E	P.Tank Electron Blue Decal	1	Blue Decal
	PF 7101 3F	P.Tank Flame Red Decal	1	Red Decal
	PF 7101 2D	P.Tank Arctic White Black Decal	1	Artic White Black Decal
	52 PF05 05	Fuel Tank D Grn Wh Dkl Bm150 Iran	1	For Iran
4	PF 7302 X3	Side Cover Rh	1	Ebony Black Decal
	PF 7302 3E	Side Cover Rh	1	Electron Blue Decal
	PF 7302 3F	Side Cover Rh	1	Flame Red Decal
	PF 7302 2D	Side Cover Rh	1	Artic White Black Decal N.S
	52 PF05 01	Side Cvr Rh D Gr W Eb Blk Dkl	1	For Iran
5	PF 7301 X3	Side Cover Lh	1	Ebony Black Decal
	PF 7301 3E	Side Cover Lh	1	Electron Blue Decal
	PF 7301 3F	Side Cover Lh	1	Flame Red Decal
	PF 7301 2D	Side Cover Lh	1	Artic White Black Decal N.S
	52 PF05 00	Side Cover Lh	1	For Iran
6	PF 7401 X3	Cowling Painted	1	Ebony Black
	PF 7401 3E	Cowling Painted	1	Electron Blue
	PF 7401 3F	Cowling Painted	1	Flame Red
	PF 7401 2D	Cowling Painted	1	Arctic White
	52 PF05 03	Cowling Painted	1	For Iran
7	36 PF00 15	Kit Tank Dcl Red	1	
	36 PF00 16	Kit Tank Dcl Blue	1	
	36 PF00 17	Kit Tank Dcl Black	1	
	36 PF00 83	Kit Tank Decal Arctic White	1	
8	36 PF00 18	Kit Dcl Side Cover Red BM150	1	
	36 PF00 19	Kit Dcl Side Cover Blue Bm150	1	
	36 PF00 20	Kit Dcl Side Cover Black Bm150	1	
	36 PF00 84	Kit Side Cover Arctic White	1	

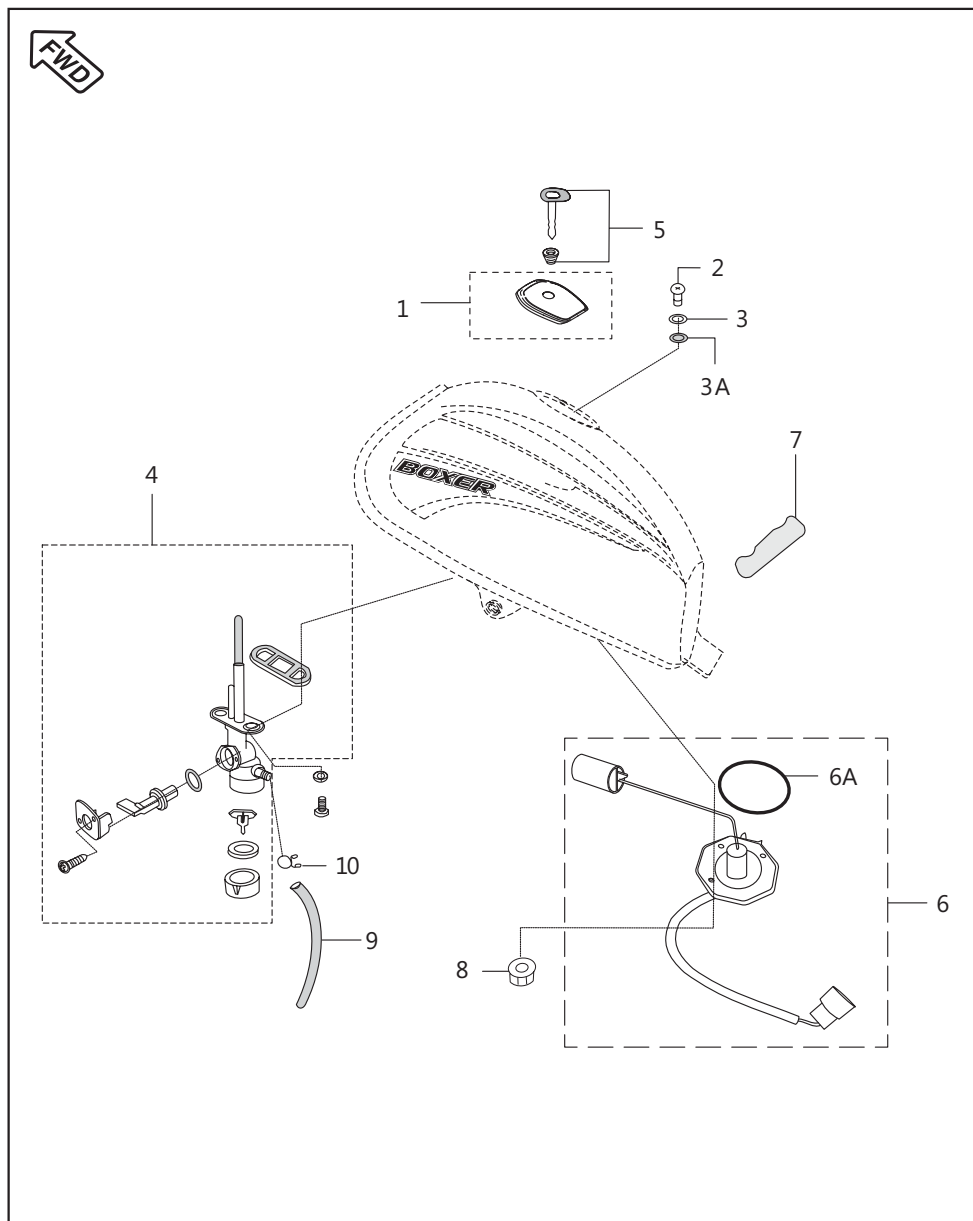

Fuel Tank, Cap Tank and Gauge Fuel

No.	Part No.	Description	Qty	Remarks
1	DS 1410 09	Cap Assly. Tank	1	
2	39 0761 01	Screw Pan Cross	2	
3	39 2179 24	Washer	2	
3A	30 1410 31	'O' Ring	2	
4	PF 1718 02	Fuel Tap	1	
5	PF 2326 01	3 In 1 Lock Set with Key	1	
6	PF 4026 00	Sensor Fuel Level	1	With 'O' Ring
6A	DK 1410 28	O' Ring	1	
7	DS 1410 13	Seat Tape	1	Pasted on Tank
8	39 2484 15	Flanged Nut	4	
9	PF 1718 03	Pipe Fuel	1	Cock to Carburettor
10	DK 1410 41	Pipe Clip	2	


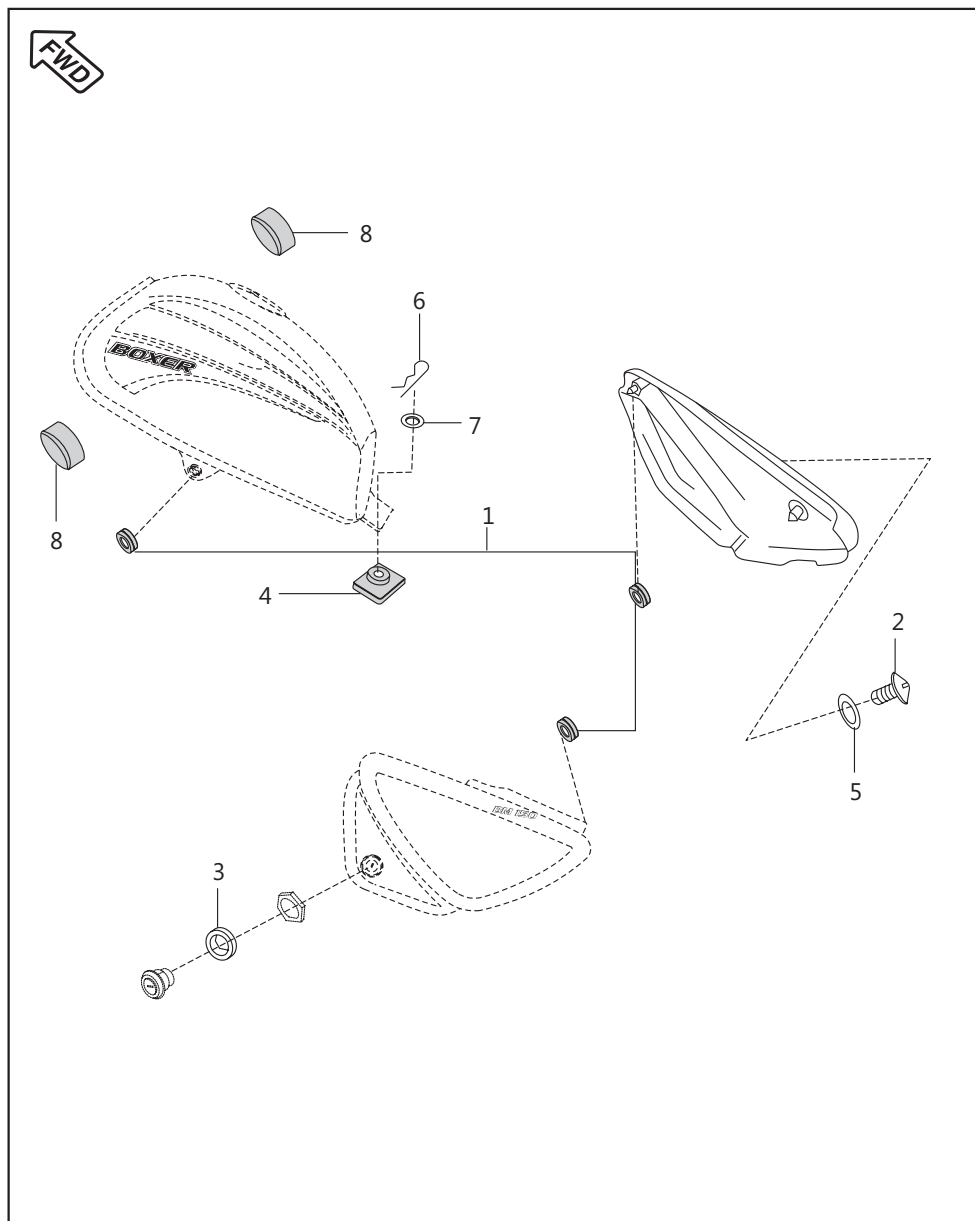


Plate No.: 37

Fittings - Fuel Tank, Side Covers & Cover Seat

No.	Part No.	Description	Qty	Remarks
1	36 DS14 01	Grommet Kit for Side Cover	1	Refer Page No. 107
2	DG 1611 21	Screw	1	
3	DU 1611 02	Damper	1	
4	JV 1710 01	Damper Tank Rear	1	For Tank
5	39 1789 24	Washer Nylon	3	
6	39 0983 08	Pin Snap	1	
7	39 1054 11	Plain Washer	1	
8	DJ 1410 08	Damper Front	2	For Tank Mounting

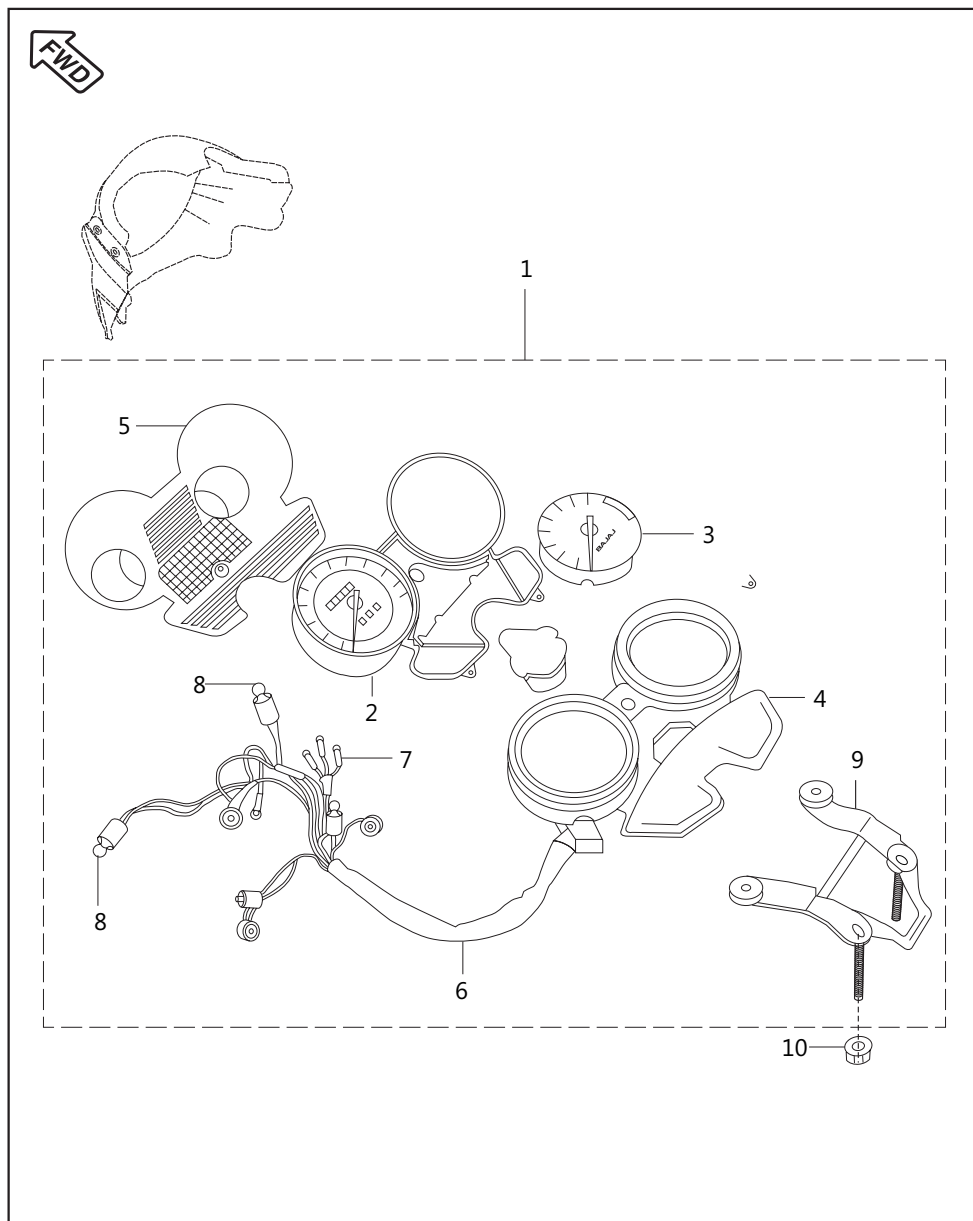


 Front Wheel Direction

Plate No.: 38


Meter Assembly

No.	Part No.	Description	Qty	Remarks
1	PF 4024 00	Speedometer Assly.	1	
2	PF 4024 01	Speedometer Machine With Dial	1	
3	PF 4024 05	Fuel Gauge Machine with dial	1	
4	PF 4024 02	Speedo meter Top Cover	1	
5	PF 4024 06	Speedo meter Bottom Cover	1	
6	PF 4024 03	Speedometer wiring harness	1	
7	CL 2010 42	Bulb 12V - 2 W	4	
8	DH 1910 37	Bulb 12V - 3 W	3	
9	PF 4024 04	Speedometer Bracket	1	
10	39 0798 15	Flanged Nut	2	

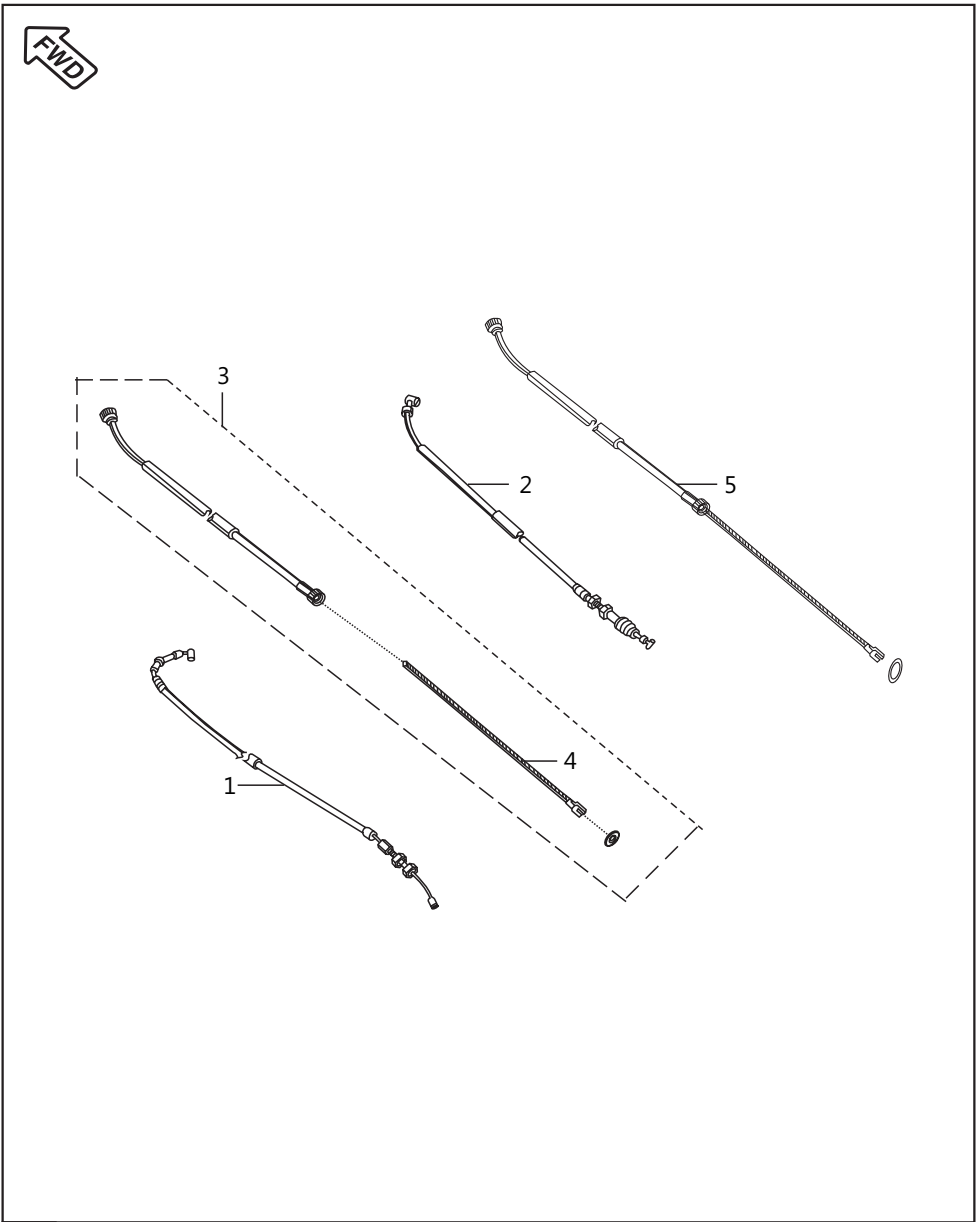


Control Cables

No.	Part No.	Description	Qty	Remarks
1	PF 1612 11	Cable Accelerator	1	Ref. Cir. IB-113
	PF 1612 17	Cable Accelerator	1	
2	PF 1612 12	Cable Clutch	1	
3	PF 1612 08	Cable Speedometer	1	N.I.
4	PF 1612 09	Cable Speedometer Inner	1	
5	PF 1612 13	Cable front Brake	1	
6	39 1561 21	'O' Ring	1	

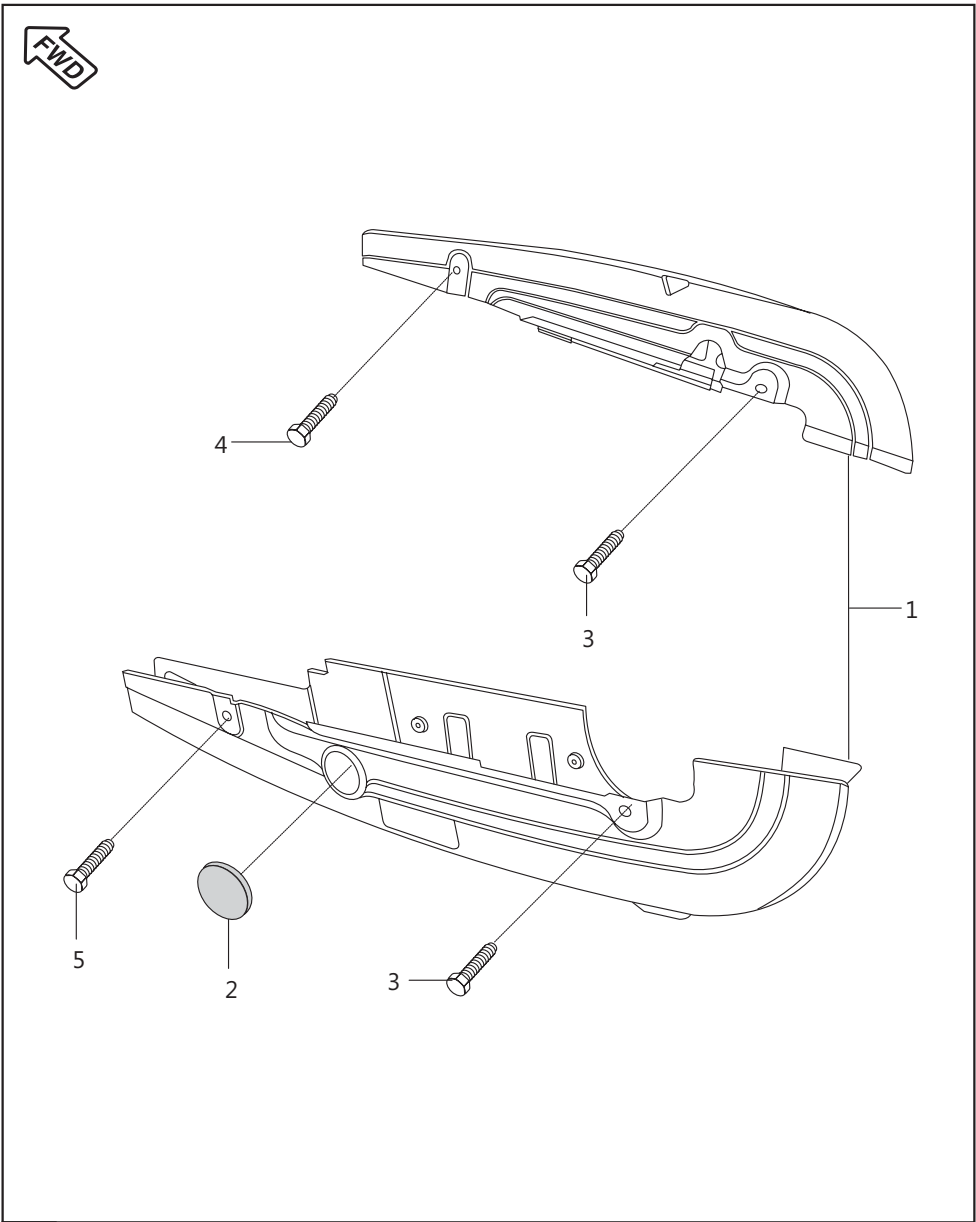


Chain Case

No.	Part No.	Description	Qty	Remarks
1	36 PF00 11	Kit Chain Case	1	Refer Page No. 107
2	15 1610 69	Rubber Cap	1	
3	DH 1612 83	Bolt M6	2	
4	JB 1812 20	Flange Bolt M6 X 1P X 62 L	2	

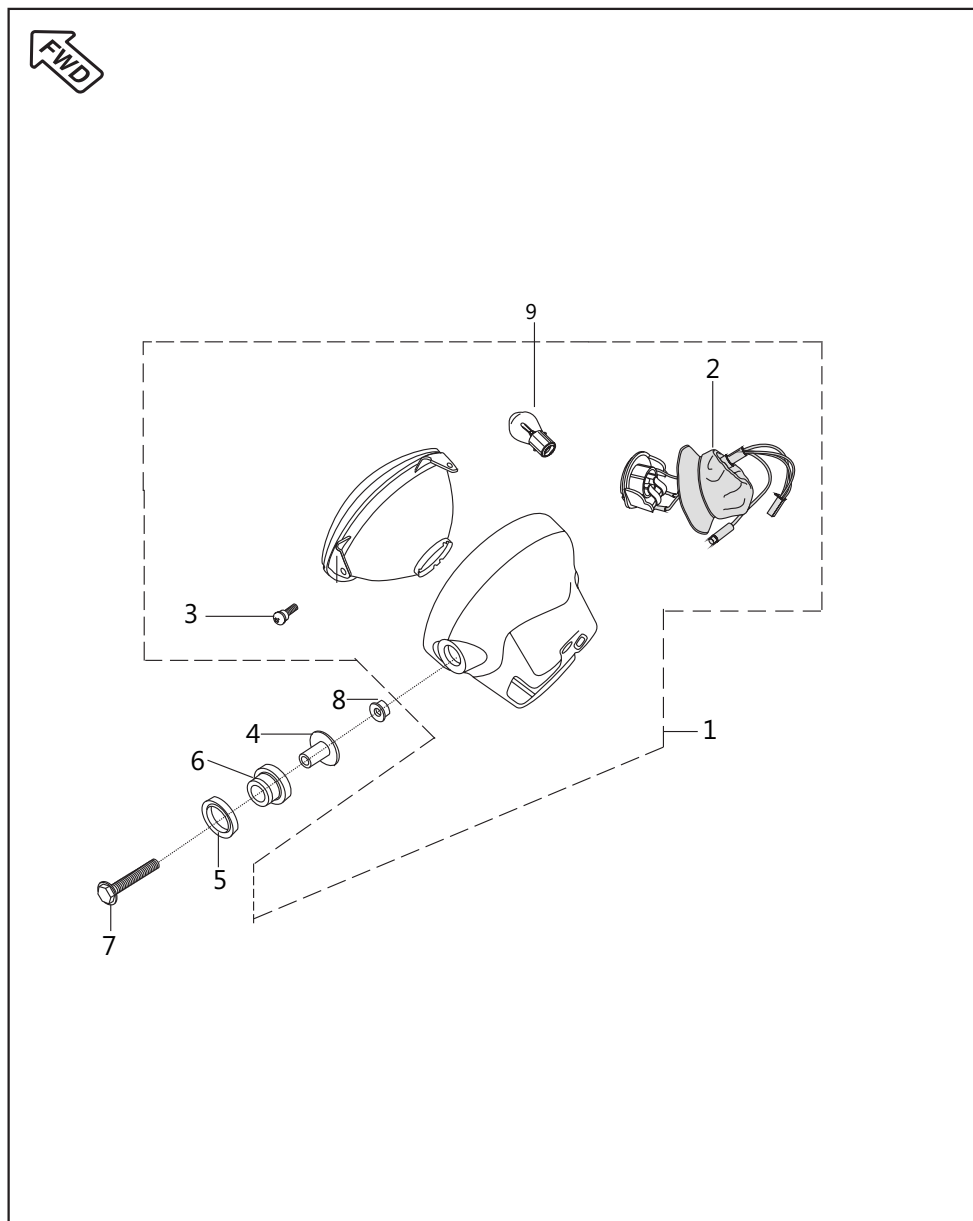

Head Lamp (Without Fairing)

No.	Part No.	Description	Qty	Remarks
1	PF 4010 00	Head light assly	1	N.S
	PF 4010 07	Head light assly Without Bulb	1	
2	PF 4010 09	Lamp Holder (Socket) Assly.	1	
3	DU 2010 29	Special Screw	2	
4	DS 2010 19	Collar	2	
5	DS 2010 20	Damper I	2	
6	DS 2010 21	Damper II	2	
7	39 2582 04	Flange Bolt M-8 L 35	2	
8	39 1970 15	Flange Nut M-8	2	
9	CL 2010 23	Lamp 12 V 35/35 W HS1	1	

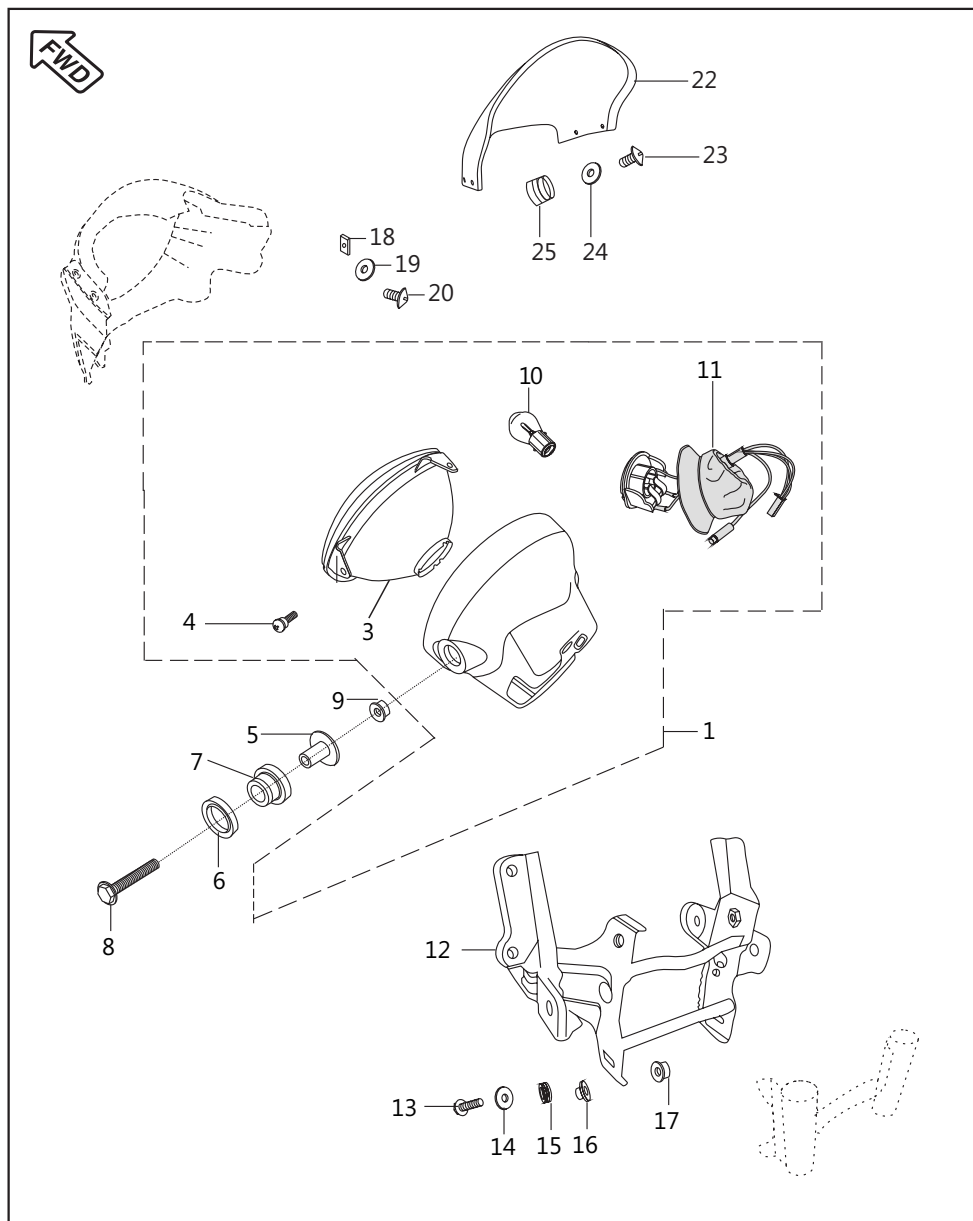


FWD Front Wheel Direction

Plate No.: 41


Head Lamp (With Fairing)

No.	Part No.	Description	Qty	Remarks
1	PF 4010 00	Head light assly	1	N.S
2	PF 4010 07	Head light assly Without Bulb	1	
3	DJ 2010 51	Reflector with Lens	1	
4	DU 2010 29	Special Screw	2	
5	DS 2010 19	Collar	2	
6	DS 2010 20	Damper I	2	
7	DS 2010 21	Damper II	2	
8	39 2582 04	Flange Bolt M-8 L 35	2	
9	39 1970 15	Flange Nut M-8	2	
10	CL 2010 23	Lamp 12 V 35/35 W HS1	1	
11	PF 4010 09	Lamp Holder (Socket) Assly.	1	
12	PF 1210 25	Fairing Structure	1	
13	39 1074 04	Bolt Flange M6	4	
14	JW 1812 29	Plain Washer	6	
15	JB 1510 12	Grommet Fairing Mounting	4	
16	JB 1510 13	Sleeve Fairing Mounting	4	
17	39 0798 15	Hex Nut	2	
18	35 1610 60	Nut - Clip	4	
19	39 1765 11	Washer - Plain	4	
20	39 2238 01	Screw - Pan Head	4	
21	PF 1812 11	Grommet - Cowling Mtg	2	N.I.
22	PF 1812 09	Windshield	1	
23	DL 1810 09	Screw - M5 X L 16	4	
24	39 2141 24	Washer (Non Metallic Washer)	4	
25	DL 1810 10	Nut-well M5	4	

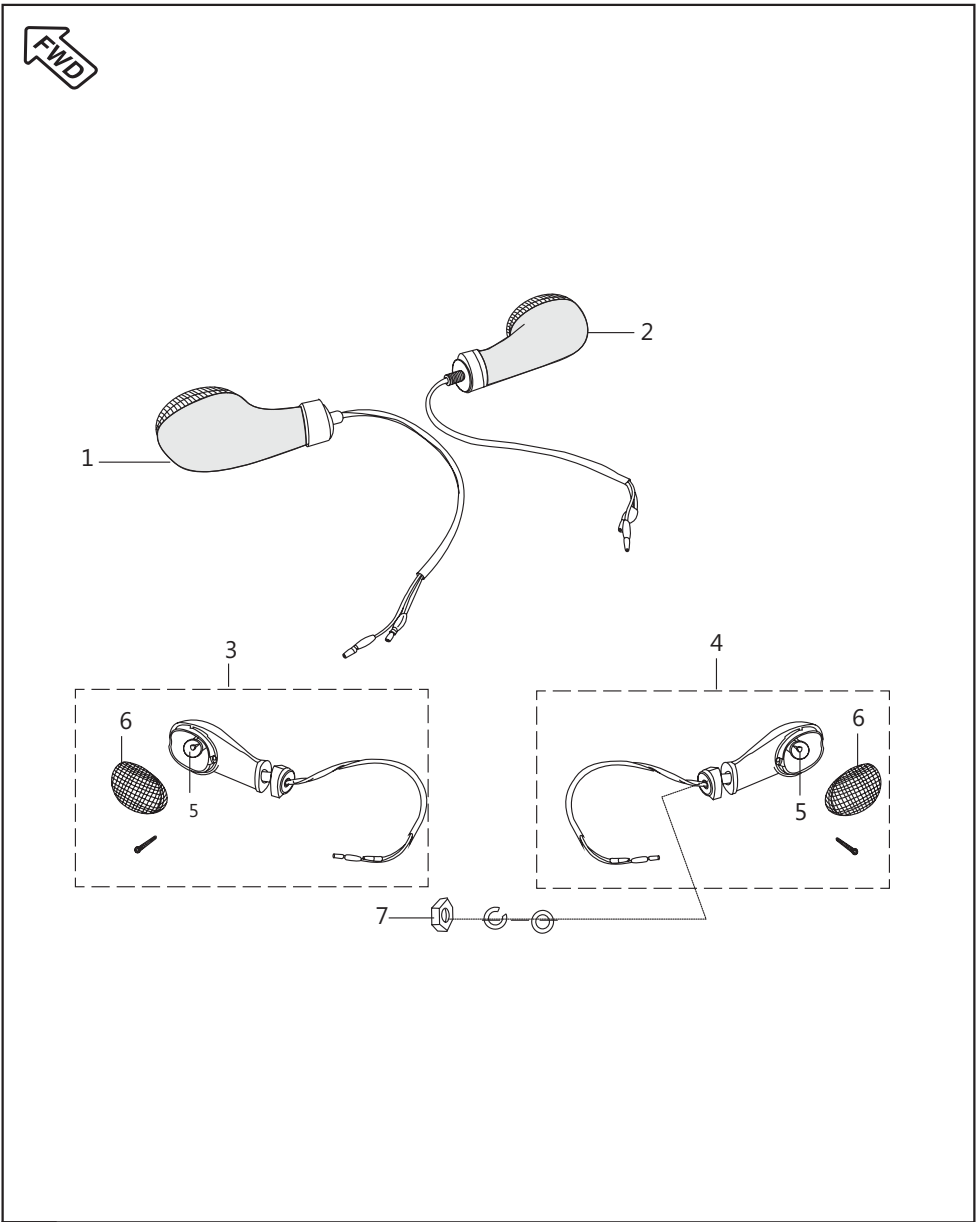

Indicator Light Assembly

No.	Part No.	Description	Qty	Remarks
1	DM 2010 27	Dir. ind. Front LH with Lamp	1	E Marking
2	DM 2010 28	Dir. ind. Front RH with Lamp	1	E Marking
3	DM 2010 29	Dir. ind. Rear LH with Lamp	1	E Marking
4	DM 2010 30	Dir. ind. Rear RH with Lamp	1	E Marking
5	06 2010 83	Lamp 12 V - 10W	4	E Marking
	18 2010 44	Lamp 12 V - 10W	4	
6	DU 2010 16	Lens	4	
7	39 1225 15	Hex. Nut	4	

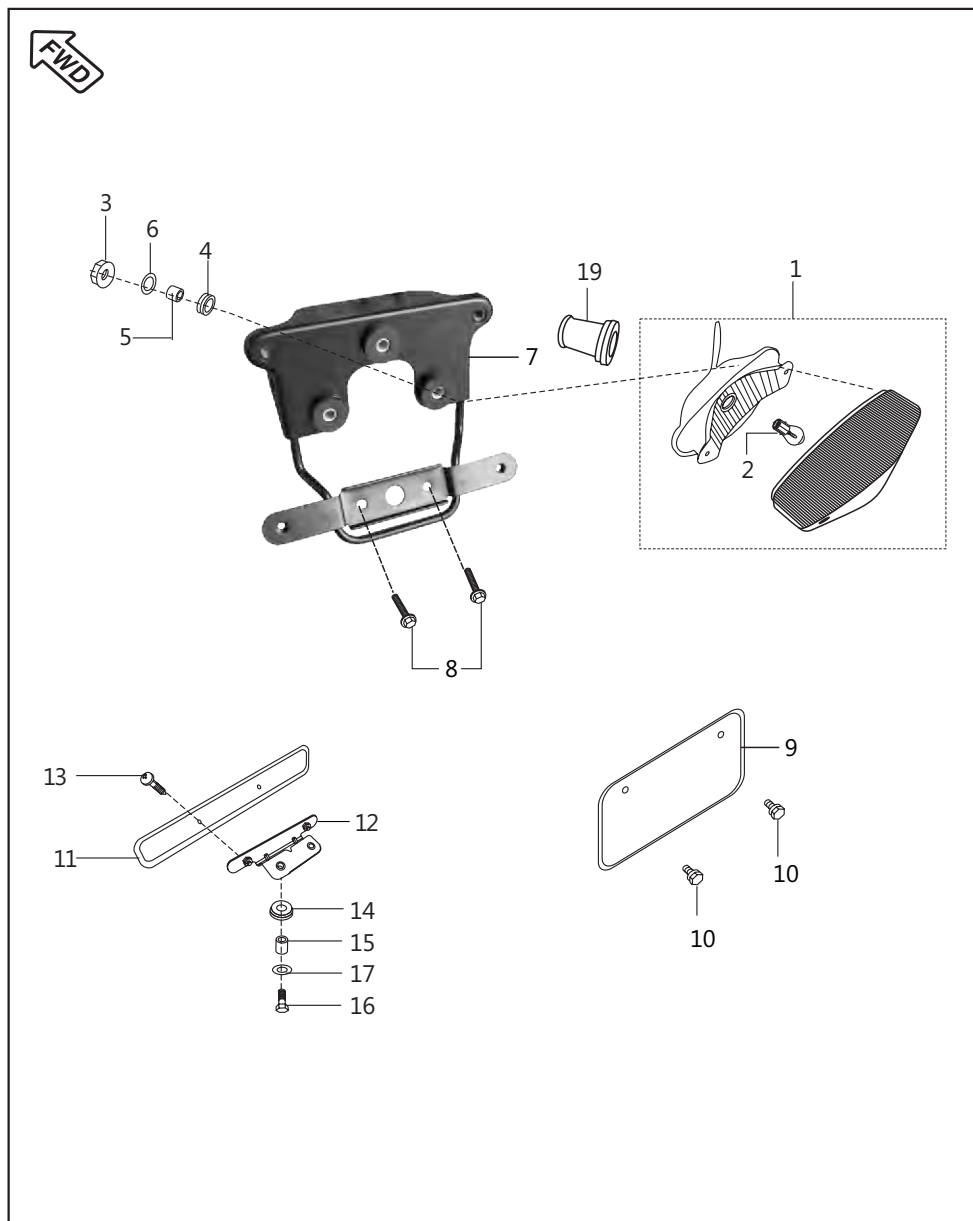


 Front Wheel Direction

Plate No.: 43

Tail Lamp Assy / Front Number Plate

No.	Part No.	Description	Qty	Remarks
1	DF 2011 38	Tail Light Assy. with lamp	1	
	PF 4010 05	Tail Light Assy. with lamp	1	E Marking
2	31 2010 28	Lamp 12 V, 10/5W	1	
	20 2010 29	Lamp 12 V, 21/5W	1	E Marking
3	39 2430 15	Hex Nut. / Flange	2	
4	DD 2010 11	Damper	2	
5	31 2010 01	Collar	2	
6	39 2429 11	Plain Washer	2	
7	PF 2314 01	Bracket Tail Light Assy	1	
8	39 1956 04	Bolt Flange Small (for No. Plate)	2	
9	DP 1611 45	Plate No. Rear Black	1	
10	39 2765 01	Screw Truss M6	2	
11	DP 1611 44	Number Plate Front	1	
12	DD 1811 76	Front No. Plate Mtg Bracket	1	
13	39 1783 01	Truss Screw Front No. Plate	2	
14	30 1810 60	Damper	2	
15	30 1810 61	Collar	2	
16	39 1553 04	Bolt Flange	2	
17	39 1211 11	Washer	2	
19	DM 2010 26	Boot	1	
20	30 2010 69	Reflector Reflex	1	N.I.
21	39 1972 15	Nut Hexagon with Flange M5	1	Reflector Mtg.

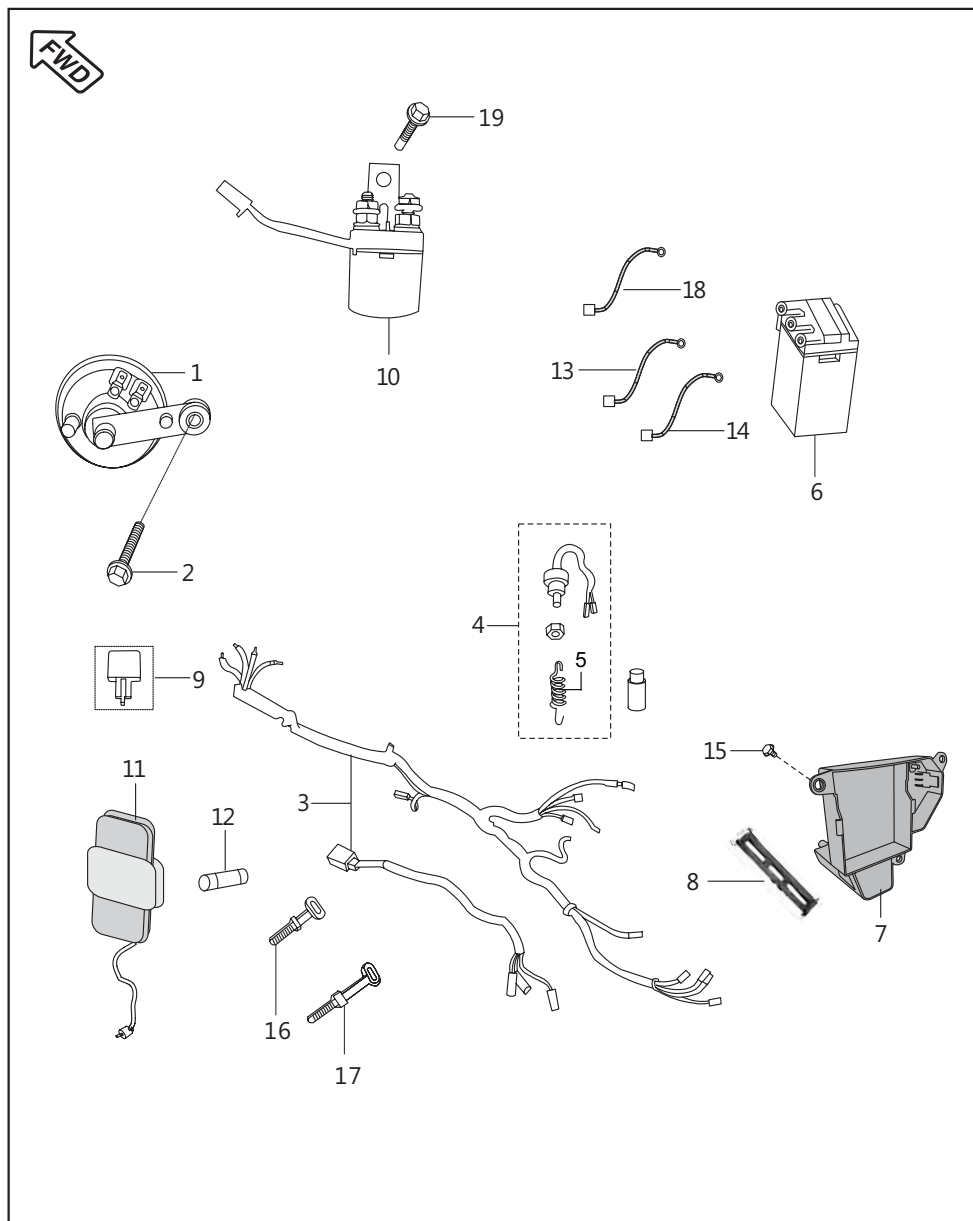


 Front Wheel Direction

Plate No.: 44


Electrical Equipments

No.	Part No.	Description	Qty	Remarks
1	JV 4016 02	DC Horn	1	With Grommet For Light Main Fuse Light & Main Fuse
2	39 1689 04	Flange Bolt (M8)	1	
3	PF 4022 00	Wiring Harness	1	
4	PF 4014 04	Rear Brake Switch	1	
5	PF 4014 03	Spring Brake Switch	1	
6	DS 2010 82	Battery 5 MF dry Charged	1	
7	JV 4018 01	Case Battery	1	
8	JA 4018 01	Band Battery	1	
9	DS 2010 25	Assly DC Flasher	1	
10	JK 3516 00	Starter Relay	1	
11	30 2011 04	Fuse Box Assly	2	
12	GF 2010 53	Fuse (10 Amp.)	2	
13	JV 4022 04	Starter Relay to Motor Relay	1	
14	JV 4022 05	Cable Assly. (Battery to Earth)	1	
15	39 1942 04	Bolt Flanged	1	
16	30 1910 48	Band	1	
17	30 2010 64	Band (Harness)	1	
18	DS 2010 22	Cable assly Battery to Starter Relay	1	

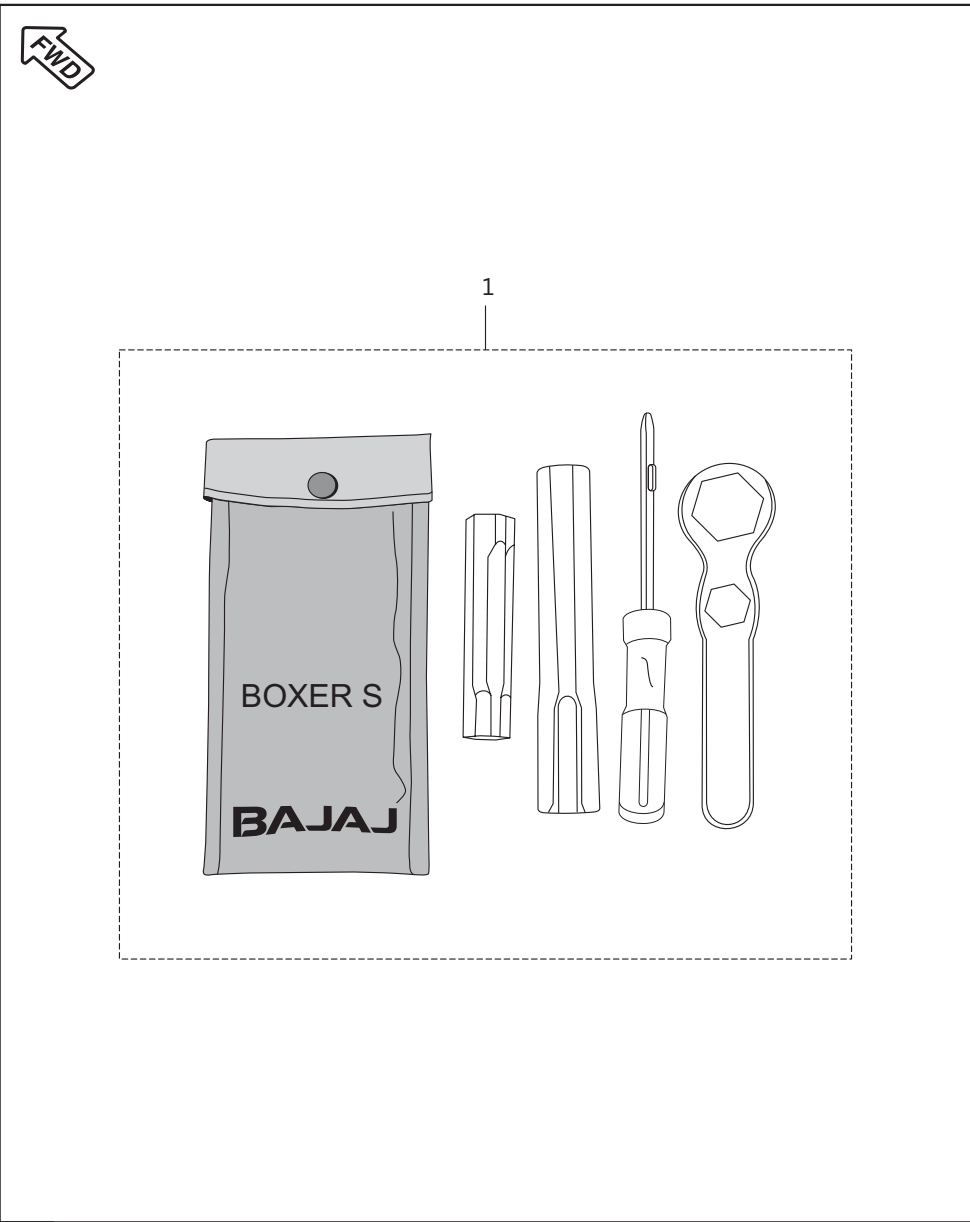

Tool Kit

No.	Part No.	Description	Qty	Remarks
1	DM 2210 13	Tool Kit	1	For Reference Only
		Screw Driven	1	
		Tool Wrench A/F 17 X 22	1	
		Spanner Box- 16 X 14	1	
		Tool Bar	1	

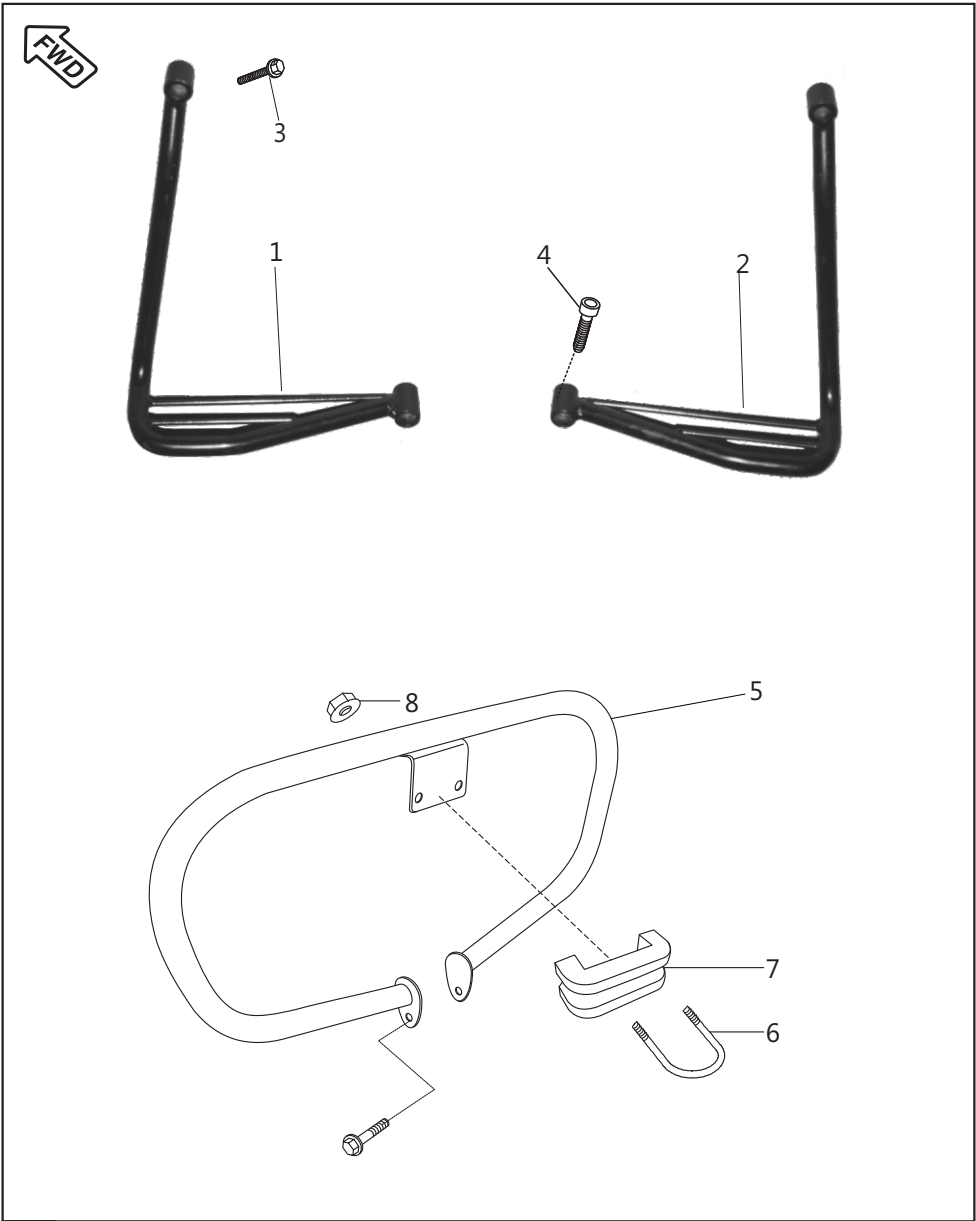

Accessories

No.	Part No.	Description	Qty	Remarks
1	PF 1130 08	Footrest Third LH	1	
2	PF 1130 09	Footrest Third RH	1	
3	39 1298 04	Screw Hex. Socket M8x1.25x35	2	
4	JB 2312 06	Bolt Socket Head	2	
5	PF 2312 01	Leg Guard	1	
6	JA 2312 01	Hook Leg Guard	1	
7	JA 2312 02	Spacer Leg Guard	1	
8	39 0798 15	Nut Hex with Falnge M6	2	

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1	36JZ0001	Valve Kit	JZ511200	Valve Intake	1
			JZ511201	Valve Exhaust	1
2	36JZ0004	Valve Repair Kit	39201719	Seat Valve Stem	2
			DG101029	Cotter Valve	2
			JA511203	Retainer Valve Spring	2
			28101129	Seat Valve Spring	2
			JZ511202	Spring Washer	2
3	36JE0003	Kit Guide Cam Chain	JW541012	Guide Cam Chain (Slack Side)	1
			JA521002	Guide Cam Chain (Tight Side)	1
4	36JZ0005	Piston Ring Set	JZ521204	Ring Piston Top	1
			JZ521205	Ring Piston Second	1
			JZ521206	Ring Piston Oil	1
5	36DU1007	Boss Kick Set	30101233	Boss Kit	1
			30101234	Spring	1
			30101236	Ball Steel	1
			30101235	Pin	1
			39085517	E - Type Clip	1
6	36PF0021	Kit Jet BM 150	JZ581234	Needle Jet	1
			JZ581219	Holder Needle Jet	1
			JZ581218	Jet Main	1
			JE581205	Jet Pilot	1
7	DH121169	Pilot Screw Kit	DH121131	Screw Adjuster	1
			DH121130	'O' - Ring	1
			DH121186	Spring Compr Coil	1
			DH121187	Plain Washer	1
			DH121188	'O' - Ring	1

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
8	36JZ0016	Idling Screw Kit	JZ581217	Screw Stop	1
			DH121130	'O' - Ring	1
			CB121044	Spring Compression	1
9	36PF0022	Kit Piston Valve BM 150	PF581206	Valve Piston	1
			DD121054	E-Ring	1
			JZ581211	Holder Assly Magnet	1
			DD121055	Spring Compression	1
			JZ581223	Packing	1
			PF581208	Jet Needle	1
			PF581207	Ring	1
10	36PF0024	Kit Carburetor Gasket/O Ring	JA581232	Gasket Float Chamber	1
			DH121130	'O' - Ring Idling Screw	2
			DH121088	O Ring Air Screw	2
			DH121118	'O' Ring Drain screw	1
			JA581238	'O' Ring TPS	1
11	36PF0023	Kit Choke Plunger BM 150	-	Plunger Assembly	1
			-	Guide Holder	1
			PF581205	Lever Assembly Choke	1
			DH121071	Cap	1
			Dd121058	Spring Choke Plunger	1
			CF121004	O Ring Choke Plunger	1
12	36314001	Bearing Cone Kit	DH181025	Bearing cone	1
			DH181026	Bearing race	1
			DH181024	Upper bearing race	1
13	36DS1801	Holder Handle Set	DS181019	Holder Handle	2
			DS181006	Holder Handle	2

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
14	36PF0010	Kit Chain Sprocket BM 150	DJ151086	Sprocket 43T - 4 Rubber	1
			JZ551004	Sprocket Drive (14T)	1
			JV141004	Chain 122 Link	1
15	36JZ0003	Set Primary Drive & Driven	JZ551403	Housing Complete Clutch HTTS	1
			JZ531006	Gear Primary Drive	1
16	36JZ0008	Starter Clutch Repair Kit	JA621411	Bush Spring Starter Clutch	5
			DH101163	Roller Clutch	5
			DH101164	Spring	5
			DJ101109	Bush For Spring Starter Clutch	5
17	36PF0009	Kit Friction Plate BM 150	JV551402	Plate Friction Clutch	5
18	36PF0002	Kit Block-Piston BM 150	PF521007	Assly Cylinder Block	1
			PF521205	Piston Assly	1
19	36JW0013	Leg Gaurd Hardware Kit	JA231201	Hook Leg Gaurd1	1
			JA231202	Leg Gaurd Spacer	1
			39079815	Nut Hexagon with Flange	2
20	36DS1401	Grommet Kit - Side Cover	DS141012	Grommet Side Cover Front	2
			DS161082	Grommet Side Cover Rear	2
21	36PF0011	Case Chain Kit	PF181202	Case Chain Upper Assly.	1
			Pf181200	Case Chain Lower Assly.	1
22	36DK0020	Kit Outer Tube	DJ181089	Seal Dust	2
			DJ181088	Stopper Seal Oil	2
			DS181072	Washer Guide Bush	2
			DS181070	Guide Bush	2

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
23	36DK0037	Kit Mirror Holder	39118415	Nut - Nylock :- M5 X 0.8	1
			DL191014	Stud - Lever Handle	1
			30191017	Nut	1
			39019811	Washer - Plain	1
			39072504	Bolt - Hexagon :- M6 X 1	1
24	36PF0083	Kit Tank Decal Arctic White	PF233105	Tank Decal LH Arctic White	1
			PF233106	Tank Decal RH Arctic White	1
25	36PF0084	Kit Side Cover Arctic White	PF233107	Cover Side Decal Lh Arctic White	1
			PF233108	Cover Side Decal Rh Arctic White	1

SPC Updation Details

Page no.	Fig. no.	Old part no.	New part no.	Description	Updation date	Remarks
60	1	DS151080	PF131012	WHEEL RIM FRONT	10.05.12	6 SPOKE WHEEL INTRODUCTION
60	4	DH151057	PF131222	WHEEL RIM REAR	10.05.12	6 SPOKE WHEEL INTRODUCTION
68	2	36JZ0026	36PF0010	KIT CHAIN SPROCKET	04.10.13	CORRECTION
48	1	PF111000	PF111074	FRAMEASSLY.	03.04.14	ALTERNATE UPDATION
52	1	PF113000	PF113020	MAINSTEPLH	03.04.14	ALTERNATE UPDATION
50	5	36PF0014	PF122022	SWING ARM COMPLETE	03.04.14	ALTERNATE UPDATION
50	5	36PF0014	56PF0219	SWING ARM COMPLETE	26.11.14	CORRECTION
8	4	DH101387	DK101386	SOC HEAD BOLT	28.01.15	MAIL BY MR GAURAV KHANNA
60	7	DS151047	PF131001	TYRE WITH TUBE FR	16.03.15	CORRECTION
60	8	DS151051	PF131210	TYRE WITH TUBE RR	16.03.15	CORRECTION
2	5	PF511027	PA511039	PLATE CLY HEAD	30.07.15	ALTERNATE UPDATION
50	5	52PF0219	PF122030	SWING ARM	01.10.2016	REF. CIR. IB-253
64	4	DS151060	DJ151034	SPACER	01.10.2016	REF. CIR. IB-253
10	1	JD521002	PF521014	GASKET CYLINDER BLOCK	01.10.16	REF. CIR. IB-253 FOR EGYPT
18	9	JZ561401	JZ561415	ASLY GEAR SHIFT LEVER	26.10.16	ALTERNATE UPDATION
50	3	-----	PF122028	REAR SHOCK ABSORBER	27.1016	For Congo, Burundi & Sierra Leone IB 257
10	3	36JZ0005	36PF0116	KIT PISTON RING	18.08.17	UPDATION (Modify)
32	20	-----	30121004	Ring - Snap	11.1.18	Addition
2	7	-----	DG121040	Clamp	15.05.18	Ref. Cir. IB 321
10	1	-----	JH521007	Gasket Cylinder Block	15.05.18	Ref. Cir. IB: 321
10	1	-----	PF521030	Gasket Cylinder Block	15.05.18	For Egypt Ref Cir IB-321
24	22	-----	LAE00005	Bolt Flanged	15.05.18	Ref. Cir. IB 321
36	2	-----	JE591002	Gasket Exhaust	15.05.18	Ref. Cir. IB 321
42	3	-----	KAED0625	Bolt-flange	15.05.18	Ref. Cir. IB 321
70	22	-----	DD161078	DAMPER	05.11.18	Addition

SPC Updation Details

Page no.	Fig. no.	Old part no.	New part no.	Description	Updation date	Interchan-geability	Remarks

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
14151021	10	64	30151105	19	62
14151033	23	24	30151105	8	64
14151033	15	28	30151105	18	66
15161069	2	90	30151105	17	68
16151066	7	58	30151116	16	62
18201044	5	96	30151118	25	62
20201029	2	98	30151118	20	64
22150241	4	30	30171022	10	52
24121069	14	32	30181009	11	76
24121365	7	32	30181009	11	78
30101142	4	24	30181025	4	76
30101195	11	26	30181025	4	78
30141031	3A	82	30181026	3	76
30151004	11	64	30181026	3	78
30151005	22	66	30181029	20	78
30151005	21	68	30181060	14	98
30151011	15	62	30181061	15	98
30151011	19	66	30191035	11	70
30151011	19	68	30191036	13	70
30151032	3	62	30191038	3	70
30151032	6	64	30191048	24	74
30151033	4	62	30191048	16	100
30151033	5A	64	30201064	17	100
30151035	17	62	30201069	20	54
30151035	23	64	30201069	20	98
30151038	13	62	30201104	11	100
30151038	13	64	31101173	3	12
30151038	21	66	31181099	18	76
30151038	20	68	31181099	18	78
30151041	21	62	31181102	20	76
30151069	18	62	31201001	5	98
30151069	9	64	31201028	2	98
30151069	17	66	31201081	5	22
30151069	16	68	35161060	18	94
30151075	14	66	36314001	3	48
30151075	13	68	36314005	3	48
30151095	20	70	39019811	5	70

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39019811	10	70	39079815	28	68
39021111	13	54	39079815	10	86
39024011	13	28	39079815	17	94
39024211	8	54	39079815	8	104
39024211	20	62	39080115	3	66
39024211	24	64	39080115	3	68
39029215	16	50	39080511	7	70
39032615	7	54	39080708	19	70
39042215	8	56	39080808	6	70
39042215	23	74	39081715	8	18
39045411	11	50	39084001	23	62
39055302	10	50	39084001	18	64
39059417	12	8	39084914	16	40
39069415	18	70	39090012	24	62
39070815	21	70	39093915	13	50
39071411	2A	50	39098308	6	84
39072211	19A	66	39098717	3	14
39072211	19A	68	39099206	2	16
39073212	19	64	39099311	5	30
39073817	6	30	39099906	12	22
39074701	9	22	39099906	24	24
39076101	2	82	39099906	4	38
39077504	9	62	39100006	2	10
39077504	15	64	39100006	6	20
39078111	6	62	39100006	11	22
39078408	12	52	39101321	25	64
39078912	8	50	39104119	3	24
39078912	17	70	39105411	7	84
39078912	13	76	39106204	9	32
39078912	13	78	39106504	2	26
39079415	6	66	39107404	12	72
39079415	9	68	39107404	13	94
39079708	3	56	39118101	14	76
39079708	8	70	39121111	4	44
39079815	11	62	39121111	17	98
39079815	17	64	39122515	7	96
39079815	23	66	39129804	3	104

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39130911	10	54	39197215	21	98
39150711	15	54	39198104	20	14
39150711	18	54	39201719	6	6
39154011	16	70	39214124	24	94
39155304	11	28	39217924	3	82
39155304	16	98	39219019	7	22
39155604	7	44	39220011	12	28
39155604	14	54	39222204	4	54
39156121	6	88	39223801	20	94
39167121	20	24	39224020	8	66
39167304	11	8	39224020	6	68
39167304	22	24	39229515	3	36
39167404	3	42	39231204	5	46
39167704	16	34	39234911	2B	50
39168904	2	100	39236615	7	50
39169801	9	54	39240817	12	30
39171519	4	22	39242911	6	98
39174004	10	20	39243015	3	98
39175904	17	22	39244704	25	66
39176511	19	94	39244704	23	68
39177304	13	34	39247304	11	54
39177902	15	34	39248104	13	52
39178301	13	98	39248415	8	82
39178924	5	84	39253921	8	4
39181304	14	78	39256220	2	22
39183911	8A	54	39256611	28	66
39188020	15	8	39256711	4	66
39190204	12	18	39256711	4	68
39194204	15	100	39256711	26	68
39194304	11	42	39258204	7	92
39194304	12	54	39258204	8	94
39194304	25	74	39260011	4	28
39195604	8	98	39265912	14	52
39197015	6	46	39266921	13	8
39197015	17	54	39268320	16	8
39197015	8	92	39268620	13	66
39197015	9	94	39268620	12	68

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39268720	16	66	36JZ0001	4	6
39268720	15	68	36JZ0003	7	12
39268820	1	62	36JZ0003	16	28
39268820	5	64	36JZ0004	5	6
39268820	7	64	36JZ0005	3	10
39270411	7	18	36JZ0008	6	40
39272204	5	36	36JZ0016	5	32
39272315	3	46	36PF0001	1	4
39275404	4	36	36PF0002	5	10
39276501	10	98	36PF0004	1	22
59040006	7	76	36PF0005	2	20
59040006	7	78	36PF0007	1	26
59040014	14	42	36PF0008	1	24
59040017	7	46	36PF0009	5	28
59040038	2	2	36PF0010	2	66
59040038	11	20	36PF0010	2	68
59040038	16	22	36PF0011	1	90
59040038	17	24	36PF0015	7	80
59040038	4	26	36PF0016	7	80
59110008	2B	12	36PF0017	7	80
59120003	2A	12	36PF0018	8	80
59150003	7	62	36PF0019	8	80
59150003	1	64	36PF0020	8	80
59150014	1	12	36PF0021	4	32
59200036	3	20	36PF0022	12	32
59200036	3	22	36PF0023	19	32
59210023	18	22	36PF0024	13	32
59210024	17	14	36PF0025	1	36
06201083	5	96	36PF0083	7	80
36DK0020	2	76	36PF0084	8	80
36DK0020	2	78	52JA0027	9	20
36DK0037	27	74	52JA0029	12	20
36DS1401	1	84	52PF0219	5	50
36DS1502	22	64	52PF0500	5	80
36DS1801	13	72	52Pf0501	4	80
36DU1007	3	30	52PF0503	6	80
36JE0003	6	8	52PF0505	3	80

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
CB101114	2	36	DH101380	17	40
CB121042	8	32	DH101380	4	42
CF111019	7	42	DH101387	4	8
CL201023	9	92	DH101388	15	24
CL201023	10	94	DH101388	7	26
CL201042	7	86	DH101392	7	8
CS101128	9	8	DH101509	10	18
DD101062	10	8	DH101607	8	36
DD101097	13	30	DH101648	14	28
DD111011	9	42	DH101781	2	40
DD111012	10	42	DH101784	6	22
DD111018	7	42	DH121038	7	4
DD111048	8	42	DH121038	14	34
DD121181	19	24	DH121169	3	32
DD151009	12	62	DH151029	15	70
DD151009	14	64	DH151057	2	60
DD161078	22	70	DH161066	6	56
DD181176	12	98	DH161121	4	56
DD191142	15	72	DH161145	11	56
DD191147	11	72	DH161146	10	56
DD201011	4	98	DH161194	5	52
DD201170	28	74	DH161283	3	90
DE181033	17	78	DH171019	29	66
DF161102	7	56	DH171019	27	68
DF161413	4	52	DH181014	5	48
DF161426	17	34	DH191037	8	86
DF191020	2	54	DJ141008	8	84
DF201138	1	98	DJ151033	11	66
DG101029	3	6	DJ151033	11	68
DG101339	11	18	DJ151034	4	64
DG101418	7	24	DJ151035	5	66
DG121040	7	2	DJ151035	5	68
DG151022	10	58	DJ151036	14	50
DG161121	2	84	DJ151037	15	50
DG161124	9	56	DJ151041	8	62
DH101048	5	8	DJ151047	17	50
DH101380	8	20	DJ151053	1	68

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DJ181042	21	76	DS101117	8	30
DJ181042	22	78	DS101154	6	12
DJ181043	23	76	DS101215	8	24
DJ181043	24	78	DS101276	3	8
DJ181085	24	76	DS109905	14	8
DJ181085	25	78	DS121126	7	34
DJ181087	2A	76	DS141009	1	82
DJ181087	2A	78	DS141013	7	82
DJ181115	4	48	DS151003	1	58
DJ191054	6	72	DS151004	5	58
DJ191081	6	72	DS151005	6	58
DJ191083	5	72	DS151009	8	58
DJ201051	3	94	DS151010	9	58
DJ221003	3	72	DS151034	3	58
DJ221004	4	72	DS151056	3	64
DK101386	4	8	DS151060	5	62
DK141028	6A	82	DS151060	4	64
DK141041	10	82	DS151067	15	66
DK151094	12	66	DS151068	9	66
DK151094	14	68	DS151068	7	68
DL181009	23	94	DS151069	18	68
DL181010	25	94	DS151073	10	66
DM201026	19	98	DS151073	8	68
DM201027	1	96	DS151074	7	66
DM201028	2	96	DS151074	10	68
DM201029	3	96	DS151076	20	66
DM201030	4	96	DS151080	1	60
DM221013	1	102	DS161150	12	26
DP101165	4	10	DS181005	20	74
DP121025	7	2	DS181005	10	76
DP121025	8	34	DS181005	10	78
DP161144	11	98	DS181007	18	72
DP161145	9	98	DS181008	19	72
DP161163	11	52	DS181009	21	74
DP161170	8	52	DS181010	22	74
DP171006	6	50	DS181012	19	76
DP211009	8	44	DS181012	19	78

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DS181015	8	76	FD211006	2	44
DS181015	8	78	FD211007	3	44
DS181016	9	76	GF201053	12	100
DS181016	9	78	JA113201	2	56
DS181018	2	48	JA113202	5	56
DS181020	12	76	JA113402	2	46
DS181020	12	78	JA113403	4	46
DS181022	2	72	JA121003	12	50
DS181070	26	78	JA131603	2	62
DS181072	27	78	JA131605	14	62
DS181084	6	76	JA131605	12	64
DS181084	6	78	JA131606	22	62
DS191018	14	72	JA131606	26	64
DS191035	4	70	JA131607	10	62
DS191038	26	74	JA131607	16	64
DS191052	7	72	JA231201	6	104
DS201019	4	92	JA231202	7	104
DS201019	5	94	JA351602	10	40
DS201020	5	92	JA351606	8	40
DS201020	6	94	JA351608	11	40
DS201021	6	92	JA351609	12	40
DS201021	7	94	JA351618	13	40
DS201022	18	100	JA351619	15	40
DS201025	9	100	JA351624	14	40
DS201082	6	100	JA351626	8	40
DU101213	19	14	JA351627	10	40
DU161102	3	84	JA401801	8	100
DU181021	1	72	JA511008	4	2
DU191003	17	72	JA511011	6	2
DU191009	8	72	JA511011	9	34
DU201016	6	96	JA511028	2	4
DU201029	3	92	JA511211	1	6
DU201029	4	94	JA511216	2	8
DX151022	27	66	JA521015	6	10
DX151022	25	68	JA531012	8	12
DX191009	5	72	JA531015	9	12
FD101078	3	38	JA541005	8	22

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JA541005	9	26	JA581406	5	4
JA541010	5	20	JA621001	7	30
JA541011	4	20	JA621002	9	30
JA541012	13	20	JA621006	11	30
JA541016	2	38	JA621201	1	30
JA541028	13	42	JA621206	2	30
JA541034	10	22	JA621402	4	40
JA541205	3	26	JA621406	5	40
JA541211	11	24	JA621410	3	40
JA541212	16	24	JA621414	1	40
JA541216	14	24	JB113005	6	36
JA541221	8	26	JB122003	9	50
JA541225	12	24	JB122016	1	50
JA541233	10	26	JB131017	1A	64
JA541236	9	24	JB131018	2	64
JA541237	10	24	JB151012	15	94
JA551002	4	14	JB151013	16	94
JA551004	7	14	JB161002	12	70
JA551008	15	14	JB181220	4	90
JA551009	16	14	JB231206	4	104
JA551406	3	28	JB401400	9	72
JA551414	6	28	JB401409	10	72
JA551415	8	28	JB531021	10	12
JA551419	7	28	JB581001	10	34
JA561002	3	16	JB581202	10	32
JA561207	4	18	JB581204	11	32
JA561208	5	18	JD511010	3	2
JA561209	6	18	JD521002	1	10
JA581005	3	34	JD541000	19	22
JA581006	4	34	JD551400	2	28
JA581009	5	34	JD561004	6	16
JA581011	12	34	JD561011	4	16
JA581012	6	34	JE531001	5	12
JA581221	6	32	JE541008	14	30
JA581223	2	32	JE551401	6	24
JA581291	18	32	JE591002	2	36
JA581314	15	32	JG571024	13	22

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JH521007	1	10	JZ511016	3	4
JK113008	9	52	JZ511021	1	2
JK351600	10	100	JZ511203	2	6
JK541212	13	24	JZ551004	18	14
JK541213	6	26	JZ551204	14	14
JK541214	2	24	JZ551205	13	14
JK541214	13	26	JZ561002	7	16
JN131812	19	62	JZ561401	9	18
JN131812	8	64	JZ561415	9	18
JN131812	18	66	JZ581216	17	32
JN131812	17	68	JZ581220	16	32
JN141002	1	66	JZ621000	10	30
JN402000	12	42	KADF0820	16	54
JV161014	9	70	KADF0822	2	52
JV171001	4	84	KAED0625	3	42
JV181408	5	54	LAC00021	5	44
JV181410	6	54	LAD00011	9	40
JV191001	1	44	LAE00005	22	24
JV351204	5	42	LAE00015	14	20
JV401602	1	100	LBD00001	21	64
JV401801	7	100	LCA00001	3	68
JV402204	13	100	LDB00002	4	68
JV402205	14	100	LJA00004	14	22
JV521003	8	8	PA121041	17	76
JV541006	15	22	PA511039	5	2
JV541205	21	24	PF111000	1	48
JV541208	5	24	PF113000	1	52
JV541209	18	24	PF113001	3	52
JV541212	5	26	PF113002	6	52
JW122004	14	70	PF113003	7	52
JW131601	24	66	PF113008	1	104
JW131601	22	68	PF113009	2	104
JW181229	14	94	PF113202	1	56
JW561206	2	18	PF113402	1	46
JW561208	3	18	PF121012	1	76
JZ401405	10	72	PF121015	25	76
JZ511004	1	8	PF121016	26	76

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
PF121017	5	76	PF171803	9	82
PF121017	5	78	PF181209	1	80
PF121018	15	76	PF181209	22	94
PF121018	15	78	PF181211	21	94
PF121019	16	76	PF181404	1	54
PF121019	16	78	PF181404	2	80
PF121024	27	76	PF181408	3	54
PF121024	21	78	PF181410	19	54
PF121025	12	94	PF191000	1	44
PF121026	1	78	PF231201	5	104
PF121028	22	76	PF231401	7	98
PF121028	23	78	PF231405	6	44
PF122005	3	50	PF232601	2A	72
PF122023	18	50	PF232601	5	82
PF122024	19	50	PF351003	1	42
PF122028	3	50	PF351004	2	42
PF122030	5	50	PF351201	6	42
PF131001	2	58	PF351600	7	40
PF131001	3	60	PF401000	1	92
PF131012	1	60	PF401000	1	94
PF131208	26	66	PF401005	1	98
PF131208	24	68	PF401007	1	92
PF131210	4	58	PF401007	2	94
PF131210	4	60	PF401009	2	92
PF131222	2	60	PF401009	11	94
PF131228	14	66	PF401403	5	100
PF131228	13	68	PF401404	4	100
PF131614	15	66	PF401408	16	72
PF161001	2	70	PF401417	16	72
PF161002	1	70	PF402200	3	100
PF161208	3	88	PF402400	1	86
PF161209	4	88	PF402401	2	86
PF161211	1	88	PF402402	4	86
PF161212	2	88	PF402403	6	86
PF161213	5	88	PF402404	9	86
PF161217	1	88	PF402405	3	86
PF171802	4	82	PF402406	5	86

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
PF402600	6	82	PF71013E	3	80
PF501004	1	20	PF71013F	3	80
PF511021	8	2	PF7101X3	3	80
PF521014	1	10	PF72012D	2	80
PF521030	1	10	PF72013E	2	80
PF531000	4	12	PF72013F	2	80
PF541018	7	20	PF7201X3	2	80
PF551002	1	14	PF73012D	5	80
PF551003	8	14	PF73013E	5	80
PF551200	6	14	PF73013F	5	80
PF551201	5	14	PF7301X3	5	80
PF551202	2	14	PF73022D	4	80
PF551203	10	14	PF73023E	4	80
PF551204	11	14	PF73023F	4	80
PF551205	12	14	PF7302X3	4	80
PF551206	9	14	PF74012D	6	80
PF551403	1	28	PF74013E	6	80
PF551405	9	28	PF74013F	6	80
PF551406	10	28	PF7401X3	6	80
PF561000	1	16			
PF561002	5	16			
PF561200	1	18			
PF571000	1	38			
PF571001	5	38			
PF581002	2	34			
PF581003	1	34			
PF581019	11	34			
PF581200	1	32			
PF581401	4	4			
PF581402	6	4			
PF591017	1	36			
PF591043	9	36			
PF591045	7	36			
PF591059	1	36			
PF591065	1	36			
PF591079	1	36			
PF71012D	3	80			

Parts Index

Part Number	Figure No.	Page No.

Part Number	Figure No.	Page No.

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.